Instruction Manual

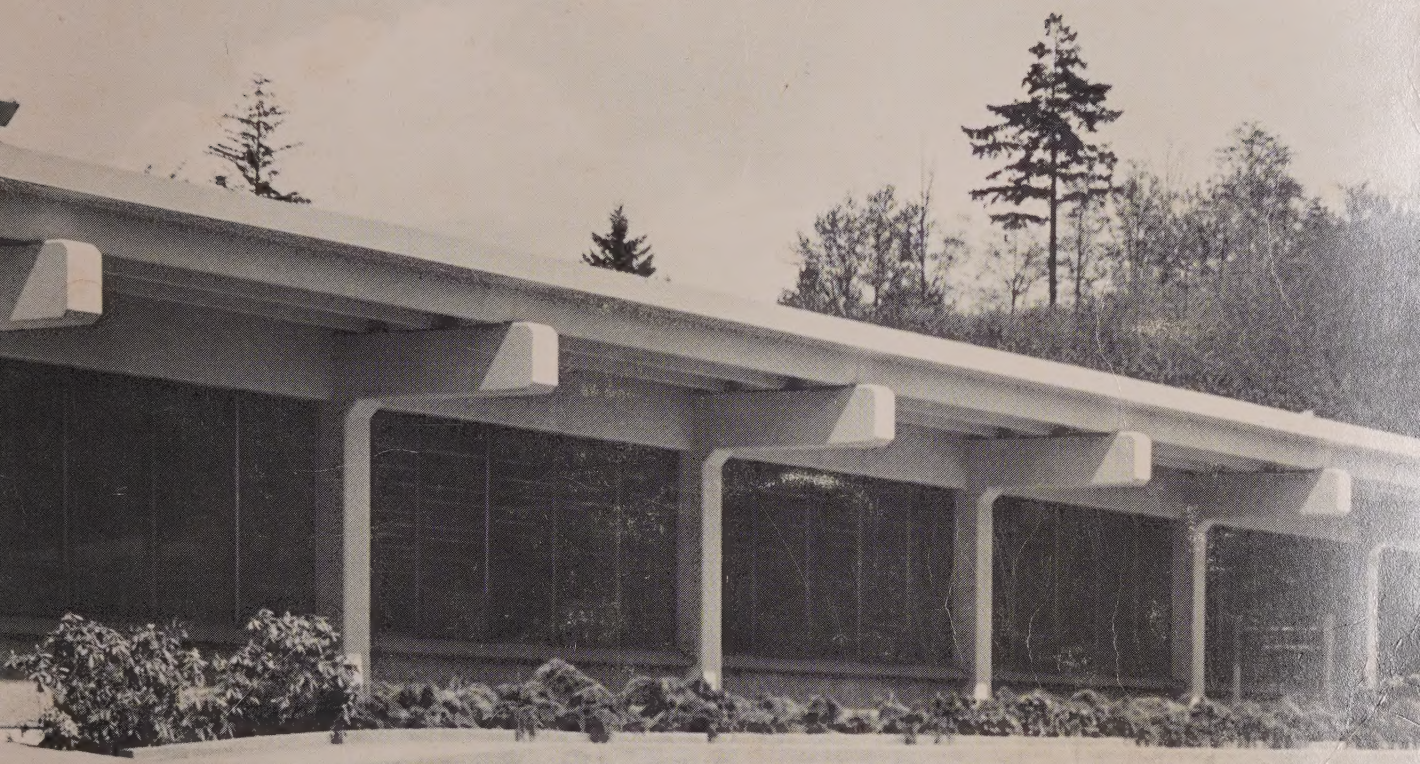

[redacted]

FLUKE®

JOHN FLUKE mfg. co., inc.

SEATTLE, WASHINGTON

JOHN FLUKE MFG. CO., INC.
P. O. Box 43210
Mountlake Terrace, Washington 98043

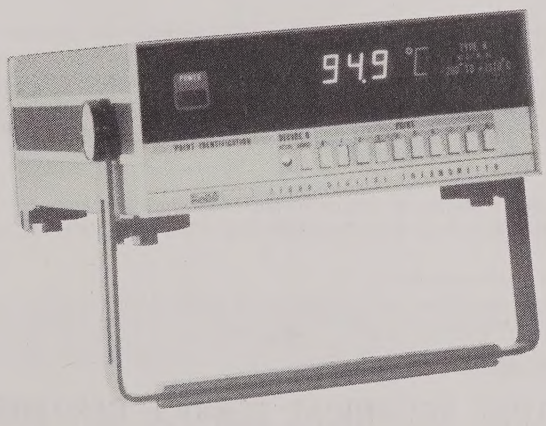

MODEL
2100A
DIGITAL THERMOMETER

Rev. 11-75

4 pages Crater sheets

397075

JULY, 1975

WARRANTY

The JOHN FLUKE MFG. CO., INC.* warrants each instrument manufactured by them to be free from defects in material and workmanship. Their obligation under this Warranty is limited to servicing or adjusting an instrument returned to the factory for that purpose, and to making good at the factory any part or parts thereof; except tubes, fuses, choppers and batteries, which shall, within one year after making delivery to the original purchaser, be returned by the original purchaser with transportation charges prepaid, and which upon their examination shall disclose to their satisfaction to have been thus defective. If the fault has been caused by misuse or abnormal conditions of operations, repairs will be billed at a nominal cost. In this case, an estimate will be submitted before work is started, if requested.

If any fault develops, the following steps should be taken:

1. Notify the John Fluke Mfg. Co., Inc.,* giving full details of the difficulty, and include the Model number, type number, and serial number. On receipt of this information, service data or shipping instructions will be forwarded to you.

2. On receipt of the shipping instructions, forward the instrument prepaid, and repairs will be made at the factory. If requested, an estimate will be made before the work begins, provided the instrument is not covered by the Warranty.

"The foregoing warranty is in lieu of all other warranties, express or implied, including but not limited to, any implied warranty of merchantability, fitness or adequacy for any particular purpose or use. Fluke shall not be liable for any special, incident or consequential damages."

SHIPPING

All shipments of John Fluke Mfg. Co., Inc.* instruments should be made via United Parcel Service or "Best Way"** prepaid. The instrument should be shipped in the original packing carton; or if it is not available, use any suitable container that is rigid. If a substitute container is used, the instrument should be wrapped in paper and surrounded with at least four inches of excelsior or similar shock-absorbing material.

CLAIM FOR DAMAGE IN SHIPMENT

The instrument should be thoroughly inspected immediately upon receipt. All material in the container should be checked against the enclosed packing list. The manufacturer will not be responsible for shortages against the packing sheet unless notified immediately. If the instrument fails to operate properly, or is damaged in any way, a claim should be filed with the carrier. A full report of the damage should be obtained by the claim agent, and this report should be forwarded to John Fluke Mfg. Co., Inc.* Upon receipt of this report, you will be advised of the disposition of the equipment for repair or replacement. Include the model number, type number, and serial number when referring to this instrument for any reason.

The John Fluke Mfg. Co., Inc.* will be happy to answer all application questions which will enhance your use of this instrument. Please address your requests to: JOHN FLUKE MFG. CO., INC., P. O. Box 7428, SEATTLE, WASHINGTON 98133*.

* For European customers: FLUKE (Nederland) B.V.
Ledeboerstraat 27
Tilburg, Netherlands

**For European customers, Air Freight prepaid.

FLUKE TECHNICAL SERVICE CENTERS

Fluke Western Technical Center
Mike Nagy, Service Manager
2020 North Lincoln St.
Burbank, CA 91504
Tel. 213-849-4641
TWX: 910-497-2086

Fluke Western Technical Center
Tom Marshall, Service Manager
4805 Mercury St.
San Diego, CA 92111
Tel. 714-565-4455
TWX: 910-337-1273

Fluke Western Technical Center
Attn: Tom Marshall
2359 De La Cruz Blvd
Santa Clara, CA 95050
Tel. 408-244-1505
TWX: 910-338-0121

Fluke S.W. Technical Center
Mel Suelzle, Service Manager
Unit 4
1980 South Quebec Street
Denver, CO 80231
Tel. 303-750-1228

Fluke S.E. Technical Center
Jesse Morse, Service Manager
P.O. Box 6578
940 North Fern Creek Avenue
Orlando, FL 32803
Tel. 305-896-2296
TWX: 810-850-0185

Fluke Midwestern Tech Center
Bruce Hunt, Service Manager
1287 North Rand Road
Des Plaines, IL 60016
Tel. 312-298-7470
TWX: 910-233-4978

Fluke Mideastern Tech Center
John Hines, Service Manager
11501 Huff Court
Kensington, MD 20795
Tel. 301-881-5300
TWX: 710-825-9645

Fluke N.E. Technical Center
Dick Zemba, Service Manager
109 Massachussetts Ave.
Lexington, MA 02173
Tel. 617-861-8620
TWX: 710-826-1715

Fluke Midwestern Tech Center
Robert Wayne, Service Mgr.
10800 Lyndale Avenue South
Minneapolis, MN 55420
Tel. 612-884-4541
TWX: 910-576-3141

Fluke Eastern Technical Center
Bernard Ciongoli, Service Mgr.
101 Berkshire Ave.
Paterson, NJ 07502
Tel. 201-742-3215
TWX: 710-988-5945

Fluke Eastern Technical Center
Frank Forte, Service Manager
4515 Culver Road
Rochester, NY 14622
Tel. 716-342-6940
TWX: 510-253-6145

Fluke S.E. Technical Center
Dwain Cox, Service Manager
P.O. Box 9619
1310 Beaman Place
Greensboro, NC 27408
Tel. 919-273-1918
TWX: 510-925-1173

John Fluke Mfg. Co., Inc.
Bill Fetrow, Tech. Services Spvr.
7001 - 220th S.W.
Mountlake Terrace, WA 98043
Tel. 206-774-2238
TWX: 910-449-2850

Fluke Canadian Technical Center
Tony Unser, Service Manager
640 11th Ave. S.W.
Calgary, Alberta
Tel. 403-261-0780
TWX: 610-821-2233

Fluke Canadian Technical Center
Herb Duval, Service Manager
6427 Northam Drive
Mississauga, Ontario
Tel. 416-678-1500
TWX: 610-492-2119

Rev. 5/75

CERTIFICATE of CALIBRATION

The John Fluke Mfg. Co., Inc. does hereby certify that this instrument meets or exceeds all published specifications and has been calibrated using standards whose accuracies are traceable to the National Bureau of Standards within the limitations of the Bureau's calibration services, or have been derived from accepted values of natural physical constants, or have been derived by the ratio type of self-calibration techniques.

JOHN FLUKE MFG. CO., INC. FLUKE METROLOGY SYSTEMS SEAL OF CERTIFIED CALIBRATION SEATTLE, WASHINGTON

Applicable NBS Test Reports:
DC Voltage – 207627
AC Voltage – 807675
Resistance – 207693

Welton V. Fetrow
STANDARDS ENGINEER

Thomas B. Smith
MANAGER QUALITY ASSURANCE

COMPLETE AND RETURN THIS CARD TO ASSURE YOUR WARRANTY

Postage Will Be Paid By Addressee

No Postage Stamp Necessary If Mailed in the United States

BUSINESS REPLY MAIL
FIRST CLASS PERMIT No. 72 - MOUNTLAKE TERRACE, WASHINGTON

JOHN FLUKE MFG. CO., INC.

P. O. BOX 43210

MOUNTLAKE TERRACE. WASHINGTON 98043

Attn: Customer Service Dept.

FLUKE WARRANTY VALIDATION FORM

To assure validation of your warranty, please complete this form and return to John Fluke Mfg. Co., Inc.

MODEL _____ SERIAL NUMBER _____ PURCHASE DATE _____

What influenced you to buy this Fluke product? ☐ Advertising ☐ Contact by local salesman ☐ Other (specify) _____

Have you had previous experience with Fluke instruments? ☐ Yes ☐ No

Did you buy this Fluke product to: ☐ Replace existing equipment ☐ Expand your instrumentation capability

Other (specify) _____

Did you examine comparable products manufactured by other companies before deciding on Fluke? ☐ Yes ☐ No

When you received your instrument, was it in good physical condition? ☐ Yes ☐ No

Did it perform properly on initial operation? ☐ Yes ☐ No If no, what symptoms were present? _____

Have you owned or used Fluke products prior to this purchase? ☐ Yes ☐ No If yes, how do you rate Fluke products?

	Poor	Adequate	Superior		Poor	Adequate	Superior
Performance	☐	☐	☐	Useability	☐	☐	☐
Reliability	☐	☐	☐	Serviceability	☐	☐	☐

NAME _____ COMPANY _____

YOUR COMPANY'S PRODUCT OR SERVICE _____

STREET _____ CITY _____ STATE _____ ZIP _____ COUNTRY _____

(if outside US)

FORM NO. A773 - Rev. 2 - 2/75

CERTIFICATE of CALIBRATION

The John Fluke Mfg. Co., Inc. does hereby certify that this instrument meets or exceeds all published specifications and has been calibrated using standards whose accuracies are traceable to the National Bureau of Standards within the limitations of the Bureau's calibration services, or have been derived from accepted values of natural physical constants, or have been derived by the ratio type of self-calibration techniques.

JOHN FLUKE MFG. CO., INC. METROLOGY SYSTEMS FLUKE SEAL OF CERTIFIED CALIBRATION SEATTLE, WASH.

Applicable NBS Test Reports:
DC Voltage – 207627
AC Voltage – 807675
Resistance – 207693

Wilbur V. Fetrow
STANDARDS ENGINEER

Thomas B. Smith
MANAGER QUALITY ASSURANCE

COMPLETE AND RETURN THIS CARD TO ASSURE YOUR WARRANTY

Postage Will Be Paid By Addressee

No Postage Stamp Necessary If Mailed in the United States

BUSINESS REPLY MAIL
FIRST CLASS PERMIT No. 72 - MOUNTLAKE TERRACE, WASHINGTON

JOHN FLUKE MFG. CO., INC.

P. O. BOX 43210

MOUNTLAKE TERRACE. WASHINGTON 98043

Attn: Customer Service Dept.

FLUKE WARRANTY VALIDATION FORM

To assure validation of your warranty, please complete this form and return to John Fluke Mfg. Co., Inc.

MODEL _____ SERIAL NUMBER _____ PURCHASE DATE _____

What influenced you to buy this Fluke product? ☐ Advertising ☐ Contact by local salesman ☐ Other (specify) _____

Have you had previous experience with Fluke instruments? ☐ Yes ☐ No

Did you buy this Fluke product to: ☐ Replace existing equipment ☐ Expand your instrumentation capability

Other (specify) _____

Did you examine comparable products manufactured by other companies before deciding on Fluke? ☐ Yes ☐ No

When you received your instrument, was it in good physical condition? ☐ Yes ☐ No

Did it perform properly on initial operation? ☐ Yes ☐ No If no, what symptoms were present? _____

Have you owned or used Fluke products prior to this purchase? ☐ Yes ☐ No If yes, how do you rate Fluke products?

	Poor	Adequate	Superior		Poor	Adequate	Superior
Performance	☐	☐	☐	Useability	☐	☐	☐
Reliability	☐	☐	☐	Serviceability	☐	☐	☐

NAME _____ COMPANY _____

YOUR COMPANY'S PRODUCT OR SERVICE _____

STREET _____ CITY _____ STATE _____ ZIP _____ COUNTRY _____

(if outside US)

FORM NO. A773 - Rev. 2 - 2/75

Table of Contents

SECTION	TITLE	PAGE
1	INTRODUCTION AND SPECIFICATIONS	1-1
	1-1. INTRODUCTION	1-1
	1-14. SPECIFICATIONS	1-3
2	OPERATING INSTRUCTIONS	2-1
	2-1. INTRODUCTION	2-1
	2-3. SHIPPING INFORMATION	2-1
	2-6. INPUT POWER	2-1
	2-9. RACK/PANEL INSTALLATION	2-1
	2-11. OPERATING FEATURES	2-1
	2-13. OPERATING NOTES	2-5
	2-15. AC Line Connection	2-5
	2-17. Fuse Replacement	2-5
	2-19. Open Inputs	2-5
	2-21. OPERATION	2-5
	2-22. Models 2100A–03 and 2100A–10	2-5
	2-24. Model 2100A–06	2-6
	2-26. Model 2100A/Model 2150A Set	2-6
3	THEORY OF OPERATION	3-1
	3-1. INTRODUCTION	3-1
	3-3. OVERALL FUNCTIONAL DESCRIPTION	3-1
	3-5. Thermocouple	3-2
	3-8. Cold Junction Compensation	3-2
	3-10. Buffer Amplifier	3-2
	3-12. A/D Converter	3-2
	3-16. Linearizer	3-3
	3-19. Display	3-3
	3-21. CIRCUIT ANALYSIS	3-3
	3-22. Reference Junction Compensation	3-3
	3-25. Buffer Amplifier	3-4
	3-29. A/D Converter	3-5
	3-33. Linearizer	3-6
	3-48. Summary of Linearizer Operation	3-7

(continued on page ii)

TABLE OF CONTENTS, *continued*

SECTION	TITLE	PAGE
4	MAINTENANCE	4-1
	4-1. INTRODUCTION	4-1
	4-4. GENERAL MAINTENANCE	4-1
	4-7. Cleaning	4-2
	4-9. Fuse Replacement	4-2
	4-11. Service Tools	4-2
	4-13. OPERATIONAL EVALUATION	4-2
	4-16. CALIBRATION	4-2
	4-18. Power Supply Adjustments	4-2
	4-20. Zero Adjustment	4-3
	4-22. Equipment Preparation for Calibration	4-3
	4-25. Comparator Adjustment (COMP ADJ)	4-5
	4-27. Positive Full Scale Adjustment (POS CAL)	4-5
	4-29. Negative Full Scale Adjustment (NEG CAL)	4-6
	4-31. Linearized Gain Check	4-6
	4-33. Open Input Detector Circuit Check	4-7
	4-35. Reference Junction Calibration	4-7
	4-40. TROUBLESHOOTING	4-10
5	LISTS OF REPLACEABLE PARTS	5-1
	5-1. INTRODUCTION	5-2
	5-4. HOW TO OBTAIN PARTS	5-2
6	OPTIONS AND ACCESSORY INFORMATION	6-1
	6-1. INTRODUCTION	6-1
	6-3. CARRYING CASE (C81)	6-1
	6-5. FRONT PANEL COVER (M03-203-700)	6-1
	6-7. INSTRUMENT MOUNTING KITS	6-1
	6-8. Introduction	6-1
	6-10. Installation Procedures	6-1
	6-16. THERMOCOUPLE PROBES	6-4
	6-19. THERMOCOUPLE TYPE CONVERSION KIT (2100A- – – K)	6-4
	6-20. Introduction	6-4
	6-22. Installation	6-4
	6-24. FAHRENHEIT TO CELSIUS CONVERSION KIT (F2CK)	6-4
	6-25. Introduction	6-4
	6-27. Installation	6-4
	6-29. MULTI-POINT SELECTOR SWITCH (2100A-10K)	6-5
	6-30. Introduction	6-5
	6-32. Installation	6-5
	6-34. OPTION –01 BATTERY PACK	6-6
	6-35. Introduction	6-6
	6-37. Option –01 Operation	6-6
	6-43. Option –01 Theory of Operation	6-6
	6-45. Option –01 Installation	6-6
	6-47. Option –01 Battery Replacement	6-7

(continued on page iii)

TABLE OF CONTENTS, *continued*

SECTION		TITLE	PAGE
	6-49.	OPTION –02 DIGITAL OUTPUT UNIT	6-8
	6-50.	Introduction	6-8
	6-52.	Option –02 Specifications	6-8
	6-54.	Option –02 Operation	6-8
	6-59.	Option –02 Theory of Operation	6-9
	6-68.	Option –02 Installation	6-11
	6-70.	2150A MULTI-POINT SELECTOR SWITCH	6-12
	6-71.	Introduction	6-12
	6-73.	Connection for Operation	6-12
	6-78.	Operational Evaluation	6-14
	6-80.	Calibration	6-14
7		GENERAL INFORMATION	7-1
8		SCHEMATIC DIAGRAMS	8-1

List of Illustrations

FIGURE	TITLE	PAGE
1-1.	Overall Dimensions	1-5
2-1.	Front Panel Controls and Indicators (Sheet 1 of 2)	2-2
2-1.	Front Panel Controls and Indicators (Sheet 2 of 2)	2-3
2-2.	Rear Panel Connectors	2-4
2-3.	Line Fuse Location	2-5
3-1.	2100A Block Diagram	3-1
3-2.	Thermocouple Connection	3-2
3-3.	Temperature/Millivolt For Thermocouples	3-3
3-4.	Dual-Slope A/D Conversion	3-3
3-5.	Reference Junction Compensation Circuit	3-4
3-6.	Buffer Amplifier Circuit	3-4
3-7.	A/D Converter Circuit Diagram	3-5
3-8.	Linearizer Timing Example	3-7
4-1.	Test Equipment Connection for Power Supply Adjustment	4-3
4-2.	Linearizer and Reference Junction Jumper Locations	4-4
4-3.	Calibration Equipment Connection	4-4
4-4.	Test Equipment Connection For Reference Junction Adjustment	4-8
4-5.	Troubleshooting Waveforms	4-11
5-1.	Basic Unit Assembly	5-6
5-2.	Basic PCB Assembly	5-14
5-3.	Display PCB Assembly	5-16
5-4.	Power Supply PCB Assembly	5-18
5-5.	Single Input Configuration	5-23

(continued on page v)

LIST OF ILLUSTRATIONS, *continued*

FIGURE	TITLE	PAGE
5-6.	Single Type PCB Assembly	5-23
5-7.	Multi-Type Configuration	5-25
5-8.	Type Select PCB Assembly °C	5-29
5-9.	Type Select PCB Assembly °F	5-33
5-10.	Multi-Point Configuration	5-34
5-11.	Point Select PCB Assembly	5-36
5-12.	Battery Power Supply	5-37
5-13.	Battery Charge PCB Assembly	5-38
5-14.	Digital Output Unit PCB Assembly	5-41
6-1.	C81, Carrying Case	6-1
6-2.	Side-By-Side Rack Mounting	6-2
6-3.	Offset Rack Mounting	6-3
6-4.	Panel Mounting	6-3
6-5.	2100A- – – K and F2CK Location	6-5
6-6.	Battery Charging Circuit	6-7
6-7.	Battery Pack Installation	6-7
6-8.	DOU Timing Signals	6-9
6-9.	DOU Installation Illustration	6-11
6-10.	Thermocouple Connections and Calibration Adjustment Locations	6-12
6-11.	2150A–2100A Interconnection	6-13

List of Tables

TABLE	TITLE	PAGE
1-1.	Thermocouple Ranges	1-2
1-2.	Basic Model Summary	1-2
1-3.	Options and Conversion Kits	1-2
2-1.	Front Panel Controls and Indicators	2-3
2-2.	Rear Panel Connectors	2-4
4-1.	Recommended Test Equipment	4-1
4-2.	Comparator Calibration	4-5
4-3.	Positive Full Scale Inputs	4-6
4-4.	Negative Full Scale Inputs	4-6
4-5.	Linearized Gain Check	4-7
4-6.	Reference Junction Adjustment Limits	4-9
4-7.	Reference Junction Adjustment Corrections	4-9
4-8.	Troubleshooting Guide	4-10
6-1.	Mounting Kits	6-1
6-2.	DOU Input/Output Data	6-8
6-3.	DOU Input Data	6-10
7-1.	List of Abbreviations and Symbols	7-1
7-2.	Federal Supply Codes for Manufacturers	7-3
7-3.	Fluke Technical Centers	7-10
7-4.	Sales Representatives - Domestic	7-11
7-5.	Sales Representatives - International	7-13

Section 1

Introduction & Specifications

1-1. INTRODUCTION

1-2. The Fluke Model 2100A is a digital, thermocouple thermometer, employing the dual-slope integration technique, and capable of making precise temperature measurements in either degrees Fahrenheit (°F) or degrees Celsius (°C). The instrument is fully guarded and features a fully isolated input.

1-3. The 2100A has a five-digit readout (plus sign) capable of indicating up to ±3999.9 degrees. However, the range of the instrument is determined by the type of thermocouple used. The instrument can be ordered, configured to use any of the following types: J, K, T, E, R and S. Table 1-1 shows the temperature ranges for each of these types. Resolution of the instrument is 0.1 degree, except in instruments using a type R or a type S thermocouple and indicating in °F, when resolution is 0.2 degrees. The readout features 0.5 inch characters, fixed decimal point, and leading-zero suppression for the two most significant digits.

1-4. The 2100A is available in three basic models: the 2100A–03, the 2100A–06, and the 2100A–10. The 2100A–03 is a single-point instrument (one input); the 2100A–10 is a multi-point instrument (10 inputs). Both of these models are tailored at the factory to use only one specific type of thermocouple. Once tailored, the 2100A–03 and 2100A–10 are limited to that one type, but can be converted to any one of the other five at any time, by means of a conversion kit.

1-5. The 2100A–06 is a multi-type instrument. It is tailored to accept inputs from any of the six different types of thermocouple, but only one type at any given time. (The 2100A–06 is not a multi-point instrument). In effect, the 2100A–06 is a 2100A–03 that can be rapidly converted to accept different thermocouples, by means of integral selector switches, rather than conversion kits. For valid indications from a 2100A–06, the selector switch depressed must correspond to the type of thermocouple being used. In addition, the 2100A–06 can accept linearized voltage inputs on either of two selectable mV ranges directly from other transducers, such as bridge-connected strain gauges. Table 1-2 is a summary of the differences between the three basic models of the 2100A.

Table 1-1. THERMOCOUPLE RANGES

TYPE OF THERMOCOUPLE		RANGE
J	Iron/Constantan (Fe/Cu Ni)	–320°F to +1400°F –200°C to + 760°C
K	Chromel/Alumel (Ni Cr/Ni Al)	–320°F to +2400°F –200°C to +1370°C
T	Copper/Constantan (Cu/Cu Ni)	–320°F to + 750°F –200°C to + 400°C
E	Chromel/Constantan (Ni Cr/Cu Ni)	–320°F to +1830°F –200°C to + 960°C
R	Platinum-13% Rhodium/ Platinum (Pt 13% Rh/Pt)	0°F to +3200°F 0°C to +1760°C
S	Platinum-10% Rhodium/ Platinum (Pt 10% Rh/Pt)	0°F to +3200°F 0°C to +1760°C

Table 1-2. BASIC MODEL SUMMARY

MODEL	DESCRIPTION
2100A–03	Single-Type, Single-Point
2100A–06	Multi-Type, Single-Point
2100A–10	Single-Type, Multi-Point

1-6. Each of the three 2100A models can have their inputs expanded by means of a companion instrument, the Model 2150A. This instrument is also available in three basic models: the 2150A–10, the 2150A–20, and the 2150A–30. These three models expand the thermocouple inputs of the 2100A–03 and 2100A–06 to 10, 20, and 30 points, respectively. In the case of the 2100A–10, the expanded number of points is added to the 10 existing points.

1-7. All three models of the 2100A can be set up to indicate on either the Fahrenheit or the Celsius scale, but not both. The scale employed in any given instrument is determined by a plug-in, stored-program read-only memory (ROM). A different ROM is used for each temperature scale' An instrument can be converted in the field from °F to °C by replacing the °F–ROM with the °C – ROM changing the thermocouple type board for a °C type, and recalibrating the instrument.

1-8. There are three options and a number of conversion kits and accessories available to any of the three basic models. The options and conversion kits are listed in Table 1-3.

1-9. A Rechargeable Battery Pack (Option –01) permits operation of the 2100A at remote locations where ac line power is not available. An instrument equipped with a battery pack is still operable from ac line power. During ac line operation, the battery is recharged.

Table 1-3. OPTIONS AND CONVERSION KITS

NO. (2100A-)	NAME
01	Rechargeable Battery Pack
02	Data Output Unit (DOU)
04	Analog Output Unit (AOU)
––K**	Conversion Kit, New Thermocouple
F2CK	Conversion Kit, °F to °C
10K*	Conversion Kit, Multi-Point†

* The letter K denotes kit.
** Specify new type and desired scale (e.g., 2100A–ECK)
† Converts 2100A–03 into 2100A–10.

1-10. A Digital Output Unit (Option –02) permits the instrument to interface with digital instrumentation (printer, tape punch, computer, etc.). The Digital Output Unit (DOU) has an isolated parallel, 8-4-2-1 weighted, bcd output. The DOU can be updated by an external signal, or be enabled to be continuously updated at the 2100A cycle rate. (Due to internal space limitations, the –01, 02 and 04 options are mutually exclusive.)

1-11. An Analog Output Unit (Option –04) provides an output voltage representative of the temperature displayed on the front panel. The output of the Analog Output Unit (AOU) is equal to one millivolt for each degree of temperature with a one-half degree temperature recognition factor (0.5mV per degree on R and S Fahrenheit scales). This option, when coupled with a strip-chart recorder, provides a graphic illustration of temperature changes occurring over an extended period of time.

1-12. Two of the conversion kits facilitate field conversion to a new type of thermocouple or from the Fahrenheit scale to the Celsius scale. The third kit facilitates field conversion of a 2100A–03 to a 2100A–10.

1-13. The 2100A can be a bench-top instrument or can be rack-mounted or panel-mounted. Two different rack-mounting kits and a panel-mounting kit are among the accessories available. Power input requirements are 100, 115 or 230V ac ±10% at 50 to 440 Hz, or 11.5 to 17.5V dc. Each individual 2100A operates from only one type of ac source. The voltage and frequency of the required ac source is stamped on a decal attached to the instrument.

1-14. SPECIFICATIONS

2100A–03 Digital Thermometer for one type of thermocouple

Types of Thermocouple: J, K, E, T, R, S

Input Circuit: Two wire with guard, isolated

Input Connections: Three screw terminals on isothermal block at rear

Measurement Method: Dual slope integration over 100 ms period with automatic zero

Response Time to Rated Accuracy: < 1.0 second

Reading Rate: 2.5 readings per second fixed

Type of Display: 5 digit 0.55 inch gas discharge

Linearization: Digital with six programs stored in ROM

Number of Segments: 64 segments in each program

Reference Junction Compensation:

J, K, T, E	0.01° per ° over ambient range of 20°C to 30°C (+68°F to 86°F) 0.02°C per ° from 0°C to 20°C and 30°C to 50°C (32°F to 68°F and 86°F to 122°F)
R, S	0.04° per ° over ambient range of 20°C to 30°C (+68°F to 86°F) 0.07° per ° from 0°C to 20°C and 30°C to 50°C (32°F to 68°F and 86°F to 122°F)

Temperature Coefficient: ±(15 ppm ±0.1 uV)/°C

Input Impedance: 1000 MΩ

Input Current: < 200 pA

Maximum Source Impedance: 1.5 kΩ source impedance causes less than 0.1°C error

Overload: Continuous 250V dc or ac rms across input will not cause damage

Common Mode Rejection: 160 dB at 50/60 Hz ±0.1% with 100 Ω in either lead. A common mode voltage of 250V will cause an error of less than 0.1°C using a K couple.

Common Mode Voltage: Maximum of 250V dc or ac rms.

Normal Mode Rejection: 90 dB at 50/60 Hz ±0.1% A normal mode 50/60 Hz voltage of 100 mV will cause an error of < 0.1°C using a type K couple.

Zero Drift: Automatic zero correction.

Open Circuit Detection: A source impedance of greater than 1.5 kΩ ±500Ω or capacitance less than 0.01 uF ±0.005 uF is defined as open circuit. An open circuit input is indicated by blanked digits.

Accuracy: See Table 1-4

Size: 3½" high x 8½" wide x 12" deep (10,5cm x 22.5cm x 30.5cm)

Weight: 8 pounds (3,63Kg)

Power:

line voltage	nominal	range
standard	115V ac	95-128Vac
optional	100V ac	83-111Vac
optional	230V ac	180-256Vac

External Battery 11.5Vdc to 17.5Vdc - 400 mA drain

Operating Temperature: 0 to +50°C (+32 to +122°F)

Storage Temperature: –40 to +75°C (–40 to +167°F) Line operated
–40 to +60°C (–40 to +140°F) Battery operated

Humidity: 80% non-condensing over operating temperature range. 90% up to 35°C (95°F)

Shock & Vibrations: Meets requirements of MIL–T–21200L and MIL–E–16400F

Table 1-4. OVERALL ACCURACY (Including reference junction and conformity but not including thermocouple).

Type of Couple	Temperature Range	Resolution & Repeatability	Maximum Error				
			Applicable Temperature Range	24 Hrs, 23°C to 27°C or 72°F to 82°F	90 Days, 20°C to 30°C, or 68°F to 86°F	1 Year, 15°C to 35°C or 59°F to 95°F	NBS Conformity
DEGREES FAHRENHEIT							
J Iron/Constantan	−320°F to +1400°F	0.1°F	−320°F to +190°F +190°F to +1400°F	±0.4°F ±0.45°F	±0.6°F ±0.65°F	±0.8°F ±1.0°F	±0.2°F ±0.15°F
K Nickel Chromium/ Nickel Aluminum	−320°F to +2400°F	0.1°F	−320°F to 0°F 0°F to +1500°F +1500°F to +2400°F	±0.45°F ±0.55°F ±0.6°F	±0.65°F ±0.75°F ±0.8°F	±0.85°F ±1.0°F ±1.2°F	±0.2°F ±0.25°F ±0.15°F
E Nickel Chromium/ Constantan	−320°F to +1830°F	0.1°F	−320°F to +600°F +600°F to +1830°F	±0.45°F ±0.6°F	±0.65°F ±0.8°F	±0.85°F ±1.1°F	±0.2°F ±0.2°F
T Copper/Constantan	−320°F to +750°F	0.1°F	−320°F to 0°F 0°F to +750°F	±0.45°F ±0.35°F	±0.65°F ±0.55°F	±0.85°F ±0.75°F	±0.2°F ±0.15°F
R Platinum 13% Rhodium/Platinum	0°F to +3200°F	0.2°F	0°F to +100°F +100°F to +1600°F +1600°F to +3200°F	±1.2°F ±1.0°F ±1.1°F	±1.5°F ±1.3°F ±1.4°F	±2.0°F ±1.9°F ±2.0°F	±0.7°F ±0.4°F ±0.5°F
S Platinum 10% Rhodium/Platinum	0°F to +3200°F	0.2°F	0°F to +130°F +130°F to +3200°F	±1.2°F ±1.0°F	±1.5°F ±1.3°F	±2.0°F ±1.9°F	±0.65°F ±0.4°F
DEGREES CENTIGRADE							
J Iron/Constantan	−200°C to +760°C	0.1°C	−200°C to −150°C −150°C to +760°C	±0.45°C ±0.35°C	±0.55°C ±0.45°C	±0.7°C ±0.6°C	±0.3°C ±0.2°C
K Nickel Chromium/ Nickel Aluminum	−200°C to +1370°C	0.1°C	−200°C to −150°C −150°C to +150°C +150°C to +1370°C	±0.45°C ±0.35°C ±0.40°C	±0.55°C ±0.45°C ±0.5°C	±0.7°C ±0.6°C ±0.65°C	±0.3°C ±0.2°C ±0.15°C
E Nickel Chromium/ Constantan	−200°C to +960°C	0.1°C	−200°C to −150°C −150°C to 0°C 0°C to +960°C	±0.5°C ±0.45°C ±0.35°C	±0.6°C ±0.55°C ±0.45°C	±0.75°C ±0.7°C ±0.6°C	±0.35°C ±0.3°C ±0.12°C
T Copper/ Constantan	−200°C to +400°C	0.1°C	−200°C to −150°C −150°C to +60°C +60°C to +400°C	±0.4°C ±0.35°C ±0.3°C	±0.5°C ±0.45°C ±0.4°C	±0.65°C ±0.6°C ±0.55°C	±0.25°C ±0.2°C ±0.15°C
R Platinum 13% Rhodium/Platinum	0°C to +1760°C	0.1°C	0°C to +80°C +80°C to +600°C +600°C to +1760°C	±0.75°C ±0.55°C ±0.5°C	±0.95°C ±0.75°C ±0.7°C	±1.3°C ±1.1°C ±1.1°C	±0.45°C ±0.2°C ±0.15°C
S Platinum 10% Rhodium/Platinum	0°C to +1760°C	0.1°C	0°C to +80°C +80°C to +600°C +600°C to +1760°C	±0.65°C ±0.6°C ±0.5°C	±0.85°C ±0.8°C ±0.7°C	±1.2°C ±1.2°C ±1.1°C	±0.35°C ±0.25°C ±0.15°C

2100A–01 - Rechargeable Battery Pack

Type of Cell: Rechargeable Ni Cad, "HALF D"

Configuration: Self-contained within the instrument

Number: 9 cells providing 11 volts

Operating Time: Typically, 7 hours continuous operation

Charge-Discharge Cycles: Minimum of 1000

Additional Weight: 2 pounds (0,91Kg)

2100A–02 - Digital Output Unit

Type of Output: Fully isolated, buffered, parallel bcd.

Available Data: 18 bits data, 8 bits of channel identity, polarity, open circuit, function.

Flags: Busy, not busy

Control Inputs: EXTERNAL TRIGGER. (Negative going edge trigger.) This allows external control of DOU update.

EXTERNAL TRIGGER ENABLE. In the "1" state this allows the DOU to be updated by an external trigger. In the "0" state it allows the DOU to be updated at the instrument reading rate of 2½ readings per second.

Data Coding: 1-2-4-8 bcd positive true parallel.

Logic Levles: "1" = +4V, "0" - +0.4V

Drive Capability: All outputs can drive one standard TTL load (i.e., sink 2.1 mA).

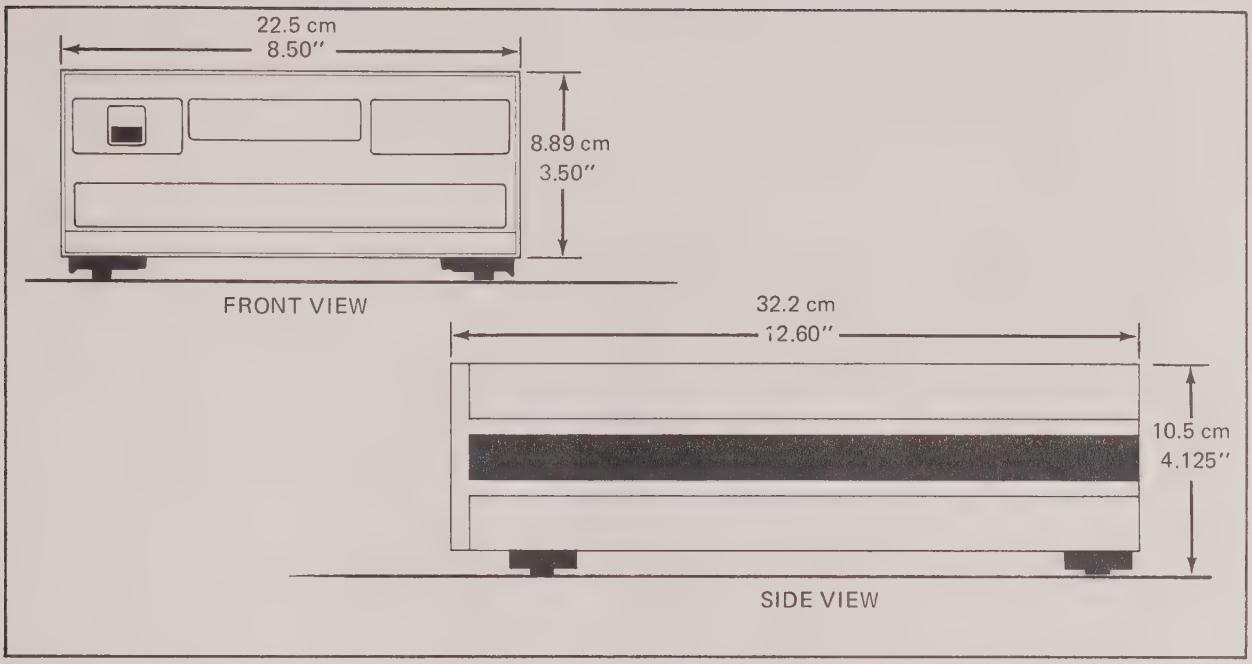

Figure 1-1. OVERALL DIMENSIONS

Isolation: Fully isolated to 250V dc or rms ac.

2100A—06 - Digital Thermometer for six types of thermocouples

This is the same basic unit as the 2100A—03 but with the addition of 8 select switches on front panel. Instrument configuration for any one of the six available thermocouple types can be selected by means of the switches, but only one type of thermocouple can be connected at one time. Two additional switches for dc voltages of 40 mV and 400 mV are provided.

Accuracy Of Millivolt Ranges:

24 hrs, 23°C to 27°C	40mV - ±(0.01% of rdg + 2 digits)
or 72°F to 80°F	400mV - ±(0.01% of rdg + 1 digit)
90 days, 20°C to 30°C	40mV - ±(0.015% of rdg + 3 digits)
or 68°F to 86°F	400mV - ±(0.015% of rdg + 1 digit)
1 year, 15°C to 30°C	40mV - ±(0.03% of rdg + 4 digits)
or 59°F to 95°F	400mV - ±(0.03% of rdg + 2 digits)

2100A—10 - Digital Thermometer for ten thermocouples of the same type

This is the same basic unit as the 2100A—03 but with the addition of 11 manual switches on front panel. This allows up to 10 thermocouples (all of the same type) to be connected to the rear of the instrument and then switched, one at a time, into the measuring instrument. An error of 0.1°F or 0.1°C is added to the existing errors in the 2100A—03 specifications. A separate switch on the front panel isolates this bank of ten switches from external inputs when the 2150A is used. Channel identity of the selected thermocouple is available when the DOU is fitted.

2150A—10 - Ten point selector switch unit

This is a separate unit containing 10 manual selector switches on the front panel and a separate switch for isolating the switches. When used with any of the above instruments, the specification will be the same as the 2100A—10. When used with the 2100A—06, any combination of thermocouples can be connected to the unit. Channel identity can be recorded as in the 2100A—10.

2150A—20 - Twenty point selector switch unit

Same as 2150A—10, but with two rows of 10 selector switches.

2150A—30 - Thirty point selector switch unit

Same as 2150A—10, but with three rows of 10 selector switches.

Section 2
Operating Instructions

2-1. INTRODUCTION

2-2. This section of the manual contains information regarding installation and operation of the Model 2100A Digital Thermometer. It is recommended that the contents of this section be read and understood before any attempt is made to operate the instrument. Should any difficulties arise during operation please contact your nearest Fluke Sales Representative, or contact the John Fluke Mfg. Co., P.O. Box 7428, Seattle, Washington 98133; telephone (206) 774-2211. A list of Sales Representatives and their addresses is given in Seciton 7.

2-3. SHIPPING INFORMATION

2-4. The 2100A is packaged and shipped in a foam-packed container. Upon receipt of the equipment, a thorough inspection should be made to reveal any possible shipping damage.

2-5. If reshipment of the equipment is necessary, the original container should be used. If the original container is not available, a new container can be obtained from the John Fluke Mfg. Co., Inc. Please specify the equipment model number when requesting a new shipping container.

2-6. INPUT POWER

2-7. The 2100A can be operated from either an ac or dc power source. Ac power may be either 100, 115 or 230 volts, ±10%, at 50 to 440 Hz; however, each individual 2100A is configured for only one of these three ac voltages. The required ac line voltage is determined by means of the power transformer.

NOTE

The required ac line voltage for each 2100A is stamped on a decal located on the rear of the instrument.

2-8. The 2100A may be connected to an 11.5 to 17.5 volt dc supply by means of a pair of rear panel terminals. The dc input is protected from accidental polarity reversal, and may be connected concurrently with ac power. Refer to Figure 2-2 for the location of the ac and dc power inputs.

2-9. RACK/PANEL INSTALLATION

2-10. The 2100A can be installed in a standard, 19-inch equipment rack by means of the Offset Rack Mount Kit. A 2100A and a 2150A can be mounted together by means of Side-by-Side Rack Mount Kit. In addition, either of the two instruments can be panel mounted by means of the Panel Mounting Frame. Installation instructions for these accessories are included in each kit.

2-11. OPERATING FEATURES

2-12. The location of all front panel controls and indicators is shown in Figure 2-1; a description of each item shown is given in Table 2-1. Rear panel connectors are shown and described in Figure 2-2 and Table 2-2, respectively.

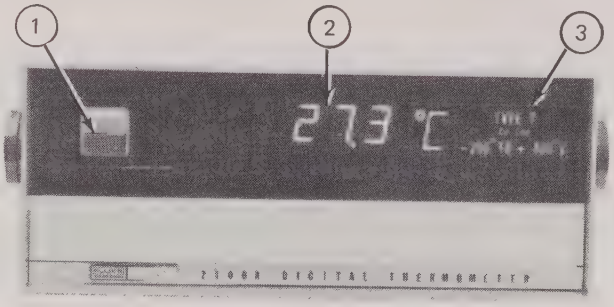

-03

(SEE DETAIL A)

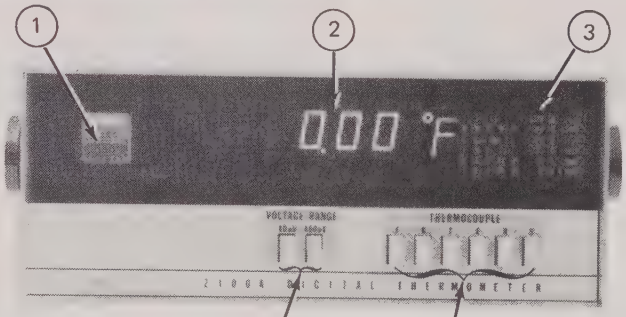

-06

(SEE DETAIL A)

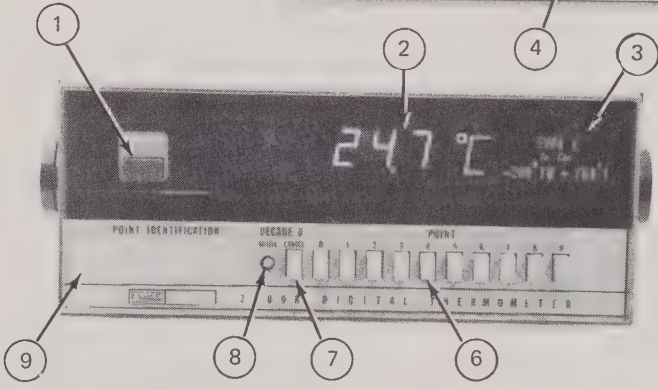

-10

(SEE DETAIL A)

DETAIL A

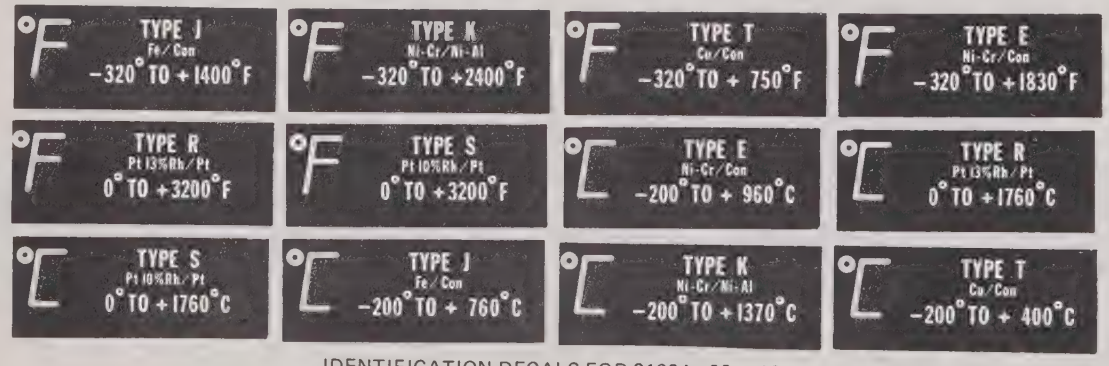
°F TYPE J Fe/Con -320° TO +1400°F
°F TYPE K Ni-Cr/Ni-Al -320° TO +2400°F
°F TYPE T Cu/Con -320° TO + 750°F
°F TYPE E Ni-Cr/Con -320° TO +1830°F
°F TYPE R Pt 13%Rh/Pt 0° TO +3200°F
°F TYPE S Pt 10%Rh/Pt 0° TO +3200°F
°C TYPE E Ni-Cr/Con -200° TO + 960°C
°C TYPE R Pt 13%Rh/Pt 0° TO +1760°C
°C TYPE S Pt 10%Rh/Pt 0° TO +1760°C
°C TYPE J Fe/Con -200° TO + 760°C
°C TYPE K Ni-Cr/Ni-Al -200° TO +1370°C
°C TYPE T Cu/Con -200° TO + 400°C

IDENTIFICATION DECALS FOR 2100A–03, –10

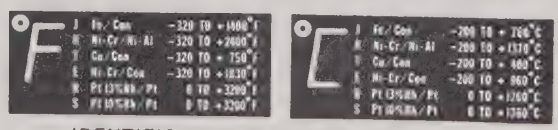

IDENTIFICATION DECALS FOR 2100A–06

Figure 2-1. FRONT PANEL CONTROLS AND INDICATORS

Table 2-1. FRONT PANEL CONTROLS AND INDICATORS

FIG. 2-1 INDEX NO.	NAME	DESCRIPTION
1	POWER Switch	Alternate-action pushbutton switch that switches power on and off. (When in off position, optional batteries are not charged.)
2	Measurement Results Readout	Five-digit Beckman (Planar gas discharge) readout that displays temperature, in degrees of scale noted on identification Decal (index No. 3). Maximum capacity of readout: ±39999.
3	Identification Decal	Identifies temperature scale and thermocouple type for which instrument has been programmed and calibrated.
4	Thermocouple Switches (J,K,T,E,R,S)	Mutually cancelling pushbutton switches that program the 2100A–06 for particular type of thermocouple being used. (Permits rapid change from one type to another.)
5	VOLTAGE RANGE Switches (40 mV, 400 mV)	Mutually cancelling pushbutton switches that select desired input voltage range when 2100A–06 is used with devices other than thermocouples (such as strain gauges). *NOTE* *All eight pushbutton switches form a single group insofar as mutual cancellation is concerned; only one of the eight can be active at a given time.*
6	POINT Switches (0 thru 9)	Mutually cancelling pushbutton switches that select desired thermocouple for input to 2100A–10.
7	DECADE 0 CANCEL Switch	Pushbutton switch that mechanically releases selected POINT switch on 2100A–10 when 2150A is used to expand number of inputs.
8	DECADE 0 ACTIVE Indicator	LED that lights red to indicate DECADE 0 is active (a POINT button has been pressed). LED goes out if CANCEL button is pressed. Used on 2100A–10.
9	POINT IDENTIFICATION Log	Writing surface on 2100A–10 provided to log locations of thermocouples used.

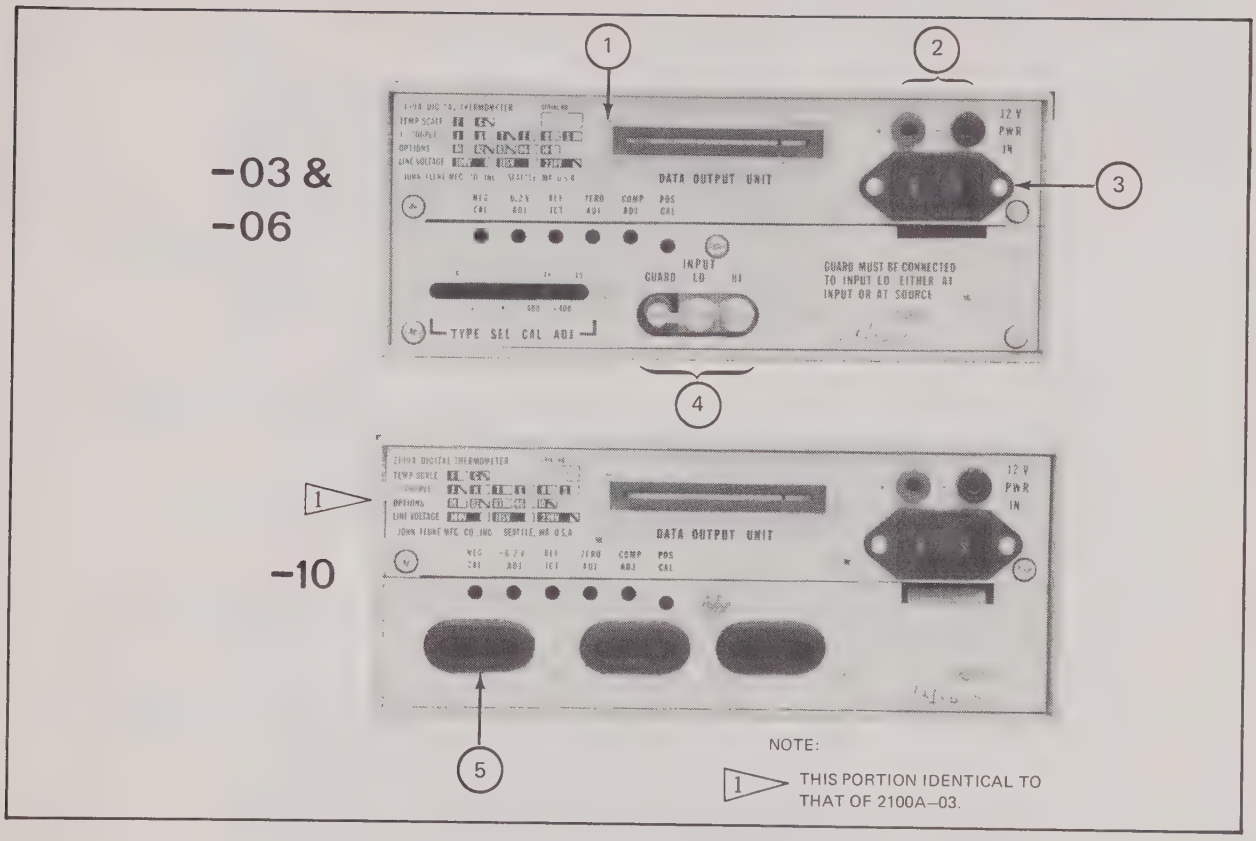

Figure 2-2. REAR PANEL CONNECTORS

Table 2-2. REAR PANEL CONNECTORS.

FIG. 2-1 INDEX NO.	NAME	DESCRIPTION
1	DATA OUTPUT UNIT Connector	Card-edge connector that permits connection to external digital equipment. (Part of –02 option.)
2	12V PWR IN jacks (+, –)	Two connectors that provide means of attaching an external dc power source.
3	AC Power Input Connector	Polarized, three-prong connector that provides means of connecting ac power source.
4	INPUT Terminals – GD, LO, HI (2100A–03 and 2100A–06 only)	Three screw-and-lug terminals that provide means of connecting thermocouple with or without guard. The 2100A–06 will also accept voltage inputs from other types of transducers, such as strain guage configurations, etc.
5	Input Terminals (2100A–10)	Same type terminals as item 4, but arranged in 10 front-to-back rows of 3 terminals each (GD, LO, HI, back-to-front). Terminals provide means of connecting up to 10 thermocouples, with or without guard.

2-13. OPERATING NOTES

2-14. The following paragraphs describe various conditions that should be considered before operating the 2100A.

2-15. AC Line Connection

2-16. The input power cord mates with a three-prong, polarized connector. This permits connection to any of the power line voltages described in paragraph 2-6. Ensure that the offset pin is connected to a high-quality earth ground.

2-17. Fuse Replacement

2-18. A 1/8A fuse is located in a snap-in fuseholder near the power transformer as shown in Figure 2-3. Should the fuse need replacing, remove the 2100A from the case to gain access to the fuse by removing the four retaining screws on the rear panel and sliding the instrument backwards. Replace the fuse with a 1/8A Slo-Blo, Fluke part number 166488.

2-19. Open Inputs

2-20. Open inputs (thermocouple either burned open or not connected), when applied to the 2100A, will cause the readout to go blank. In addition, the readout on the 2100A-10 and 2100A/2150 set will go blank if the CANCEL button corresponding to the lighted ACTIVE indicator is pressed. If all available ACTIVE indicators are out, the blank display is not indicative of an open input. If, however, any ACTIVE indicator is lit, then a blank display indicates that the input selected in tht active decade is open.

2-21. OPERATION

2-22. Models 2100A–03 and 2100A–10

2-23. Operate the 2100A–03 and 2100A–10 as follows:

a. Connect thermocouple leads to the input terminals on the rear panel (2100A–03) or to one of the ten sets of terminals located inside the lower half of the rear panel (2100–10). The thermocouple must be of the type indicated on the decal in the upper right corner of the front panel.

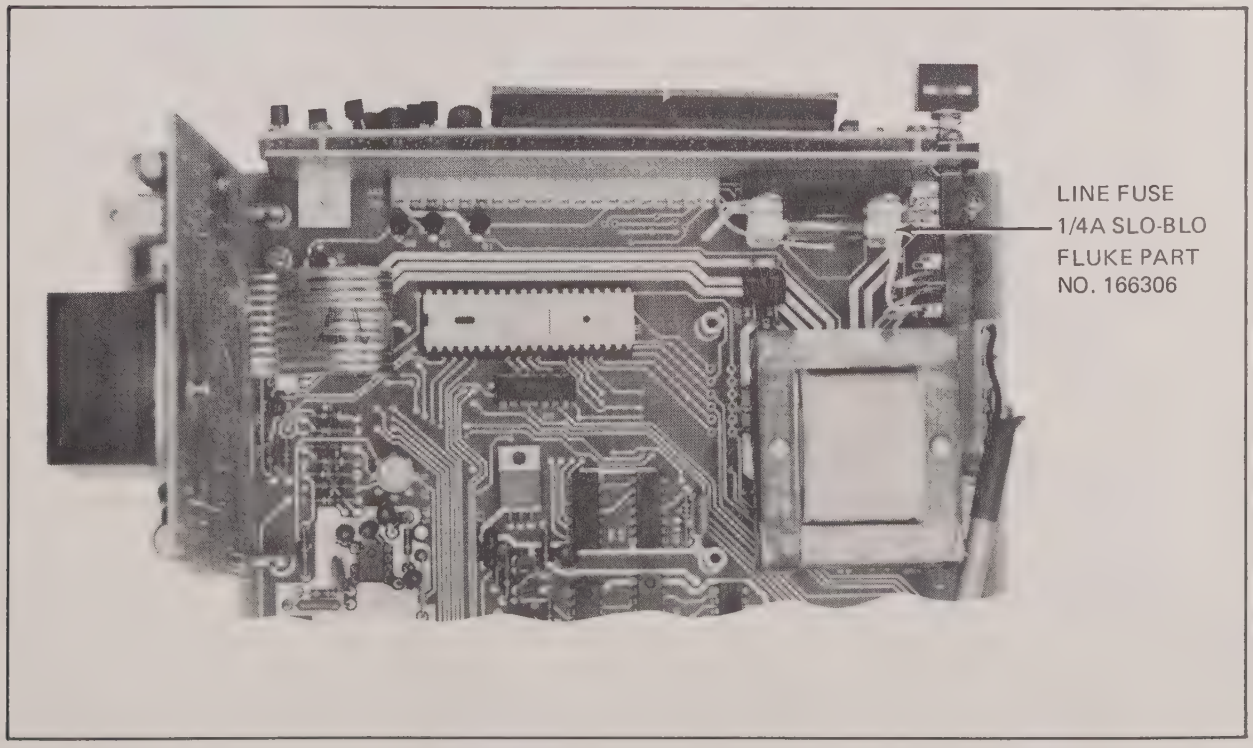

Figure 2-3. LINE FUSE LOCATION

NOTE!

The first metal of the thermocouple, as indicated on the front panel decal, connects to the HI terminal; the second metal connects to the LO terminal. If the thermocouple is guarded, connect the shield to the GD (guard) terminal and the sensor end of the shield to ground; if not, connect the GD and LO terminals together.

NOTE!

On the 2100A–10 only, unscrew the knurled captive screw (center of the rear panel) and pull the lower half of the instrument out of the case to expose the input terminal block. Be sure to route the thermocouple leads through the grommeted holes in the rear panel.

b. Connect the 2100A to the proper power source. (Refer to paragragh 2-6).

c. Press the POWER pushbutton. For the 2100–03, verify that the readout lights.

NOTE

Steps a, b, and c are all that are required for 2100A-03 operation. For 2100A-10, proceed with steps d, e, and f.

d. Press the POINT selector corresponding to the location (0 through 9) to which the thermocouple is attached; verify that the readout and ACTIVE indicator lights.

e. To select a new thermocouple, press the desired POINT selector (no need to press CANCEL button first).

f. To open all inputs, press the CANCEL button and verify that the ACTIVE indicator and readout both go out.

2-24. Model 2100A–06

2-25. Operate the 2100A–06 as follows:

a. Connect 2100A–06 to proper power source. (Refer to Paragraph 2-6.)

b. Connect leads of desired type of thermocouple to input terminals on rear panel. (Any one of the six available types may be used.)

c. Press THERMOCOUPLE selector pushbutton corresponding to type of thermocouple connected in step b, or press desired VOLTAGE RANGE pushbutton if using the 2100A–06 as a millivolt meter.

d. Press POWER pushbutton; verify that readout lights.

NOTE

The 2100A–06 may only have one set of input leads connected at any time.

2-26. Model 2100A/Model 2150A Set

2-27. When a 2150A is used in conjunction with a 2100A, each decade of the 2150A is operated in the same manner as DECADE 0 of the 2100A–10. That is, to select a new point in the active decade, merely press the POINT pushbutton for the new point. (The active decade is indicated by a lighted ACTIVE indicator.) However, to select a new point in a different decade, the active one must first be deactivated. This is accomplished by pressing the CANCEL pushbutton in the active decade (ACTIVE indicator will go out). When all ACTIVE indicators are unlit, any of the total points available (up to 30 for the –03 and –06; up to 40 for the –10) may be selected.

2-27. In the case of the 2100A–06/2150 set, thermocouples of any of the six types may be connected to the input connectors on the 2150A in any order (mix as desired). However, after a given point has been selected, the THERMOCOUPLE pushbutton on the 2100A–06 corresponding to the type of thermocouple connected to the selected point, must be pressed.

Section 3
Theory of Operation

3-1. INTRODUCTION

3-2. This section contains the theory of operation for the Model 2100A Digital Thermometer. The theory is presented at a functional block level followed by a more detailed description. The section titled OVER-ALL FUNCTIONAL DESCRIPTION discusses the overall operation of the instrument in terms of the functional relationships of the major circuit areas. Block diagrams and simplified circuit diagrams are used as aids to understanding the instrument theory. The section titled CIRCUIT ANALYSIS provides more detailed information about the circuit operation within each functional block.

3-3. OVERALL FUNCTIONAL DESCRIPTION

3-4. The 2100A processes the thermal emf output of a thermocouple in such a manner as to produce an accurate digital representation of the temperature causing the thermocouple output. Figure 3-1 illustrates, in block diagram form, the steps that the thermocouple output goes through as it is processed for display. The basic purpose for each functional block will be discussed in the following paragraphs.

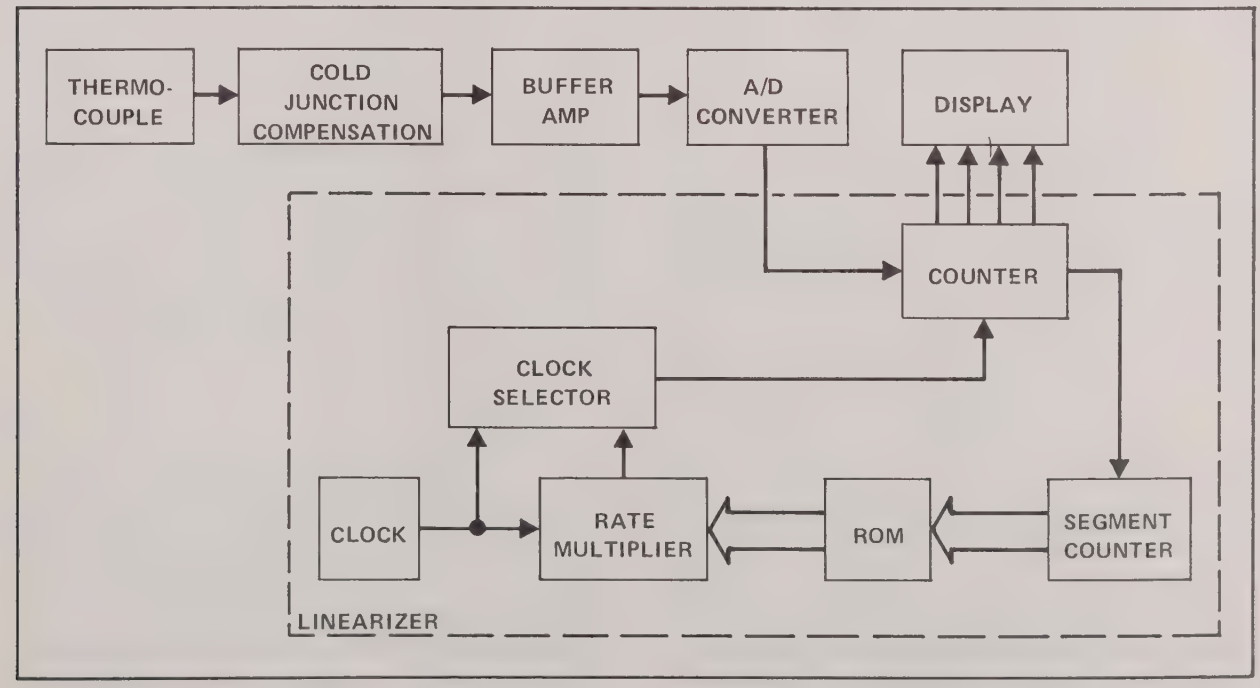

Figure 3-1. 2100A BLOCK DIAGRAM

3-5. Thermocouple

3-6. Three types of thermocouples (J type, K type, and T type) are available as accessories to the 2100A. The E, R, and S type thermocouples are also compatible with the 2100A. These thermocouples consist of two dissimilar metals (wires) connected together at the probe end and attached to the cold junciton on the 2100A. Figure 3-2 is a basic representation of the thermocouple; illustrating how it is attached to the instrument.

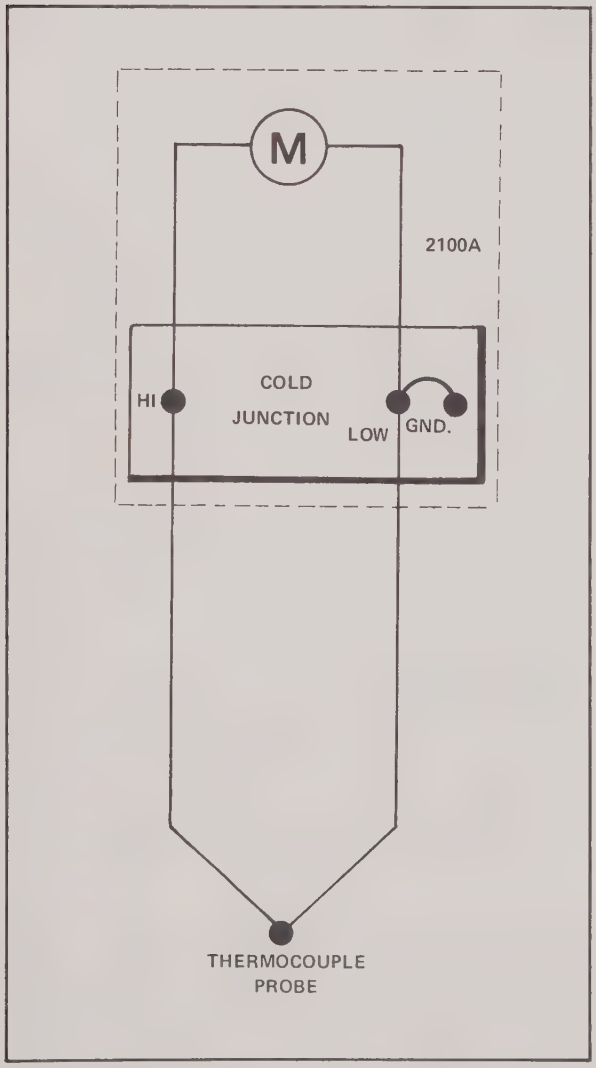

Figure 3-2. THERMOCOUPLE CONNECTION

3-7. The thermal emf generated by the thermocouple changes as the temperature varies. These changes in emf are processed by the 2100A and displayed as a digital representation of the temperature.

3-8. Cold Junction Compensation

3-9. The conversion from thermocouple materials to copper, for connection to the measuring device, must be done with both thermocouple to copper junctions at the same temperature. Temperature gradients or variations at these connections will introduce errors. The 2100A uses an isothermal block containing the terminals for connecting thermocouples to the instrument. The heat conductivity of the isothermal block holds the two thermocouple connection terminals very close to the same temperature. The temperature of the block is monitored by a transistor; the emitter-base junction characteristic of which has been calibrated against changes in temperature. The cold junction is electrically compensated for changes in temperature that would otherwise create an error in the detected temperature at the thermocouple probe.

3-10. Buffer Amplifier

3-11. The buffer amplifier is used to maintain the amplitude of the signal applied to the integrator at approximately the same level for any of six 2100A compatible thermocouples. The amount of buffer amplifier gain applied to each thermocouple output is controlled by changing the amplifier feedback loop resistor. Each thermocouple has its own thermal emf output versus temperature curve as shown in Figure 3-3. The variation in thermal emf output from one thermocouple to another is compensated for by changing the amplifier gain to match each type thermocouple.

3-12. A/D Converter

3-13. The analog to digital (A/D) converter receives a dc voltage output from the buffer amplifier, representative of the thermal emf of a thermocouple, and integrates it for 100ms. The voltage level stored in the integrator capacitor at the end of 100ms is directly proportional to the thermal emf output of the thermocouple, and therefore representative of the temperature. Figure 3-4 illustrates how the integrator output would appear for various percentages of full scale inputs.

3-14. The integrator charges a capacitor during the integrate period (100ms) such that the amount of charge at the end of the period is a direct result of the level of thermal emf applied to the instrument. At the end of the integrate period the input from the thermocouple is electrically disconnected from the buffer amplifier input and replaced by a reference voltage. The reference is a fixed voltage level opposite in polarity to the input applied during the integrate period.

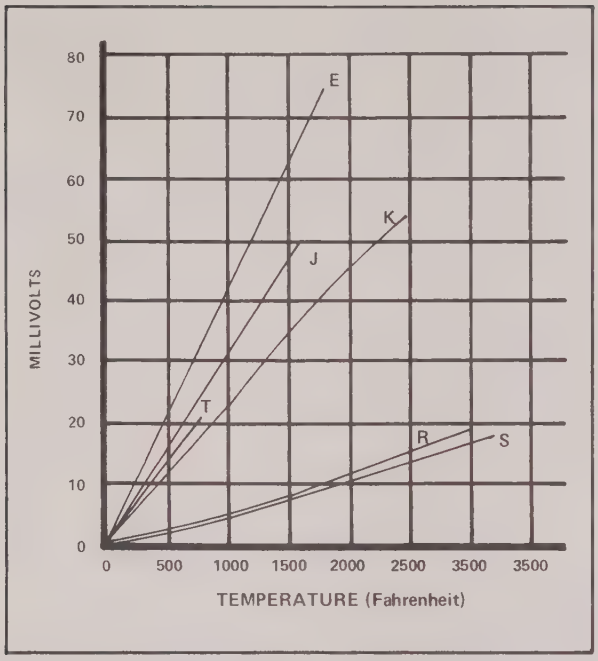

Figure 3-3. TEMPERATURE/MILLIVOLT FOR THERMOCOUPLES

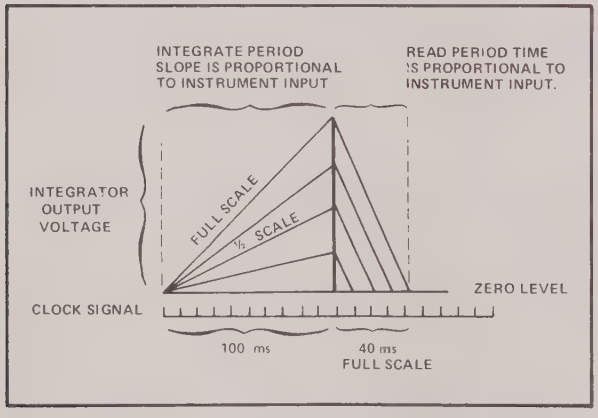

Figure 3-4. DUAL-SLOPE A/D CONVERSION

3-15. During the read period the reference voltage is integrated causing the charge on the integrator capacitor to discharge at a predetermined rate. The time required to discharge the capacitor to the zero level during the he read period depends upon the level the capacitor was charged to during the integrate period. A digital representation of the input (thermal emf) is obtained by counting the number of cycles of a clock signal that occur from the start of the read period until the integrator capacitor has been discharged to the zero level. A comparator attached to the integrator output detects the point when the integrator capacitor reaches the zero level and issues a compare signal to stop counting the cycles of the clock signal.

3-16. Linearizer

3-17. The linearizer comprises a counter, segment counter, read only memory (ROM), rate multiplier, clock selector and clock. The purpose of the linearizer is to adjust the digital count as compensation for the nonlinear thermal-emf-versus-temperature curves of each type thermocouple. A close look at Figure 3-3 will reveal that thermocouples not only have different thermal-versus-temperature curves but each curve in itself is not linear.

3-18. At the start of the read period the clock, via the rate multiplier (multiplies by fractions), supplies the counter with a clock signal at a particular frequency. As the counter accumulates the cycles of the clock signal it will output one pulse to the segment counter for every 100 cycles of input to the counter. The segment counter, being tailored to each type of thermocouple, provides an address change command to the ROM after a predetermined number of input pulses from the counter. The address change in the ROM inturn changes the fractional multiplier used in the rate multiplier to control the frequency of the clock signal applied to the counter. The change in clock signal frequency compensates for the non linear thermal emf versus temperature characteristic of the thermocouple.

3-19. Display

3-20. The total number of cycles of the clock signal accumulated by the counter are a digital representation of the temperature at the thermocouple probe. The display processes the accumulated count to provide the proper numeric display on the gas discharge front panel readout.

3-21. CIRCUIT ANALYSIS

3-22. Reference Junction Compensation

3-23. Compensation for thermal emfs generated by the thermocouple connection terminals is provided by Q1, U32, and associated components. The difference in emf per degree change of temperature, caused by each type thermocouple, is corrected by selected values of R_C and R_d. Figure 3-5 is the reference junction compensation portion of the schematic.

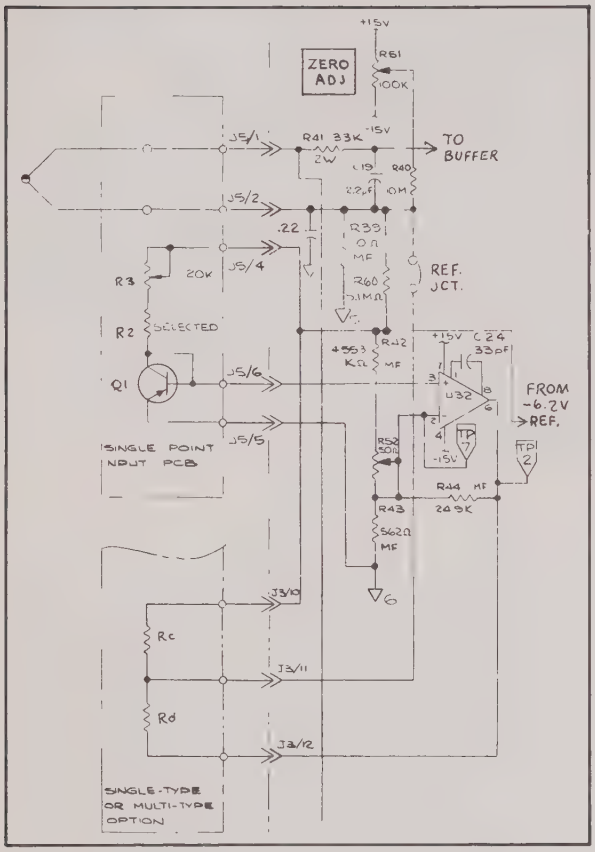

Figure 3-5. REFERENCE JUNCTION COMPENSATION CIRCUIT

3-24. Operational amplifier U32 is biased, to conduct at a stable rate, by the –6.2 reference voltage. The amplifier's output is connected through resistor R_d and the REF JCT jumper to the junction of R39, R40, and R60. The current through R39 develops a small voltage which, during calibration, is offset by the ZERO ADJ. control. When the temperature of the isothermal block (the connection point for the thermocouple) changes, Q1 causes the voltage applied to the positive input to U32 to change. The change in the input voltage is amplified by U32 about 50 times. As the output of U32 changes the voltage developed across R39 also changes, compensating for the change in the connection terminals thermal emf output.

3-25. Buffer Amplifier

3-26. The Buffer Amplifier and its input control circuit is presented in Figure 3-6. The buffer is comprised of Q13, U30, CL1, and associated circuitry. The input control circuit is divided into two basic functions; connecting the thermal emf of the thermocouple to the buffer during the integrate period, then the reference voltage during the read period. The control signals for each function come from the LSI chip U1 (not shown).

3-27. The thermal emf output of the thermocouple is applied to the buffer, via Q16, for the duration of the 100 ms $\overline{INT}$ command (integrate period). The buffer output is ap-

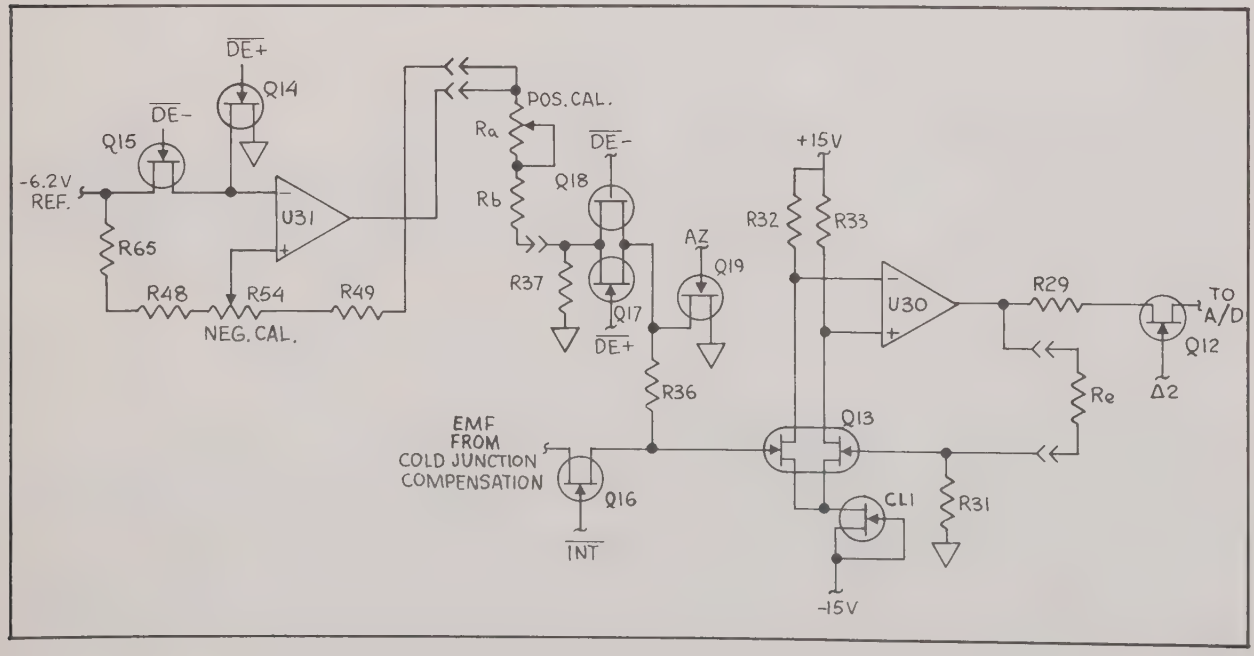

Figure 3-6. BUFFER AMPLIFIER CIRCUIT

plied to the A/D, via R29 and Q12, for 100 ms. At the end of the 100 ms $\overline{INT}$ command, a 1 ms Δ 2 command isolates the buffer from the A/D by opening Q12. This allows the input to the buffer to be switched from the thermal emf input to a reference supply input without affecting the A/D. The polarity of the reference voltage to be applied to the buffer is selected by the $\overline{DE}$ – command (negative reference) or DE + command (positive reference). If the thermal emf input is positive then the $\overline{DE}$– command will cause Q 15 to conduct applying the –6.2V REF to the non-inverting input of U31. The negative output voltage from U31 is connected via Q18, closed by the $\overline{DE}$ – command, to the buffer input at Q13. The level of the reference voltage applied to the A/D is selected for each type thermocouple used and for Celsius or Fahrenheit operation. The value of R_e in the buffer feedback circuit and the values of R_a and R_b in the reference supply circuit determine the level of the reference voltage output of U30.

3-28. At the end of the read period, the $\overline{DE}$ – command will go high causing Q15 and Q18 to stop conducting. The $\overline{AZ}$ command then causes Q19 to conduct. The input of the buffer is connected to ground through Q19 to insure that any residual voltage that may be present is eliminated. This insures that no offset will be added to the thermal emf or reference voltage applied to the buffer during the next reading.

3-29. A/D Converter

3-30. A simplified schematic representation of the A/D Converter is provided in Figure 3-7. The circuit consists of an integrator (U29) which charges C12 during the integrate period then discharges it at a controlled rate during the read period, and a comparator (U28) that senses the polarity of the thermal emf input and provides a compare signal to U1 to indicate when C12 is discharged.

3-31. During the 100 ms $\overline{INT}$ command (integrate period) the input to the A/D is a voltage that directly represents the thermal emf output of the thermocouple. This voltage causes U29 to charge C12. The buffer output is applied, through R29, to the inverting input of U29, therefore a positive input will cause C12 to charge to a negative value. The negative charge of C12 is applied to the inverting input of U28. The negative input causes the output of U28 to immediately go to +5 volts and remain at that level until the input returns to zero.

3-32. At the end of the 100 ms integrate period, the input to U29, from the buffer Amplifier, is changed to a reference voltage. Because the reference voltage is opposite in polarity, U29 starts to discharge C12. The rate at which C12 discharges is directly related to the value of the reference voltage. The greater the charge in C12 at the end of the integrate period, the longer it will take to discharge. When the charge on C12 reaches zero, the output of U28 (cm) immediately returns to zero volts. This transition signals the end of the read period and is used in U1 to terminate the digital count.

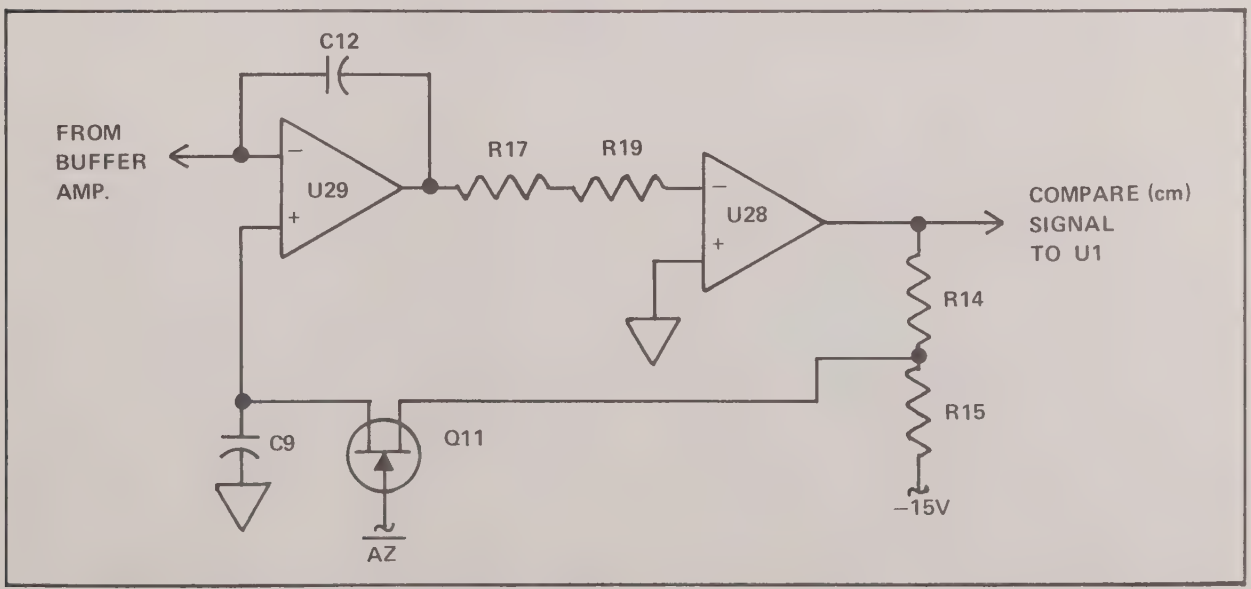

Figure 3-7. A/D CONVERTER CIRCUIT DIAGRAM

3-33. Linearizer

3-34. The following discussion of the operation of the Linearizer refers to sheet 4 of 5 of the Basic Instrument schematic in Section 8. Refer to that schematic when reading the following description of the theory of operation of the Linearizer.

3-35. CLOCK

3-36. The Clock basically consists of crystal Y1 and two CMOS inverters of U25. The 1 MHz output of the Clock is applied to the Clock Selector and to the Rate Multiplier.

3-37. CLOCK SELECTOR

3-38. The Clock Selector has two inputs, one from the clock and one from the Rate Multiplier. The 1 MHz clock signal is selected for output to the Counter (U1) during the integrate and auto zero periods, when the 40 mV or 400 mV range is selected, or when the linearizer jumper is removed. The input from the Rate Multiplier is applied to the counter only during the read period when measuring temperature. The frequency of the rate multiplied clock signal depends upon the type thermocouple used and at which point in the thermocouples' temperature range the input temperature is.

3-39. SEGMENT COUNTER

3-40. The Segment Counter contains two functionally separate sections, one being a segment length counter and the other a segment address counter. These two sections control signals to the ROM tailored to the particular type of thermocouple being used.

3-41. The segment length counter receives an input signal from the counter U1 pin 35 (TA ÷ 100) equal to one positive true pulse for each 100 clock signal input pulses at U1 pin 6. The TA ÷ 100 signal is applied to U19-1. The outputs of U19 at pins 15, 14, 13, and 11 are applied to a series of AND gates (U13, U14, and U18) which are programmed, by the single-type pcb or the type select switch on the multi-type pcb, to provide one output pulse at U9-6 for each 2, 3, 4, or 5 TA ÷ 100 input pulses. This defines a segment length to be equal to 20, 30, 40, or 50 degrees of the thermocouples temperature range. The individualized segment lengths compensate for the differences in temperature range of each type thermocouple. The output of the segment length counter from U5-6 is applied to the segment address counter.

3-42. The purpose of the segment address counter is to program a new output from the ROM for each new segment. The output of the segment length counter is applied to U20 pin 14 and U15 pins 9 and 12. The output of U20 at pins 12, 9, 8, and 11 is a binary equivalent of the total of the input pulses at U20-14. When the total reaches 15, all the inputs to U23 will be high causing the output to go low. The low output is inverted by U6-13 and applied to pins 8 and 11 of U15. The sixteenth pulse from the segment length counter will clock U15-9 causing a high output to pass through OR gate U24-1 to the ROM. The Thirty-third input pulse will clock U15-12 causing a high output to pass through U24-4 to the ROM.

3-43. The DE+ signal from U1 pin 38 will be low when the input to the 2100A is negative. This signal is attached to U9 pins 9 and 13 to cause the Segment Address Counter to start at the count of 48 when the temperature at the thermocouple falls below 0°C or F. The addresses in the ROM from 48 through 63 are reserved for segments of the thermal emf response curves (J, K, T, and E types) corresponding to temperatures below 0°C or F. Addresses from 0 to 47 are used for positive temperatures. All 64 segments are used for positive temperatures for the R and J thermocouples.

3-44. ROM

3-45. The Read Only Memory (ROM) contains preprogrammed eight-bit binary numbers which are used by the Rate Multiplier to alter the clock signal frequency. Three program address lines, U22 pins 14, 15, and 16, determine which series of numbers the inputs from the Segment Address Counter will select from. At each address in a particular series, an eight-bit number is stored that is representative of the slope of that segment of the thermocouple emf versus temperature curve. The outputs of the ROM are applied to the Rate Multiplier.

3-46. RATE MULTIPLIER

3-47. The Rate Multiplier includes a six-bit counter multiplier U21, NAND gates U11 and U12, and dual flip-flop U10. The 1 MHz signal from the clock is applied to U21 pin 9 and, via inverter U16-8, to the clock inputs of U10-9 and U10-12. Six of the eight bits of the number input from the ROM are applied to the six bit counter multiplier U21. The two most significant bits of the data word are applied to U12 pin 1 and U11, pin 3. The eight bit number is selected to produce a fractional multiplier between 0/256 and 255/256. When the 1 MHz clock signal is multiplied by the fraction, the resulting clock signal is applied to U17, pin 9. When the DE signal from U1-37 goes low (read period), the rate multiplied clock signal will be applied to the input to the Counter U1-6. At the end of each segment, the Segment Address Counter advances the ROM, to the next address location and provides a new eight bit data word to the Rate Multiplier.

Segment Address Counter advances the ROM, to the next address location and provides a new eight bit data word to the Rate Multiplier.

3-48. Summary of Linearizer Operation

3-49. The following summary of the operation of the Linearizer uses the timing diagram in Figure 3-8 to illustrate the closed loop interaction of the subsections of the Linearizer. The diagram represents the first five segments of a hypothetical thermal emf versus temperature curve. In actuality the change in frequency at U1-6, from one segment to the next, would not be as great as that shown in the timing example.

3-50. For this example, the segment length counter is assumed to be programmed to provide a two-to-one division ratio; i.e., each segment represents 20 degrees of temperature. The ROM is programmed for a rate multiplier of 192 over 256 (eight bit number, B7 thru B0, is 1100000) resulting in a clock input to the Counter (U1-6) of 750 kHz during segment number 0.

3-51. At the start of the read period, the Clock Selector will apply the 750 kHz clock frequency (U21-6) to the Counter. On the one-hundredth clock pulse, the output of the Counter (U1-35) produces one positive pulse. On the two-hundredth pulse, the output of the Counter produces the second positive pulse which causes the segment length counter to output one negative pulse (U5-6) to the segment address counter. This pulse causes the segment address counter, via U20–12, to advance the ROM address to access the next eight bit number (segment number 1). The eight bit data word stored in the ROM, for this example, is 10100000 (output lines B7 thru B0). This data word will cause the Rate Multiplier to change to 160 over 256 which causes the clock frequency to change to 625 kHz. The sequence of events is the same as it was for segment number 0 in that the Counter will output one pulse at one hundred counts, then a second pulse at two hundred counts which advances the segment address counter to segment number 2 (U20-12 low, U20-9 high). This results in a binary number 10000000 output from the ROM, a rate multiplier of 128 over 256 and a new clock frequency of 500 kHz.

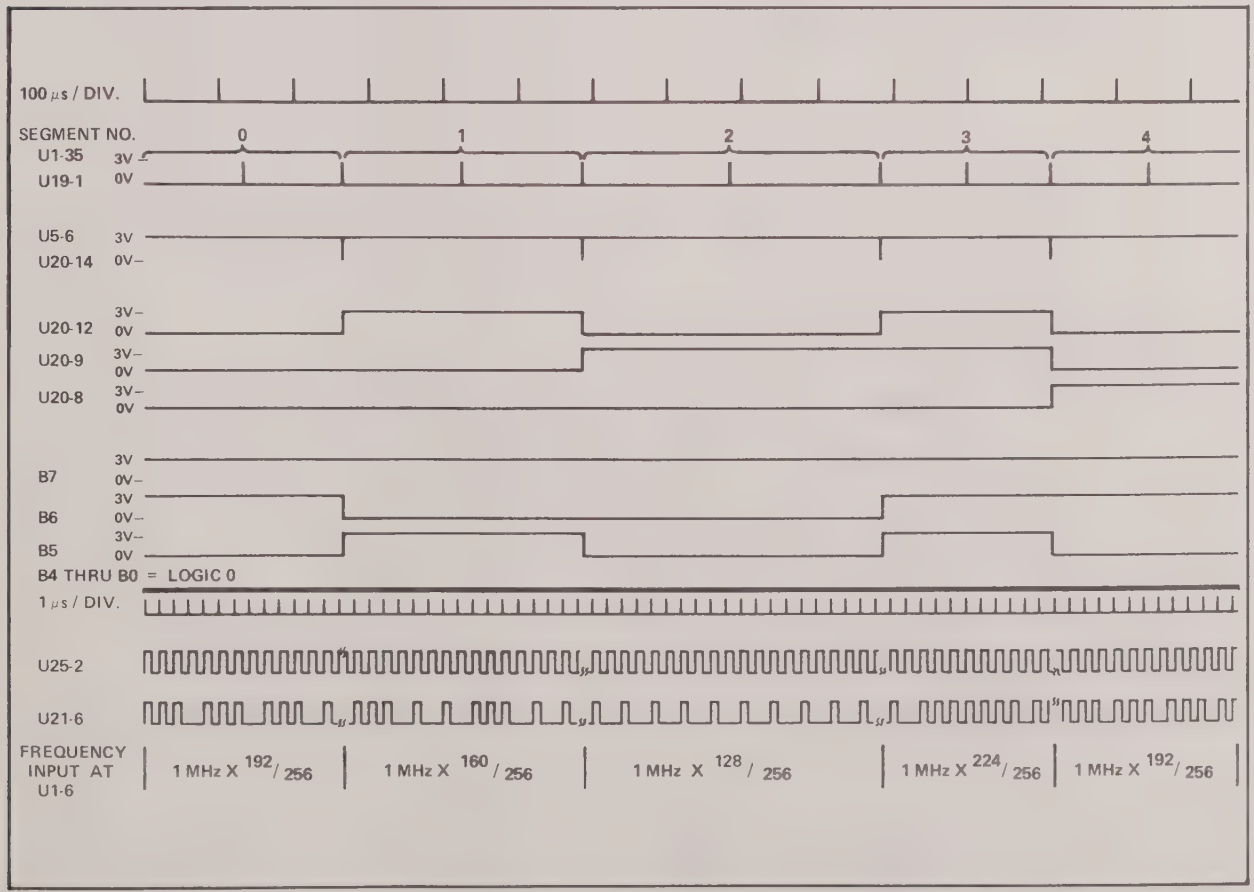

Figure 3-8. LINEARIZER TIMING EXAMPLE

Section 4
Maintenance

4-1. INTRODUCTION

4-2. This section of the manual contains maintenance information for the Model 2100A Digital Thermometer. This includes service information, general maintenance, operational evaluation, calibration, and troubleshooting. The performance test is recommended as a preventative maintenance tool, and should be executed when it is necessary to verify proper instrument operation. A calibration interval of one year is recommended to insure that the 2100A is within the one-year specifications. Table 4-1 lists the recommended test equipment necessary to maintain the 2100A' If the recommended equipment is not available, other equipment having equivalent specifications may be used.

4-3. The 2100A instrument is warranted for a period of one year upon delivery to the original purchaser. The WARRANTY is given on the back of the title page located in the front of this manual. For the WARRANTY to become effective, the validation card included with the instruction manual must be filled out and returned to the John Fluke Mfg. Co., Inc.

4-4. GENERAL MAINTENANCE

4-5. Access Information

4-6. Use the following procedure to gain access to the interior of the 2100A.

a. Remove the line power cord.

b. Remove the encircled screws from the right and left edges of the rear panel. (There are four screws, two each side, on the 2100A–03 and 2100A–06, and two screws, one each side, on the 2100A-10).

c. Slide the inner chassis out of the outer case by pulling the rear panel straight back.

NOTE

When placing the chassis back into the case, insure that the chassis edges are properly aligned with the guide rails in the outer case.

Table 4-1. RECOMMENDED TEST EQUIPMENT

EQUIPMENT NOMENCLATURE	SPECIFICATIONS	RECOMMENDED MODEL
DC Voltage Calibrator	Output Voltage: 10 Volts Voltage Accuracy: 0.002% + 10μV	Fluke Model 332B
Kelvin Varley Voltage Divider	Absolute Linearity: ±0.1 ppm Resolution: 0.1 ppm	Fluke Model 720A
Voltmeter	Accuracy: (0.005% of input +0.001% of range) Resolution: 0.001% of range	Fluke Model 8375A
Calibration Thermometer	Resolution: 0.02°C	Princo ASTM-56C
Flat Cable Connector	John Fluke P/N 376285	

4-7. Cleaning

4-8. Clean the 2100A periodically to remove dust, grease, and other contamination. Use the following procedure:

CAUTION!

Do not use aromatic hydrocarbons or chlorinated solvents to clean the 2100A. They will react with the plastic materials used in the instrument.

a. Clean the surface of the pcb using clean dry air at low pressure (≤ 40 psi). If grease is encountered, use a mild solution of detergent and water and a soft bristled brush to dislodge the contaminants.

b. Clean the outer surfaces of the instrument with a soft cloth dampened in a mild solution of detergent and water.

4-9. Fuse Replacement

4-10. The input power fuse F1 is located in the left front corner of the Basic PCB near the power transformer. If replacement is necessary, use a ¼ ampere slo-blo fuse.

4-11. Service Tools

4-12. No special tools are required to maintain or repair the 2100A.

4-13. OPERATIONAL EVALUATION

4-14. The operational evaluation of the 2100A is designed to check the instrument's ability to correctly process input voltages in the range generally produced by thermocouples. The test can be used as an acceptance check and/or a periodic maintenance check. If the 2100A fails this evaluation corrective action, either recalibration or repair, will be required. The test equipment required to perform this evaluation is listed in Table 4-1. Troubleshooting information is given later in this section of the manual.

4-15. Use the following procedure to evaluate the operation of the 2100A.

a. Connect the appropriate thermocouple to the 2100A–03 or –10 input terminals. (For the 2100A–06 use the J-type thermocouple.)

b. Connect the 2100A to the line power, turn it on and allow one-half hour warmup.

c. Insert the thermocouple and a mercury-in-glass calibration thermometer (PRINCO ASTM -56C) into a room temperature lag bath to a depth of four inches. Allow at least 10 minutes for temperature stabilization.

d. Read the temperature indicated on the calibration thermometer.

e. Check the 2100A display for a temperature indication within the specification limits as defined in Section 1 of this manual.

4-16. CALIBRATION

4-17. The 2100A should be calibrated at least once a year or whenever repairs have been made. (If accuracy requirements, more stringent than the one year specifications indicate, are required, then the calibration interval should be reduced.) The calibration procedure should be performed under environmental conditions providing temperatures of 20°C to 26°C and himidity less than 80%. Table 4-1 lists the required test equipment.

NOTE

The 2100A is calibrated using the International Practical Temperature Standard of 1968. Any thermocouple table predating this 1968 issue should not be used to calibrate the 2100A.

4-18. Power Supply Adjustments

4-19. Use the following procedure to correctly adjust the power supply output.

a. Connect the positive input lead of the voltmeter to the junction point of C12, CR10, and CR11 (on the Power Supply PCB) and the negative input lead to the logic common side of C12 (See Figure 4-1).

b. Adjust R4 for a voltmeter indication of 5.2V, ±0.02V.

c. Check the voltage between TP1 (HI) and TP2 (LO); it should be 10.5V ±0.1V.

d. Connect the voltmeter HI input lead to TP6 and the LO input lead to TP1 on the Basic PCB.

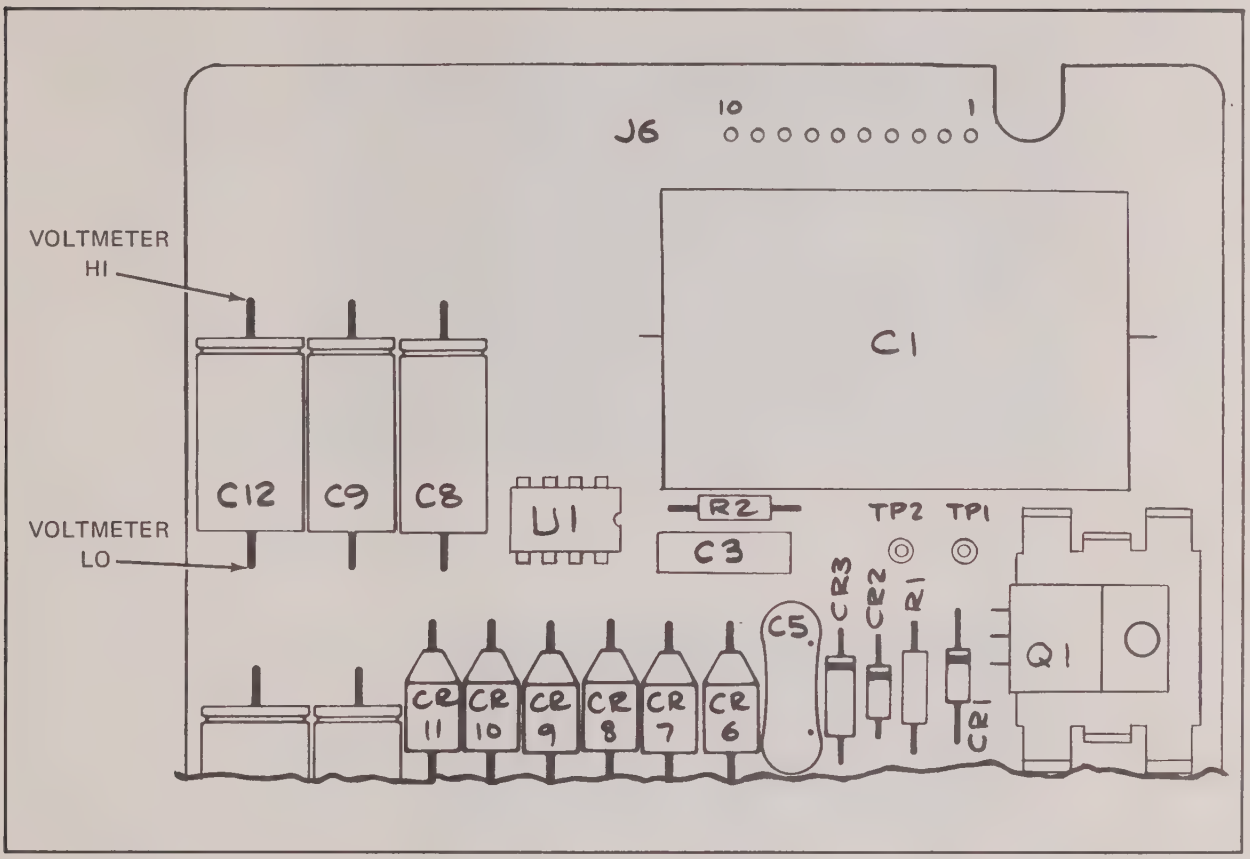

Figure 4-1. TEST EQUIPMENT CONNECTION FOR POWER SUPPLY ADJUSTMENT

e. Adjust the –6.2V ADJ (access through the rear panel) for an indication of 6.2000V ± 100 μV.

4-20. Zero Adjustment

Go To 4-22
STOP: → FIRST

4-21. Perform the zero adjustment on the 2100A as follows:

a. Insure that the 2100A GD and LO terminals are jumpered together.

b. Short the HI and LO INPUT together.

NOTE

Select the 40 mV range when adjusting zero on the 2100A–06 instrument.

c. Adjust the ZERO ADJ (R51) until the 2100A readout display is 00.0 and the minus polarity indication just flashes on and off.

d. Remove the short from between the HI and LO terminals

4-22. Equipment Preparation for Calibration

4-23. The reference junction compensation circuit and the linearizer circuit must be inactivated for the following test. The following procedure describes how to prepare the 2100A for calibration. The jumpers removed in this procedure will be reinstalled later.

a. Remove the retainer screws from the rear panel and slide the chassis out about four inches.

b. Remove the LIN and REF JCT jumpers. They are located near the left rear corner of the Basic PCB, (see Figure 4-2).

c. Connect the 2100A to the proper input power source.

4-24. The following procedure requires the test equipment to be prepared as follows:

a. Connect the test equipment as shown in Figure 4-3.

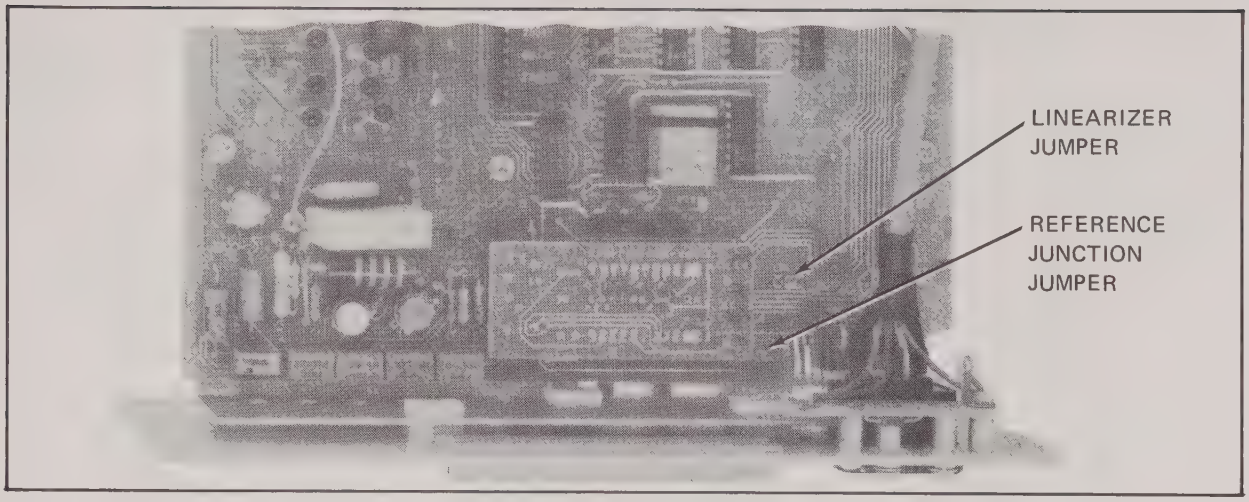

Figure 4-2. LINEARIZER AND REFERENCE JUNCTION JUMPER LOCATIONS.

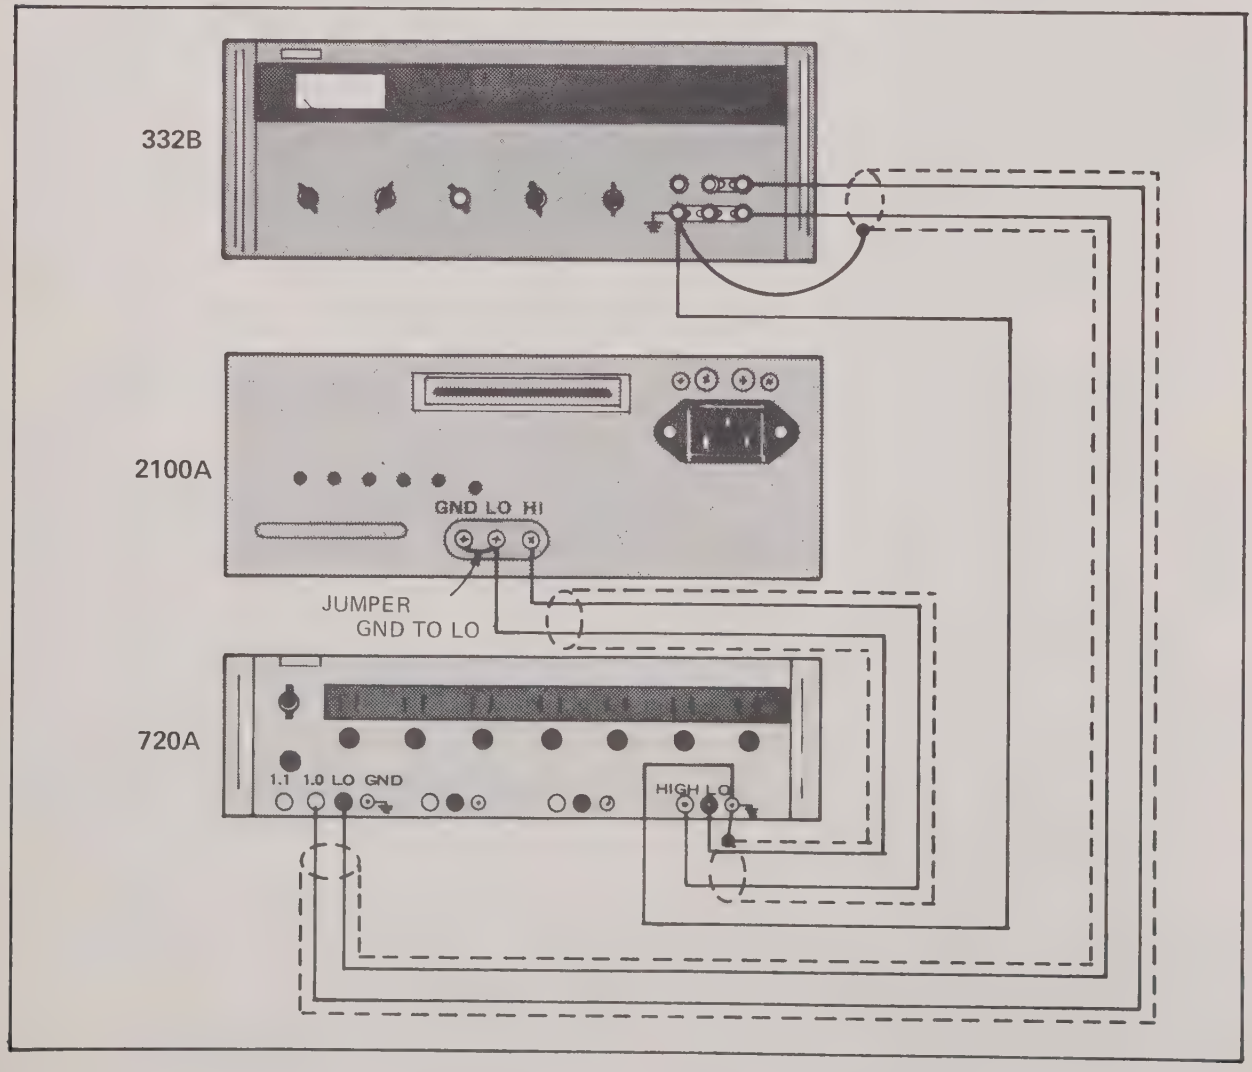

Figure 4-3. CALIBRATION EQUIPMENT CONNECTION

NOTE

Use a shielded pair of copper conductor wires for these connections. Insure that the connections to the 2100A input are tight; loose connections may introduct errors in the calibration. (Do not use aligator clips!) The jumper between the 2100A LO and GD terminals must be installed.

b. Connect a 0.47 microfarad (mylar or polystyrene) capacitor across the voltage divider output terminals (hight to low).

c. Turn the dc voltage calibrator and the 2100A on and allow 30 minutes for the instruments to warm-up.

4-25. Comparator Adjustment (COMP ADJ)

4-26. The input voltage level required depends on the type of thermocouple used. Adjust the controls of the voltage divider to provide a 1000: 1 division ratio. Then adjust the dc voltage calibrator output to obtain the correct input voltage to the 2100A. Table 4-2 provides the required input for each thermocouple type, the required 2100A display, and the tolerance limits for the display. Use the following procedure to make the adjustment.

NOTE

Short the 2100A input and check the display for 00.0 ±1 digit. If the display is not within ±1 digit recheck Zero Adjustment.

a. Apply the negative input, indicated in Table 4-2, that corresponds to the thermocouple type in use. (For the 2100A–06, use the 40 mV range for this adjustment.) (For R or S type, use positive polarity only.)

b. Adjust the COMP ADJ (R50) for a 2100A display within the limits specified.

c. Change the input to positive, as indicated in Table 4-2, and check for a display within the limits listed. If not, adjust the ZERO ADJ (R51) then repeat steps (a) and (b).

d. Remove the dc voltage from the 2100A input and short the HI and LO terminals together.

e. Check for a 2100A display of 00.0 ±1 digit (for the 2100A–06, check on the 40 mv range).

Table 4-2. COMPARATOR CALIBRATION

THERMO-COUPLE TYPE	2100A		
	INPUT	DISPLAY	LIMITS
J°F	+15.5uV	00.6	±1 digit
J°F	−15.5uV	−01.2	±1 digit
K°F	+11.5uV	00.6	±1 digit
K°F	−11.5uV	−01.2	±1 digit
T°F	+11.5uV	00.6	±1 digit
T°F	−11.5uV	−01.2	±1 digit
E°F	+20.0uV	00.6	±1 digit
E°F	−20.0uV	−01.2	±1 digit
R°F	+ 3.4uV	00.6	±1 digit
S°F	+ 3.4uV	00.6	±1 digit
J°C	+30.0uV	00.6	±1 digit
J°C	−30.0uV	−01.2	±1 digit
K°C	+20.0uV	00.6	±1 digit
K°C	−20.0uV	−01.2	±1 digit
T°C	+20.0uV	00.6	±1 digit
T°C	−20.0uV	−01.2	±1 digit
E°C	+30.0uV	00.6	±1 digit
E°C	−30.0uV	−01.2	±1 digit
R°C	+ 3.4uV	00.6	±1 digit
S°C	+ 3.4uV	00.6	±1 digit
40mV	+ 6.2uV	0.006	±1 digit
40mV	− 6.2uV	−0.006	±1 digit
400 mV	+62.0uV	0.06	±1 digit
400 mV	−62.0uV	−0.06	±1 digit

4-27. Positive Full Scale Adjustment (POS CAL)

NOTE

Calibration procedures contained in paragraphs 4-27 through 4-30 may be omitted during routine calibration. These procedures should, however, be done after the instrument has been repaired or when improper instrument operation is suspected.

4-28. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure. Table 4-3 provides the value of the inputs required for each thermocouple type.

a. Apply the positive input, corresponding to the thermocouple type used, to the 2100A INPUT terminals (See Table 4-3).

b. Adjust POS. CAL. for a display within the tolerance limits specified in Table 4-3. (For the 2100A–06, adjust for each type and voltage range.)

Table 4-3. POSITIVE FULL SCALE INPUTS

THERMO-COUPLE TYPE	2100A		ADJUST-MENT LIMITS
	INPUT	DISPLAY	
J°F	+42.919mV	1716.7	±1 digit
K°F	+53.633mV	2896.2	±1 digit
T°F	+20.868mV	1126.8	±1 digit
E°F	+77.712mV	2564.5	±1 digit
R°F	+20.917mV	3765.0	±1 digit
S°F	+18.553mV	3339.6	±1 digit
J°C	+42.919mV	901.3	±1 digit
K°C	+55.833mV	1675.0	±1 digit
T°C	+20.868mV	646.9	±1 digit
E°C	+73.355mV	1467.1	±1 digit
R°C	+21.096mV	3797.3	±1 digit
S°C	+18.704mV	3366.8	±1 digit
40mV	+39.000mV	39.000	±1 digit
400mV	+390.00mV	390.00	±1 digit

4-29. Negative Full Scale Adjustment (NEG CAL)

4-30. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure. Table 4-4 provides the value of the inputs required for each thermocouple type.

a. Apply the negative input, corresponding to the thermocouple type used, to the 2100A INPUT terminals.

b. Adjust NEG. CAL. for a display within the tolerance limits indicated in Table 4-4.

NOTE

For the 2100A–06, select the K type select switch for this adjustment, then check the J, T, and E types. If the display is out of tolerance, recheck Positive Full Scale Adjustment. Adjust –40 and –400 for the corresponding millivolt range.

Table 4-4. NEGATIVE FULL SCALE INPUTS

THERMO-COUPLE TYPE	2100A		ADJUST-MENT OR VERIFI-CATION LIMITS
	INPUT	DISPLAY	
J°F	–6.907mV	–552.6	±1 digit
K°F	–4.859mV	–524.8	±1 digit
T°F	–4.859mV	–524.8	±1 digit
E°F	–7.686mV	–507.3	±1 digit
J°C	–6.907mV	–290.1	±1 digit
K°C	–5.606mV	–336.4	±1 digit
T°C	–5.606mV	–347.6	±1 digit
E°C	–7.686mV	–307.5	±1 digit
40mV	–39.000mV	–39.000	±1 digit
400mV	–390.00mV	–390.00	±1 digit

4-31. Linearized Gain Check

4-32. The following procedure must be done with the linearizer jumper installed. A step-by-step installation procedure for the jumper is provided. Table 4-5 lists the inputs required for each thermocouple type and voltage range. Refer to Figure 4-3 for the correct calibration equipment connections for this procedure.

a. Unplug the line power cord from the 2100A.

b. Remove the chassis retainer screws and slide the chassis out of the case about three inches.

c. Plug the linearizer jumper into the Main PCB (See Figure 4-2).

d. Slide the chassis back into the case and secure it with one screw.

e. Short the INPUT HI and LO terminals together and verify that the display reads 00.0 ±1 digit.

f. Apply the positive and negative inputs, corresponding to the thermocouple type used, indicated in Table 4-5.

g. If paragraphs 4-27 through 4-30 have been skipped, adjust POS. CAL. for a display within the verification limits indicated in Table 4-5. (For the 2100A-06, adjust for each type.)

Table 4-5. LINEARIZED GAIN CHECK

THERMO-COUPLE TYPE	2100A INPUT	2100A DISPLAY	VERIFICATION LIMITS
J°F	+42.919mV	1374.9	±1 digit
K°F	+53.633mV	2400.00	±1 digit
T°F	+20.868mV	732.3	±1 digit
E°F	+77.712mV	1840.0	±1 digit
R°F	+20.917mV	3175.0	±3 digit
S°F	+18.553mV	3175.0	±3 digit
J°C	+42.919mV	760.0	±1 digit
K°C	+55.833mV	1400.0	±1 digit
T°C	+20.868mV	400.0	±1 digit
E°C	+73.355mV	960.0	±1 digit
R°C	+21.096mV	1767.0	±1 digit
S°C	+18.704mV	1768.0	±1 digit
J°F	−6.907mV	−320.0	±1 digit
K°F	−4.859mV	−292.2	±1 digit
T°F	−4.859mV	−320.0	±1 digit
E°F	−7.686mV	−320.0	
J°C	−6.907mV	−162.8	±1 digit
K°C	−5.606mV	−183.0	±1 digit
T°C	−5.606mV	−200.0	±1 digit
E°C	−7.686mV	−161.5	±1 digit

4-33. Open Input Detector Circuit Check

4-34. The 2100A provides a display indication of an open input; i.e., nothing attached to the HI and LO INPUT terminals or an open thermocouple. The following procedure will verify the proper operation of this circuit.

a. Connect a 1k ±5% resistor between the HI and LO INPUT terminals. (For the 2100A–10, select the POINT select switch corresponding to the location of the attached resistor.)

b. The 2100A display should indicate 00.0 ±1 digit.

c. Replace the 1k resistor with a 2k ±5% resistor.

d. The 2100A display should now be blank except for the decimal point and possibly the minus polarity sign.

4-35. Reference Junction Calibration

4-36. REFERENCE JUNCTION JUMPER INSTALLATION

4-37. The reference junction jumper must be installed for the following adjustment procedure. Use the following procedure to install the jumper.

a. Unplug the line cord from the 2100A.

b. Remove the rear panel retaining screws and slide the chassis out of the case about three inches.

c. Plug the reference junction jumper into the Basic PCB (see Figure 4-2 for jumper location).

4-38. TEST EQUIPMENT CONNECTION

NOTE

Calibration procedures contained in paragraph 4-39 step (a) through (k) may be omitted during routine calibration. These steps must be done if U32 is replaced during repair of the instrument.

4-39. The following method of connecting the test equipment to the 2100A is recommended to reduce the possibility of damage to the 2100A caused by inadvertant shorting together of J1A and J1B signals. If an alternate method is used to make the required connections, use extreme care to prevent inadvertant shorting together of terminals of J1A or J1B, other than those required for the procedure. Connect the test equipment as described in the following procedure.

a. Remove the center encircled screw from the lower half of the rear panel.

b. Remove the lower half of the rear panel, (2100A–03 or –06.) Use care when disconnecting the flat cable connection from J5 on the Basic PCB. For the 2100A–10, remove the pcb and unplug the interconnect cable.

CAUTION

Because of the possibility of damage to the contacts of J5, caused by incorrect connector diameter, the external connections should be made to a flat cable connector (J.F. Part No. 376285). The flat cable connector can then be plugged into J5 on the Basic PCB. Refer to Figure 4-4 for a description of the connections.

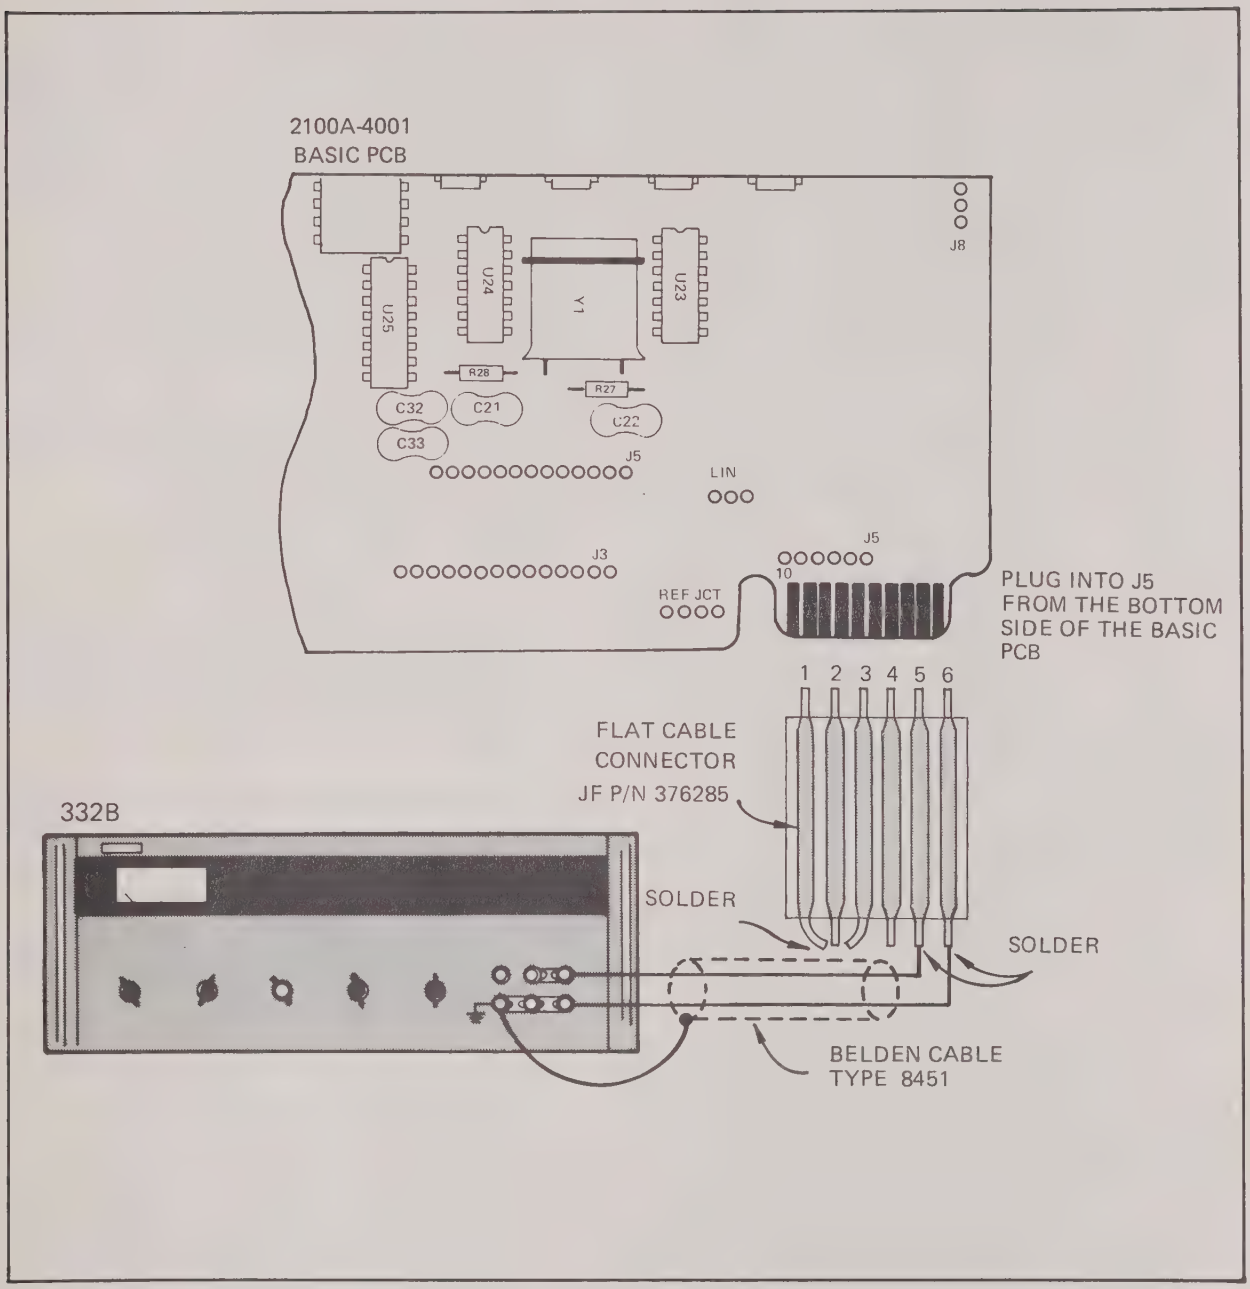

Figure 4-4. TEST EQUIPMENT CONNECTION FOR REFERENCE JUNCTION ADJUSTMENT

c. Slide the chassis back into the case and secure it with one screw. (Insure that the test equipment input is not shorted to the 2100A case.)

d. Attach the line cord to the 2100A and press the POWER switch to the on position.

e. Apply −540.0mV through the flat cable connector, power supply low output to J5 pin 6 and power supply high output to J5 pin 5.

f. Adjust REF JCT (R52) for a 2100A display (see Table 4-6) corresponding to the thermocouple type installed (2100A−03 and −10). For the 2100A−06 the REF JCT adjustment (R52) adjusts for the J type thermocouple. Adjustments R39, R40, R41, R42, and R43 on the Multi-Type PCB adjust for the K type, T type, E type, R type, and S type respectively. Select each type and adjust the display to within the tolerances given in Table 4-6.

Table 4-6. REFERENCE JUNCTION ADJUSTMENT LIMITS

THERMO-COUPLE TYPE	2100A INPUT	2100A DISPLAY	LIMITS
J°F	–540.0mV	77.0	± .05
K°F	–540.0mV	77.0	± .05
T°F	–540.0mV	77.1	± .05
E°F	–540.0mV	77.1	± .05
R°F	–540.0mV	77.0	*
S°F	–540.0mV	76.8/77.0	**
J°C	–540.0mV	24.9	± .05
K°C	–540.0mV	25.0	± .05
T°C	–540.0mV	25.0	± .05
E°C	–540.0mV	25.0	± .05
R°C	–540.0mV	24.9/25.0	**
S°C	–540.0mV	25.0	± .05

* The display may momentarily indicate ± .2

* * The display should alternate between the two indicated values; displaying each about half of the time.

g. Remove the test equipment connections from the 2100A.

h. Remove the reference junction jumper and replace the lower half of the rear panel (2100–03 or –06). For the 2100A–10, replace the Multi-Point PCB.

i. Short the 2100A INPUT HI and LO terminals together (use shorting bars). (Insure that the GD and LO terminals are connected together.)

j. Check 2100A display for 00.0 ±1 digit; if needed adjust ZERO ADJ (R51). For the 2100A–06, select the 40 mV range for the zero adjustment.

k. Remove the short from between the HI and LO INPUT terminals. (Insure that the LO and GD terminals are connected together and reinstall the REF JCT jumper.)

l. Connect the appropriate thermocouple to the HI and LO INPUT terminals (thermocouple wire with red insulation connects to LO). Use a J type thermocouple for the 2100A–06.

m. Insert a calibrated mercury-in-glass thermometer (PRINCO ASTM - 56C) and the thermocouple into a lag bath to a depth of four inches. Allow at least 20 minutes for the temperature to stabilize.

NOTE

A lag bath consists of a Dewar flask (vacuum bottle) filled with water at room temperature.

n. Slide the chassis out of the 2100A case about three inches and locate adjustment R3. (On the 2100A–03 and –06, R3 is located just on the inside of the lower half of the rear panel; on the –10, it is located just ahead of the INPUT terminals on the Multi-Point PCB.

o. Adjust R3 for a 2100A display indication, as corrected by Table 4-7, corresponding to the actual temperature indicated on the calibration thermometer.

Table 4-7. REFERENCE JUNCTION ADJUSTMENT CORRECTIONS

THERMO-COUPLE TYPE	
JF, KF, TF, EF, RF, SF	Adjust to read actual temperature
JC	Adjust to read actual temperature
KC	Adjust to read 0.1°C lower than actual temperature.
TC	Adjust to read actual temperature.
EC	Adjust to read actual temperature
RC	Adjust to read 0.1°C lower than actual temperature.
SC	Adjust to read 0.1°C lower than actual temperature.

4-40. TROUBLESHOOTING

4-41. The following information is designed to aid in troubleshooting the 2100A instruments. The information presented in Table 4-8 provides procedural steps for locating the problem area within the 2100A. Some steps in the proceudre require a decision, either yes or no, the answer to which indicates the next step to be completed. Possible causes for an incorrect response to the tests are provided.

4-42. Instructions for using the troubleshooting guide are as follows:

a. Read the instruction in step 1 and make the yes or no decision.

b. Refer to the column to the right of the step 1 instructions and proceed to the step corresponding to the decision.

c. Execute the instructions in the indicated next step.

NOTE

When an instruction suggests corrective action, locate and correct the fault before proceeding to the next step.

4-43. Replacement of CMOS or PMOS integrated circuits require special handling to prevent damage from static discharge through the devices. These integrated circuits are packaged in conductive foam when shipped and should not be removed until the time of installation. The repair personnel and the work surface should be commonly grounded.

4-44. Use caution when handling any of the following integrated circuits:

On the Basic PCB – U1 thru U4, U6, U7, U22, or U25.

On the DOU PCB - All integrated circuits.

Table 4-8. TROUBLESHOOTING GUIDE

STEP	INSTRUCTION	YES	NO	GO TO
1	Is the line cord plugged in?	3	2	
2	Plug the line cord in.			3
3	Turn the POWER switch on.			4
4	Do the digits and the decimal point of the display light?	19	5	
5	Does only the decimal point light?	6	8	
6	Is the thermocouple input open?	7	8	
7	Connect a thermocouple or shorting bar between the HI and LO terminals.			4
8	Is the voltage level across J12 pin 20 (LO) and J12 pin 16 (HI) between +150 volts and +190 volts?	12	9	
9	Is the line power fuse F1 good?	11	10	
10	Replace the fuse			4
11	Troubleshoot the power supply			4
12	Check the display group containing DS1, DS2, and DS3:			
	If defective, replace the group.			4
	If not defective.			13
13	Is there a 1 MHz TTL square wave at U16 pin 3?	15	14	
14	Troubleshoot the 1 MHz oscillator U25 and Y1			4
15	(Remove the Linearizer jumper). Is there a 1 MHz TTL square wave at U17 pin 6?	16	17	

Table 4-8. TROUBLESHOOTING GUIDE (Cont.)

STEP	INSTRUCTION	YES	NO	GO TO
16	Replace U1 (Basic PCB).			4
17	Check U17 (Basic PCB).			4
18	Check U1 on the Display PCB and U2, U3, U4, U6, U7, and Q1 on the Basic PCB.			4
19	Perform the operational evaluation as described in paragraph 4-13.			20
20	Does the 2100A display indicate the temperature correctly?	21	22	
21	Perform the calibration procedure as described in paragraphs 4-16 through 4-37. *NOTE* *The results of the calibration procedure may point out some fault areas.*			
22	With the Linearizer jumper removed, attach test equipment as described in paragraph 4-36, to provide a −540 mV input to the 2100A.			23
23	Connect an oscilloscope to TP5. Is the signal similar to wave form A in Figure 4-5?	25	24	
24	Connect the oscilloscope to TP4. Is the signal similar to waveform B in Figure 4-5?	27	26	
25	Replace integrated circuit U1 on the Basic PCB			19
26	Use an oscilloscope to check for correct control signals as follows:			
	Connect the scope input to the collector of Q2; Is the signal similar to waveform C?	28	29, 32	
	Connect the scope input to the collector of Q4; Is the signal similar to waveform D?	28	30, 32	
	Connect the scope input to the collector of Q6; Is the signal similar to waveform E?	28	31, 32	
27	Troubleshoot U28, U29, and associated circuitry.			19
28	Troubleshoot U30 and associated circuitry.			19
29	Check for defective Q2, Q16, or U1.			19
30	Check for defective Q4, Q11, Q19, or U1			19
31	Check for defective Q6, Q12, or U1			19
32	Check for the correct reference voltage as described in paragraph 4-19, section d and e.			19

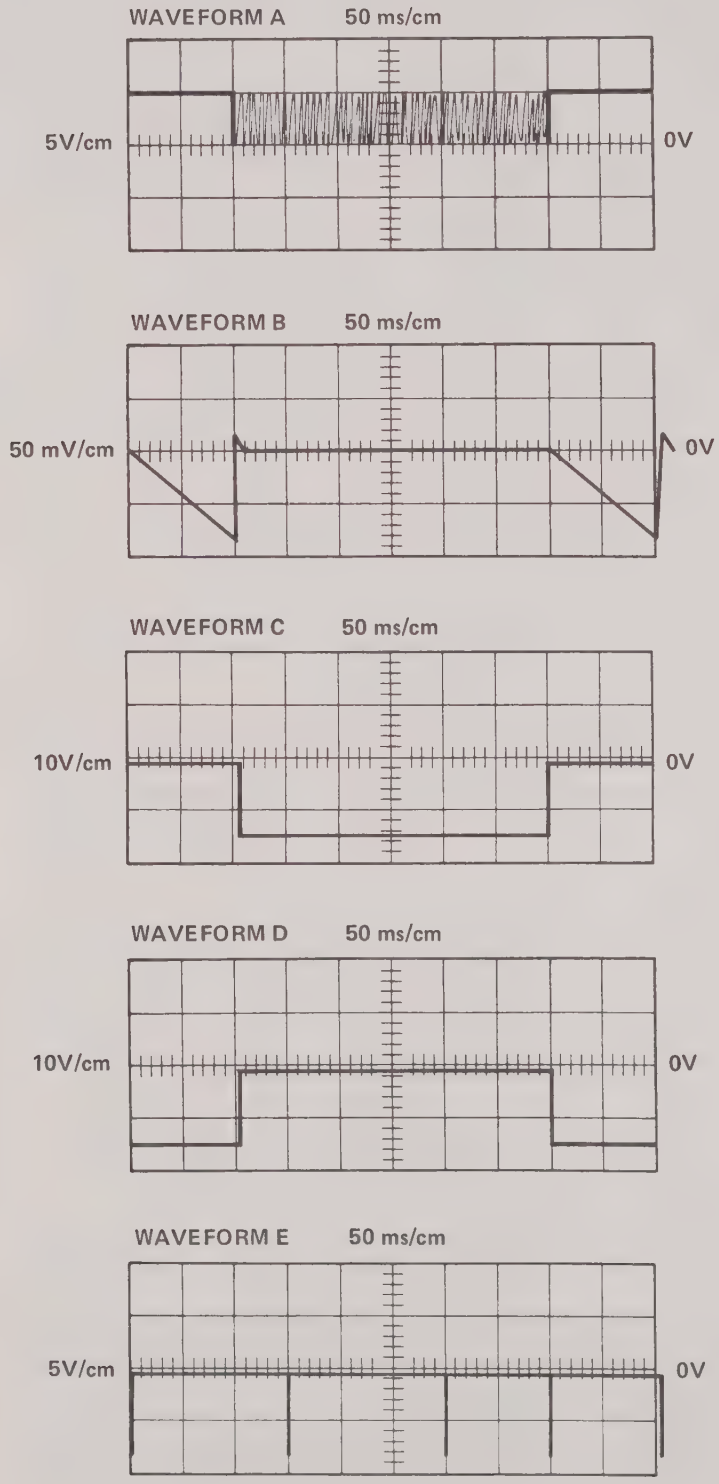

Figure 4-5. TROUBLESHOOTING WAVEFORMS

Section 5
Lists of Replaceable Parts

REFERENCE DESIGNATOR	ASSEMBLY NAME	PAGE
	Basic Unit Assembly (2100A)	5-4
A1	Basic PCB Assembly	5-8
A2	Display PCB Assembly	5-15
A4	Power Supply PCB Assembly	5-17
	Single Point Configuration (2100A–03)	5-19
A3	Single Type PCB Assembly	5-19
	Multi-Type Configuration (2100A–06)	5-24
A5	Type Select PCB Assembly °C	5-26
A5	Type Select PCB Assembly °F	5-30
	Multi-Point Configuration (2100A–10)	5-34
A6	Point Select PCB Assembly	5-35
	Battery Power Supply (2100A–01)	5-37
A7	Battery Charge PCB Assembly	5-38
A8	Digital Output Unit PCB Assembly (2100A-02)	5-39

5-1. INTRODUCTION

5-2. This section contains an illustrated parts breakdown of the instrument. Components are listed alpha-numerically by assembly. Electrical components are listed by reference designation and mechanical components are listed by item number. Each listed part is shown in an accompanying illustration.

5-3. Parts lists include the following information:

a. Reference Designation or Item Number.

b. Description of each part.

c. Fluke Stock Number.

d. Federal Supply Code for Manufacturers. (See Appendix A for Code-to-Name list.)

e. Manufacturer's part Number or Type.

f. Total Quantity per assembly or component.

g. Recommended Quantity: This entry indicates the recommended number of spare parts necessary to support one to five instruments for a period of two years. This list presumes an availability of common electronic parts at the maintenance site. For maintenance for one year or more at an isolated site, it is recommended that at least one in each assembly in the instrument be stocked. In the case of optional subassemblies, plug-ins, etc. that are not always part of the instrument, or are deviations from the basic instrument mode, the REC QTY column lists the recommended quantity of the item in that particular assembly.

5-4. HOW TO OBTAIN PARTS

5-5. Components may be ordered directly from the manufacturer by using the manufacturer's part number, or from the John Fluek Mfg. Co., Inc. factory or authorized representative by using the FLUKE STOCK NUMBER. In the event the part you order has been replaced by a new or improved part, the replacement will be accompanied by an explanatory note and installation instructions, if necessary.

5-6. To ensure prompt and efficient handling of your order, include the following information.

a. Quantity.

b. FLUKE Stock Number.

c. Description.

d. Reference Designation or Item Number.

e. Printed Circuit Board Part Number.

f. Instrument model and Serial number.

2100A FINAL ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	2100A FINAL ASSEMBLY						
	Basic Unit Assembly	2100A					
	Single Point Configuration	2100A–03					
	Multi-Type Configuration	2100A–06					
	Multi-Point Configuration	2100A–10					
	Battery Power Supply	2100A–01					
	Digital Output Unit	2100A–02					

BASIC UNIT ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	BASIC UNIT ASSEMBLY **Figure 5-1**	2100A					
A1	Basic PCB Assembly (Figure 5-2)	372383	89536	372383	1		
A2	Display PCB Assembly (Figure 5-3)	368134	89536	368134	1		
A4	Power Supply PCB Assembly (Figure 5-4)	371534	89536	371534	1		
F1	Fuse, slo-blo, ¼A	166306	71400	MDL	1		
S1	Switch, power	380303	89536	380303	1		
T1	Xfmr, power, 100V (not shown)	397257	89536	397257	1		
T1	Xfmr, power, 115V (not shown)	395582	89536	395582	1		
T1	Xfmr, power, 230V (not shown)	396465	89536	396465	1		
1	Cable Assembly, power	377820	89536	377820	1		
2	Chassis, guard	372276	89536	372276	1		
3	Chassis, side	372284	89536	372284	2		
4	Contact, spring	375360	89536	375360	1		
5	Cover, bottom	372292	89536	372292	1		
6	Cover, top	372300	89536	372300	1		
7	Decal, knob	285221	89536	285221	2		
8	Decal, side	381632	89536	381632	2		
9	Foot, bail stand	292870	89536	292870	4		
10	Frame, bezel	363093	89536	363093	2		
11	Guard, bottom	372235	89536	372235	1		
12	Guard, top	372318	89536	372318	1		
13	Handle, frame	310045	80536	310045	1		

BASIC UNIT ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
14	Handle grip	284836	89536	284836	2		
15	Insert, non-skid foot	302026	89536	302026	4		
16	Insulator, bottom guard	401083	89536	401083	1		
17	Insulator, fastener	372342	89536	372342	11		
18	Insulator, spacer	372334	89536	372334	11		
19	Knob, female	309054	80536	309054	2		
20	Knob, male	309047	89536	309047	2		
21	Panel Insert, DOU	373274	89536	373274	1		
22	Post, jack black	162073	74970	108-903	1		
23	Post, jack red	162065	74970	108-902	1		
24	Pushbutton, green	268862	71590	J61993	1		
25	Rear Panel, upper	372250	89536	327250	1		
26	Shield, display	372326	89536	372326	1		
27	Washer, spring	228981	89536	228981	2		

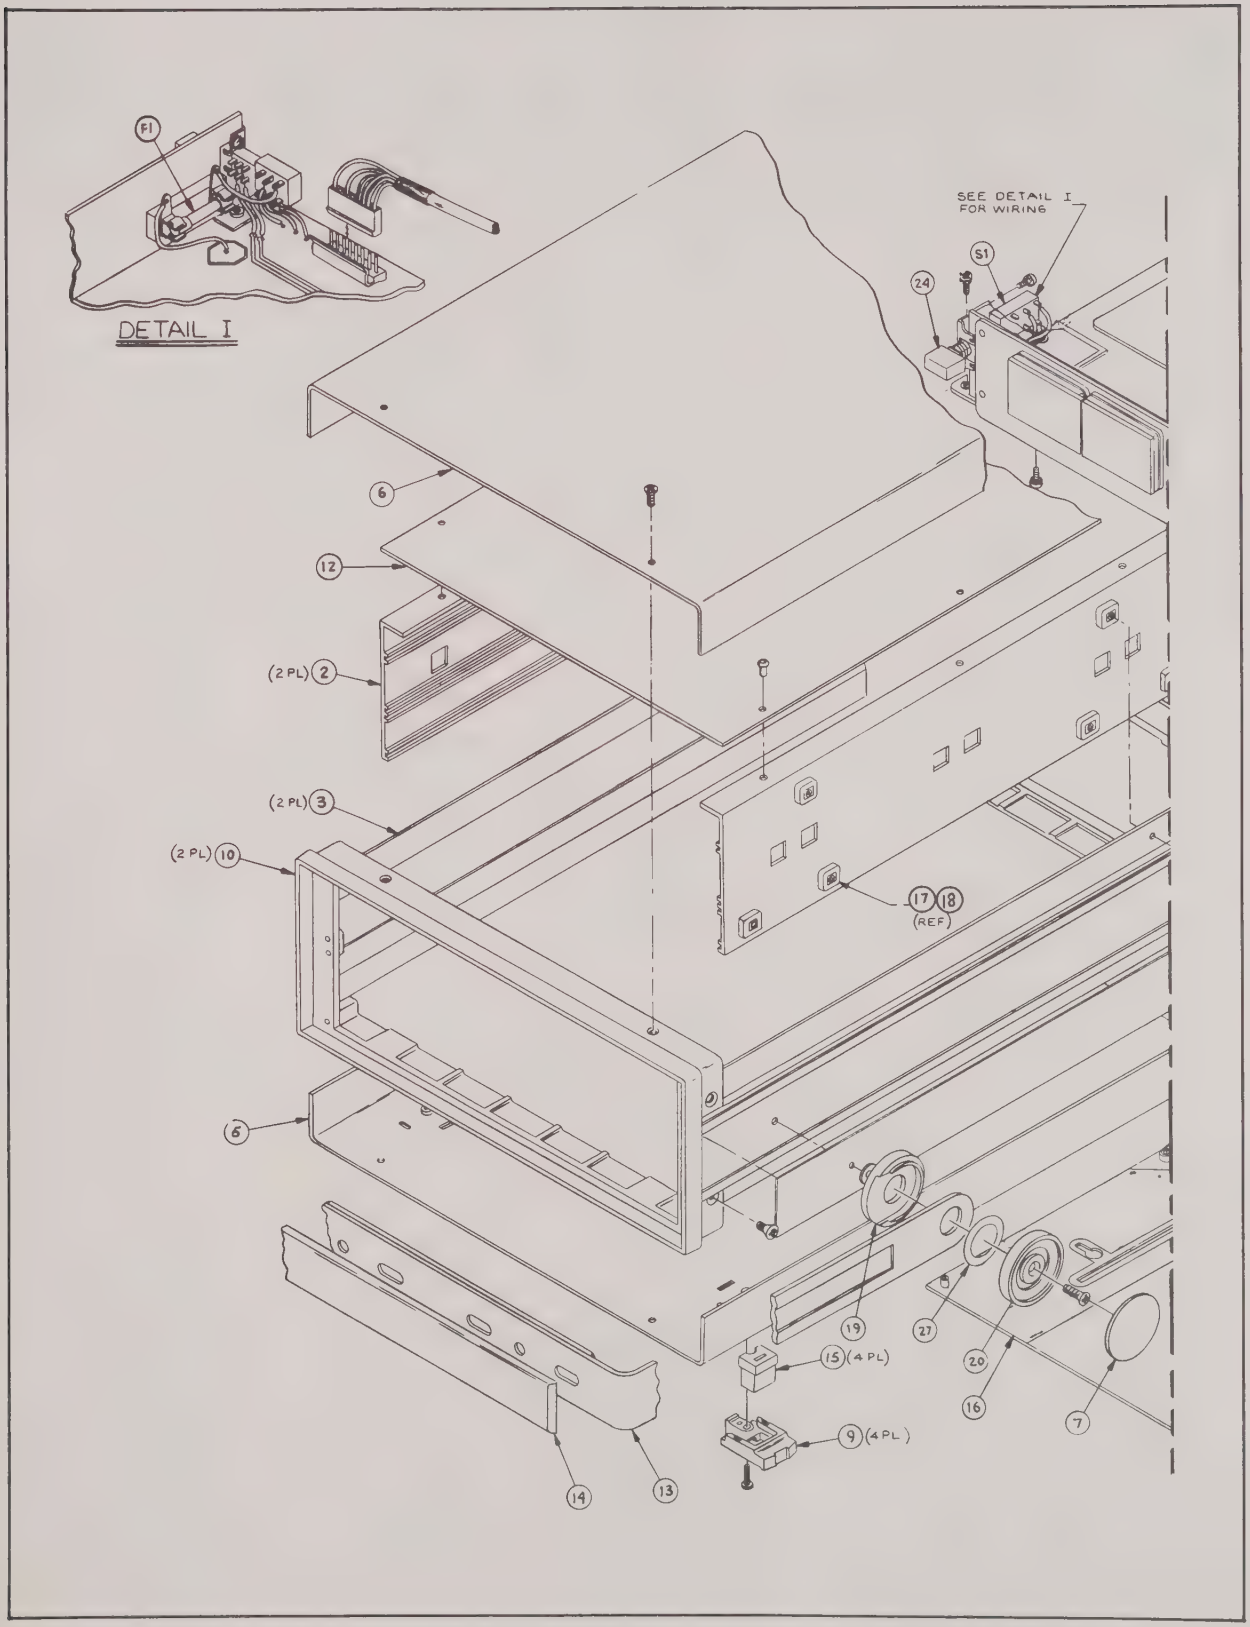

Figure 5-1. BASIC UNIT ASSEMBLY (sheet 1 of 2)

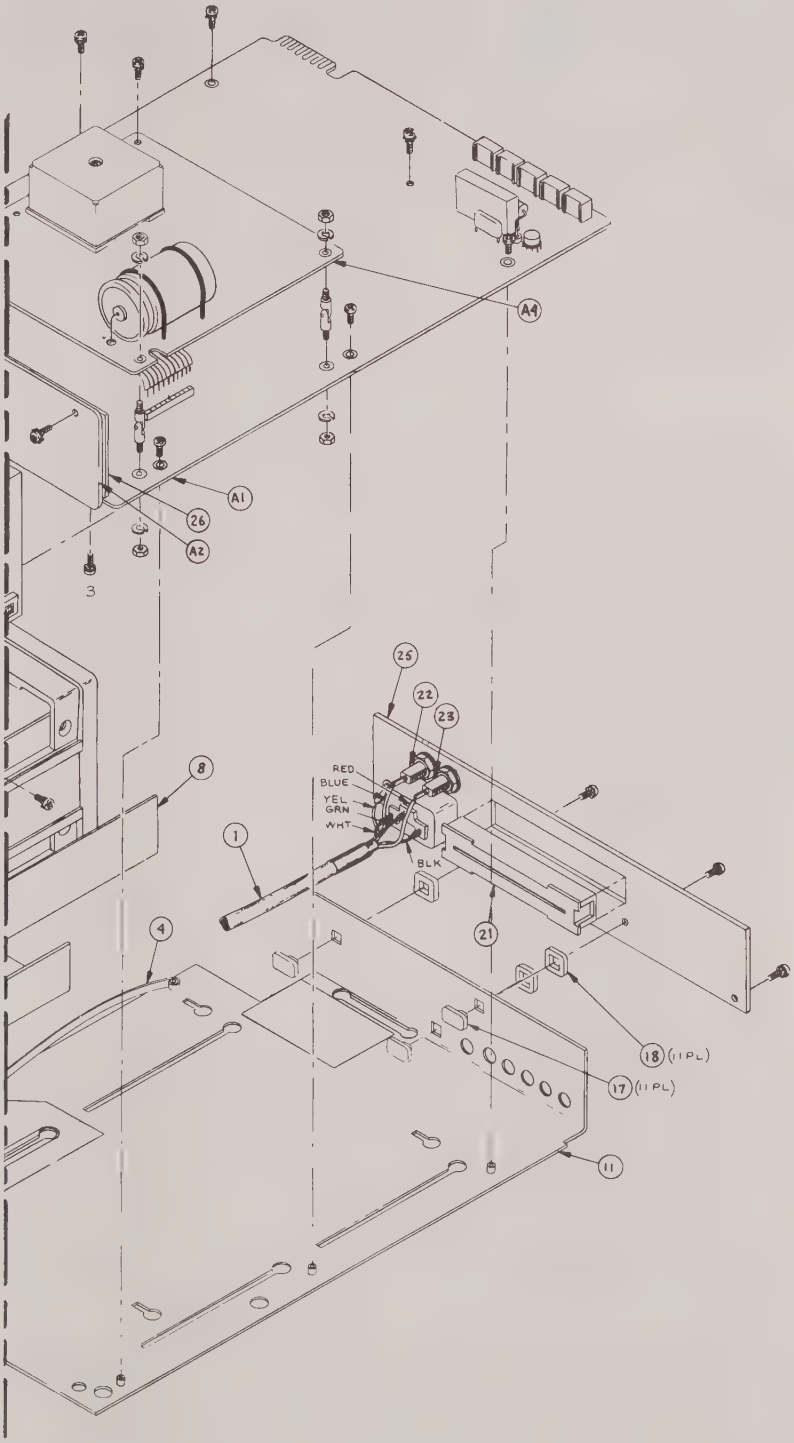

Figure 5-1. BASIC UNIT ASSEMBLY (sheet 2 of 2)

BASIC PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A1	**BASIC PCB ASSEMBLY** **Figure 5-2**	372383	89536	372383	REF		
C1	Cap, plstc, 0.022 uF ±10%, 250V	234484	73445	C220AE/A22K	1		
C2,C5-C8, C11, C13	Cap, Ta, 10 uF ±20%, 20V	330662	12954	D10GS820M	7		
C3	Cap, mica, 82 pF ±5%, 500V	148502	71236	DML5E820J	1		
C4	Cap, mica, 150 pF ±1%, 500V	226134	71236	DML5F151F	1		
C9,C19	Cap, plstc, 2.2uF ±10%, 250V	306522	25403	C280MCH/A2M2	2		
C10,C17	Cap, cer, 0.0012 uF ±10%, 500V	106732	71590	CF122	2		
C12	Cap, plstc, 0.47uF ±10%, 50V	363085	01281	JF86	1		
C14	Cap, mica, 330pF ±5%, 50V	148445	71236	DML5F331J	1		
C15,C16	Cap, mica, 470 pF ±5%, 500V	148429	71236	DM19F471J	2		
C18	Cap, met. poly carb, 0.10 uF ±10%, 400V	289744	25403	C280CF/A10K	1		
C20, C24, C25, C32, C33	Cap, mini, cer, 33pF ±2%	354852	80031	2222-638-10339	5		
C21	Cap, mica, 15pF ±5%, 500V	148569	71263	DM15F150J	1		
C22	Cap, mica, 68 pF ±5%, 500V	148510	71263	DM15F680J	1		
C23, C30, C31	Cap, mica, 100 pF ±1%, 500V	226126	71263	DM15F101F	3		
C34, C37	Cap, mica, 0.22 uF ±20%, 50V	309849	71590	CW30C224K	2		
C35	Cap, mica, 100 pF ±5%, 500V	148494	71263	DM15F101J	1		
C36	Cap, mini, cer, 150 pF ±2%, 100V	362764	80031	2222-638-34151	1		
CL1	Diode, fet,	348482	17856	E505	1		

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
CR1	Diode, zener	113316	07910	1N748	1		
CR2 thru CR7, CR11, CR12, CR14, CR18	Diode, Si, Hi-speed switching	203323	07918	T08253	10		
CR8, CR10, CR13	See Q11						
CR9	Diode, zener	159798	04713	1N751	1		
CR10, CR13	See Q11						
CR15, R45, R46	Zener, REF Set	377283	89536	377283	1		
CR16, CR17	Diode, Rect, Si	116111	05277	1N4817	2		
CR20	Diode, Rect, Si.	343491	04713	1N4002	1		
Q1 thru Q5, Q10	Xstr, Si, NPN	218396	04713	2N3904	6		
Q6	Xstr, Si, NPN	159855	07910	CS23030	1		
Q7	Xstr, power, Si, PNP	325753	03508	D45C5	1		
Q8	Xstr, Si, PNP	352369	04713	2N4403	1		
Q9	Xstr, Si, PNP	195974	04713	2N3906	1		
Q11, Q12, Q16, thru Q19	Xstr, FET, N-channel	376475	12040	SF50072	10		
CR8, CR10 CR13	Xstr, used as Diode	376475	12040	SF50072	REF		

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
Q13	Xstr, FET, selected	402024	89536	402024	1		
Q14, Q15	Xstr, FET, N-channel	288324	12040	SF50070	2		
R1, R4	Res, comp, 4.7k ±5%, ¼W	148072	01121	CB4725	2		
R2	Res, comp, 68k ±5%, ¼W	148171	01121	CB6835	1		
R3	Res, comp, 27k ±5%, ¼W	148148	01121	CB2735	1		
R5, R10	Res, comp 47k ±5%, ¼W	148163	01121	CB4735	2		
R6, R38	Res, comp, 100k ±5%, ¼W	148189	01121	CB1045	2		
R7, R8	Res, comp, 2.2k ±5%, ¼W	148049	01121	CB2225	2		
R9	Res, comp, 43k ±5%, ¼W	193367	01121	CB4335	1		
R11, R12, R16	Not used						
R13	Res, comp, 1k ±5%, ¼W	148023	01121	CB1025	1		
R14	Res, met flm, 332k ±1%, 1/8W	289504	91637	MFF1-83323F	1		
R15	Res, comp, 3m ±5%, ¼W	221952	01121	CB3055	1		
R17	Res, met flm, 49.9 ±1%, 1/8W	305896	91637	MFF1-849R9F	1		
R18	Res, comp, 3.3k ±5%, ¼W	148056	01121	CB3325	1		
R19	Not used						
R20, R26	Res, comp, 1.5k ±5%, ¼W	148031	01121	CB1525	2		
R21	Res, comp, 75 ±5%, ¼W	246736	01121	CB7505	1		
R22	Res, comp, 120k ±5%, ¼W	193458	01121	CB1245	1		

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R23, R24, R25, R27, R34, R56, R58	Res, comp, 10k ±5%, ¼W	148106	01121	CB1035	7		
R28	Res, comp, 1m ±5%, ¼W	182204	01121	CB1055	1		
R29	Res, met flm, 30.6k ±1%, 1/8W	281121	01637	MFF1–88062F	1		
R30	Res, met flm, 182k ±1%, 1/8W	241091	91637	MFF1-81823F	1		
R31	Res, met flm, 402 ±1%, 1/8W	289611	91637	MFF184020F	1		
R32, R33	Res, met flm, 10.02k ±1%, 1/8W	352245	91637	MFF1-8-10-0210-1PCT	2		
R35	Res, comp, 300 ±5%, ¼W	348276	01121	CB3015	1		
R36	Res, comp, 16k ±5%, ¼W	221606	01121	CB1635	1		
R37	Res, fxd, sub-mini, 22, 1k, ±0.1%, ¼W	385500	54294	SP21D5102B	1		
R39	Res, met flm, 10 ±0.1%, 1/8W	375501	91637	MFF1-8100B	1		
R40	Res, comp, 10m ±5%, ¼W	194944	01121	CB1065	1		
R41	Res, comp, 33k ±5%, 2W	158964	01121	HB3335	1		
R42, R43	Res, matched set	412056	89536	412056	2		
R44	Res, met flm, 24.9k ±1%, 1/8W	290106	91637	MFF1-82492F	1		
R47	Res, met flm, 61.9k ±1%, 1/8W	237230	91637	MFF1-86192F	1		
R48	Res, sub-mini, ww, 20k ±0.1%, ¼W	385591	54294	SP21D5203B	1		
R49	Res, sub-mini, ww, 10k ±0.1%, ¼W	385534	54294	SP21D5103B	1		
R50, R51	Res, var, cer, 100k ±10%, ½W	288308	71450	360S104K	2		
R52	Res, var, cer, 50 ±10%, ½W	285122	71450	360S500A	1		
R53	Res, var, cer, 500 ±10%, ½W	291120	71450	360S501A	1		

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R54	Res, var, cer, 100 ±10%, ½W	285130	71450	360S101A	1		
R57	Res, comp, 470k ±5%, ¼W	188441	01121	CB4745	1		
R60	Res, comp, 5.1m ±5%, ¼W	296467	01121	CB5155	1		
U1	IC, C-MOS, custom	354985	89536	354985			
U2,U3, U4	IC, C-MOS, Quada, input NAND gate	355198	95303	CD4011AE	3		
U5,U10, U15	IC, Dual, JK master-slave Flip-Flop	293043	01295	SN74107N	3		
U6,U25	IC, COS-MOS, Hex, Buff or /Inverter	381848	95303	CD4049AE	2		
U7	IC, MOS, Dual "D" Type Flip-Flop	340117	04713	MC14013L	1		
U8	Res, network, 47k ±5%, ¼W	381996	56289	Type 916C	1		
U9,U16	IC, TTL, Hex Inverter	292979	01295	SN7404N	2		
U11	IC, TTL, Triple, 3-input positive NAND gate	292995	01295	SN7410N	1		
U12, U17	IC, TTL, Quad, 2-input NAND gate	292953	01295	SN7400N	2		
U13	IC, TTL,Quad, 2-input, positive AND gate	292987	01295	SN7408N	1		
U14, U18	IC, TTL, Quad, 2-input, positive NAND gate	292961	01295	SN7403N	2		
U19	IC, TTL, 5-Bit Shift Register	293399	01295	SN7496N	1		
U20	IC, TTL, 4-Bit Binary Counter	320739	01295	SN7493N	1		
U21	IC, TTL, MSI, Counter, Multiplier, 6-Bit Binary Rate	370692	01295	SN7497N	1		
U22	IC, ROM, for °C	370023	89536	370023	1		
	IC, ROM, for °F	370015	89536	370023	1		
U23	IC, TTL, Dual 4-input positive NAND Buffer	293001	01295	SN7420N	1		
U24	IC, TTL, Quad, 2=Input Positive, OR gate	342709	01295	SN7432N	1		

BASIC PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U26	Res, network	375097	71450	TYPE 760	1		
U27, U33	IC, Op-Amp	271502	12040	LM 301A	2		
U28	IC, Voltage Comparator	352195	12040	LM311N-8	1		
U29	IC, Op-Amp, J-FET	357830	12040	LH0042C	1		
U30	IC, Op-Amp	284760	12040	LM308H	1		
U31, U32	IC, Op-Amp	225961	34333	SG-8023	2		
Y1	Crystal, 1 MHz	375493	75378	Type H17	1		
1	Connector, PCb	376384	27264	09-52-3101	1		
2	Socket, IC	376236	23880	TSA-3100-24W	1		
3	Socket, IC	376244	23880	TSA-3100-40W	1		
4	Socket	392944	00779	3-332070	9		

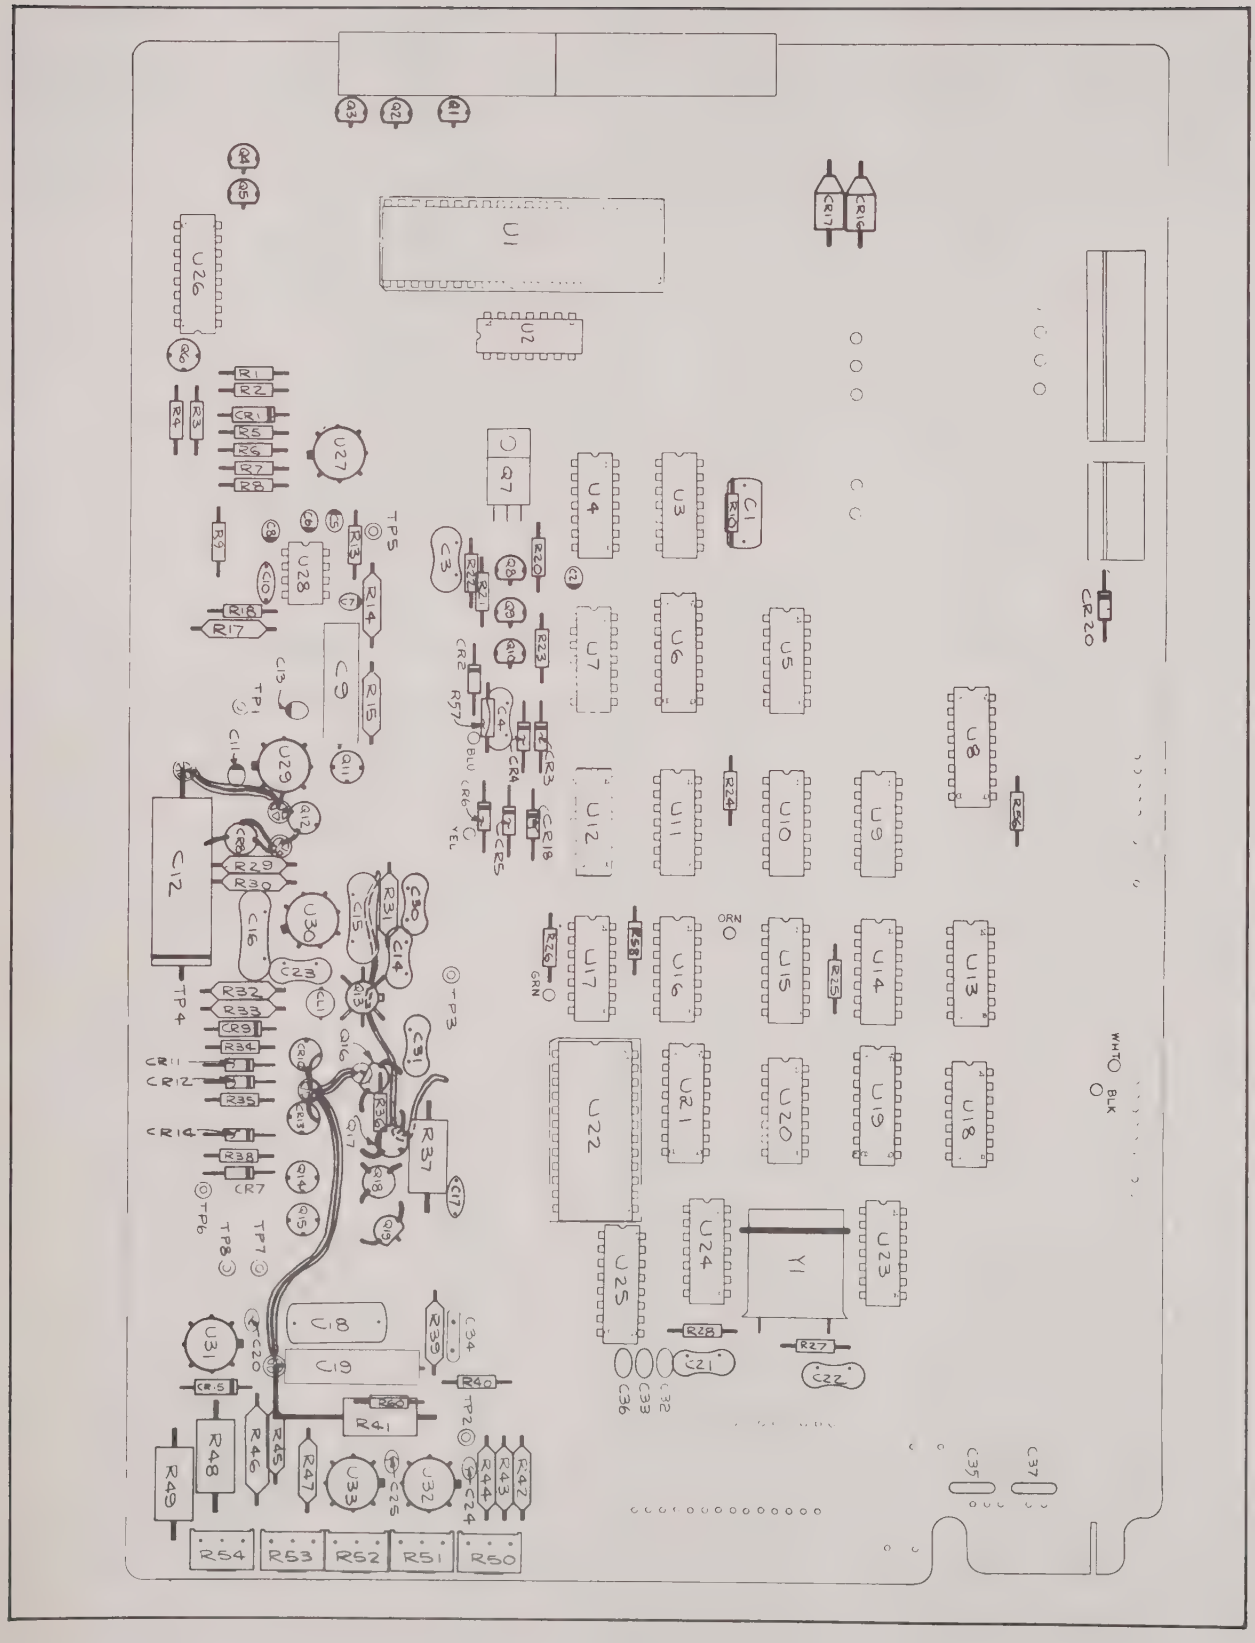

Figure 5-2. BASIC PCB ASSEMBLY

DISPLAY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A2	**DISPLAY PCB ASSEMBLY** **Figure 5-3**	368134	89536	368134	REF		
DS1, DS2, DS3	Display	370718	zzzzz	SP353	1		
DS4 DS5, DS6	Display	370726	zzzzz	SP354	1		
P1, P2	Conn, PCB Interconnect	376400	27264	-9-64-1101	2		
Q1 thru Q6	Xstr, Si, NPN	370684	04713	MPS A42	6		
Q7 thru Q12	Xstr, Si, PNP	266619	07263	PN4888	6		
Q15, Q16	Xstr, Si, NPN	245480	04713	ST 81011	2		
Q18	Xstr, Si, NPN	159855	07910	CS23030	1		
R3	Res, comp, 6.2k ±5%, ¼W	221911	01121	CB6225	1		
R4	Res, comp, 3.9k ±5%, ¼W	148064	01121	CB3925	1		
R5	Res, comp, 18k ±5%, ¼W	148122	01121	CB1835	1		
R6	Res, comp, 10k ±5%, ¼W	148106	01121	CB1035	1		
U1	IC, TTL, High Voltage, 7-segment Driver Decoder	330837	zzzzz *	DD700	1		
U2	Res, network, 16 peices	375089	11236	Type 760	1		
	Socket, IC	376202	zzzzz	CS353	2		

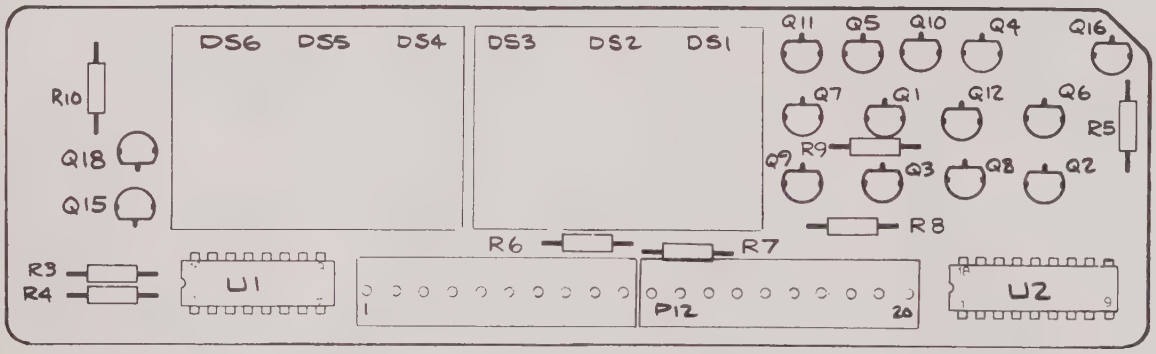

Figure 5-3. DISPLAY PCB ASSEMBLY

POWER SUPPLY PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A4	**POWER SUPPLY PCB ASSEMBLY** **Figure 5-4**	371534	89536	371534	REF		
C1	Cap, elect, 4000 uF −10/+100%, 25V	370734	25088	B41010-2200115	1		
C2	Cap, fxd, poly-film, 0.01uF ±10%, 250V	325548	73445	C280AE/A10K	1		
C3	Cap, plstc, 0.022 uF ±10%, 250V	234484	73445	C280A+/A22K	1		
C4	Cap, plstc, 0.047 uF ± 250V	184366	73445	C280A+/A470K	1		
C5	Cap, mica, 1000 pF ±5%, 500V	148387	71236	DM19F102J	1		
C6	Cap, elect, 3 uF −10/+50%, 250V	306555	56289	500D305F250-DC7	1		
C7	Cap, elect, 150 uF - 10/+50%, 16V	186296	73445	ET151X016A5	1		
C8,C9	Cap, elect, 100 uF −10/+50%, 25V	192914	73415	ET101X025A5	2		
C12	Cap, elect, 470 uF −10/+50%, 6.3V	187773	73445	ET471X6P3A6	1		
C13	Cap, fxd, cer, 0.0012 uF ±10%, 500V	106732	71590	CF122	1		
CR1	Diode, zener, 6.8V	260695	07910	1N754A	1		
CR2	Diode, Si, 150 mA	203323	07910	TD8253	1		
CR3	Diode, zener	386557	07910	1N960B	1		
CR4	Diode, Si, 1 Amp 600 piv	112383	05277	1N4822	1		
CR5 thru CR11	Diode, Si, 1 Amp, 100 piv	116111	05277	1N4817	7		
Q1, Q4, Q5	Xstr, Si, PNP, pwr	325753	09214	D45C5	3		
Q2	Xstr, Si, PNP	352369	07263	2N4403	1		
Q3	Xstr, Si, PNP	195974	04713	2N3906	1		
R1	Res, comp, 47 ±5%, ¼W	147892	01121	CB4705	1		
R2	Res, comp, 680 ±5%, ¼W	148007	01121	CB6815	1		
R3, R7	Res, comp, 100 ±5%, ¼W	147926	01121	CB1015	2		
R4	Res, var, cermet, 200 ±10%, ½W	275743	71450	360%201A	1		

POWER SUPPLY PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R5, R6	Res, comp, 470 ±5%, ¼w	147983	01121	CB4715	2		
T1	Xfmr, Inverter	377929	89536	377929	1		
U1	IC, Linear Voltage Regulator	363861	49956	RC4195 DN	1		
	Cable, flex	376293	26394	100F40182A10	1		
	Heat sink	352765	13103	6107B14	1		
	Strap, rubber round	104794	98159	2829-115-3	1		

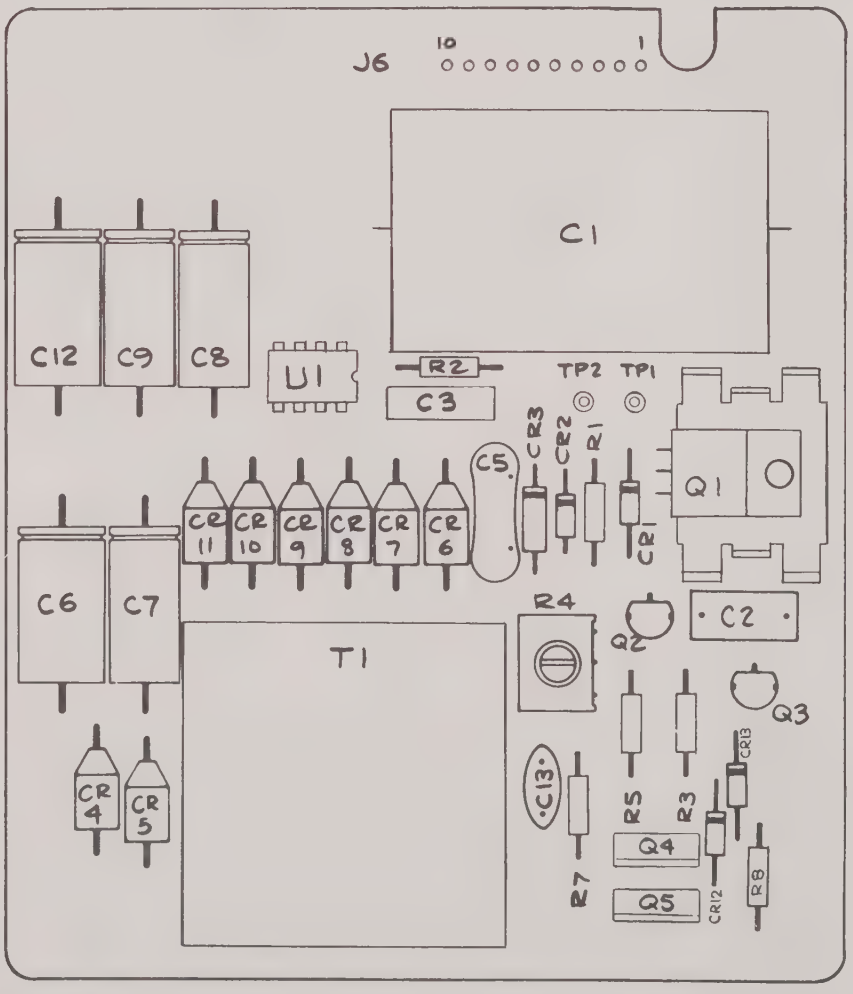

Figure 5-4. POWER SUPPLY PCB ASSEMBLY

SINGLE INPUT CONFIGURATION

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	SINGLE INPUT CONFIGURATION Figure 5-5	2100A-03					
1	Decal, AC Power, Front Panel	381152	89536	381152	1		
2	Decal, Front Panel Basic	380873	89536	380873	1		
3	Insert, Front Panel	372359	89536	372359	1		
4	Front Panel, Finished	397653	89536	397653	1		
5	Single Input PCB	405316	89536	405316	1		
A3	Single Type PCB Assembly Figure 5-6						
TYPE EC		415893	89536	415893			
R1	Res, var, 100 ±20%, ½W	278923	11236	190PC101B	1		
R2	Res, fxd, ww, sub-mini, 11.35k ± 0.1%	385542	54294	SP21DS - 113 50B	1		
R3	Res, met flm, 7.68k ±1%, 1/8W	370999	91637	MFF1-87R68F	1		
R4	Res, met flm, 37.01k ±0.1%, 1/8W	386425	91637	MFF1-837R01B	1		
R5	Res, met flm, 19.901k ±0.1%, 1/8W	386334	91637	MFF1-819R90B	1		
TYPE EF		415836	89536	415836			
R1	Res, var, 200 ±20%, ¼W	284711	11236	190PC 201B	1		
R2	Res, fxd, ww, sub-mini, 19.41k ±0.1%	385583	54294	SP21D5-19410B	1		
R3	Res, met flm, 12.4k ±1%, 1/8W	261644	91637	MFF1 - 812R4F	1		
R4	Res, met flm, 95.52k ±1%, 1/8W	386417	91637	MFF1-895R52B	1		
R5	Res, met flm, 19.90k ±0.1%	386334	91637	MFF1-819R90B	1		
TYPE JC		415836	89536	415836			
R1	Res, var, 100 ±20%, ½W	267823	11236	190PC 201B	1		
R2	Res, fxd, ww, sub-mini, 11.97k ±0.1%	385559	54294	SP105-11970B	1		
R3	Res, met flm. 8.06k ±1%, 1/8W	294942	91637	MFF1-88061F	1		
R4	Res, met flm, 44.563k ±0.1%, 1/8W	386367	91637	MFF1-8442563B	1		
R5	Res, met flm, 23.445k ±0.1%, 1/8W	386300	91637	MFF1-823R445B	1		
TYPE JF		415810	89536	415810			
R1	Res, var, 200 ±20%, ½W	284711	11236	190PC 201B	1		
R2	Res, fxd, ww, sub-mini, 23.78k ±0.1%	385609	54294	SP21D5- 237 80B	1		

SINGLE INPUT CONFIGURATION (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R3	Res, met flm 14.7k ±1%' 1/8W	226225	91637	MFF1-81471F	1		
R4	Res, met flm, 121k ±0.1%, 1/8W	370817	91637	MFF1-81213B	1		
R5	Res, met flm, 23.445 k ±0.1%, 1/8W	386300	91637	MFF1-823R 445B	1		
TYPE KC		415885	89536	415885			
R1	Res, var, 100 ±20%, ½W	267823	11236	190PC101B	1		
R2	Res, fxd, ww, sub-mini, 17.55k ±0.1%	385567	54294	SP21D5-12550B	1		
R3	Res, met flm, 11.5k ±1%, 1/8W	267138	91637	MFF1-81151F	1		
R4	Res, met flm, 55.947k ±0.1%, 1/8W	386383	91637	MFF1-855R942B	1		
R5	Res, met flm, 29.931k ±0.1%, 1/8W	386318	91632	MFF1-829R931B	1		
TYPE KF		415828	89536	415828			
R1	Res, var, 200 ±20%, ½W	284711	11236	190PC 201B	1		
R2	Res, fxd, ww, sub-mini, 32.38k ±0.1%	385617	54298	SP21D5=32380B	1		
R3	Res, met flm, 21k ±1%, 1/8W	229484	91637	MFF1-8213F	1		
R4	Res, met flm, 149.0k ±0.1% 1/8W	386375	91637	MMF1-814940B	1		
R5	Res, met flm, 29.931k ±0.1%, 1/8W	386318	91637	MFF1-8238931B	1		
TYPE RC		415901	89536	415901			
R1	Res, var, 1k ±20%, ½W	267856	11236	190PC102B	1		
R2	Res, fxd, ww, sub-mini, 110.09k ±01%	385633	54942	SP21D5-11DR 09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFF1-87151F	1		
R4	Res, met flm, 368,9k ±0.1%, 1/8W	386441	91632	MFF1-8368 R9B	1		
R5	Res, met flm, 204.5k ±0.1%, 1/8W	393793	91637	MFF1-8204 R5B	1		

SINGLE INPUT CONFIGURATION (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
TYPE RF		415844	89536	415844			
R1	Res, var, 1k ±20%, ½W	267856	11236	190 PC 102 B	1		
R2	Res, fxd, ww, sub-mini, 110.09k ±0.1%	385633	54294	SP21D5-110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFF1-871R5F	1		
R4	Res, met flm, 788.6k ±0.1%, 1/8W	386433	91637	MFF1-878886B	1		
R5	Res, met flm, 204.5 ±0.1%, 1/8W	393793	91637	MFF1-8204R5B	1		
TYPE SC		415919	89536	415919			
R1	Res, var, 1k ±20%'½W	267856	11236	190 PC 102B	1		
R2	Res, fxd, ww, sub-mini, +10.09k ±0.1%	385633	54294	SP21D5-110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFF1-871R51F	1		
R4	Res, met flm, 366.7k ±0.1%, 1/8W	386466	91637	MFF1-836687B	1		
R5	Res, met flm, 202.6k ±0.1%, 1/8W	386342	91637	MFF1-8202R6B	1		
TYPE SF		415851	89536	415851			
R1	Res, var, 1k ±20%, ½W	267856	11236	190PC102B	1		
R2	Res, fxd, ww, sub-mini, 110.09k ±0.1%	385633	54294	SP21D5-110R09B	1		
R3	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFF1- 87151F	1		
R4	Res, met flm, 799.5k ±0.1%, 1/8W	386458	91637	MFF1 -8799 R51B	1		
R5	Res, met flm, 202.6k ±0.1%, 1/8W	386342	91637	MFF1-8202 R6B	1		
TYPE TC		415869	89536	415869			
R1	Res, var, 100 ±20%, ½ W	267823	11236	190PC 101B	1		

SINGLE INPUT CONFIGURATION (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R2	Res. fxd, ww, sub-mini, 18.17k ±0.1%	385575	54298	SP21DS-18170B	1		
R3	Res, met flm. 11.5k ±0.5%, 1/8W	267138	91637	MFF1-81125D	1		
R4	Res, met flm. 55.09k ±0.1%, 1/8W	404038	91637	MFF1-855R09B	1		
R5	Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFF1-829R 784B	1		
TYPE TF		415802	80536	415802			
R1	Res, var, 200 ±20%, ½W	284711	11236	190PC201B	1		
R2	Res, fxd, ww, sub-mini, 32.38k ±0.1%	385617	54294	SP21D5-32380B	1		
R3	Res, met flm, 21k ±1%, 1/8W	229484	91637	MFF1-8212F	1		
R4	Res, met flm, 137.04k ±0.1%, 1/8W	404046	91637	MFF1-855R09B	1		
R5	Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFF1-829 R784B	1		

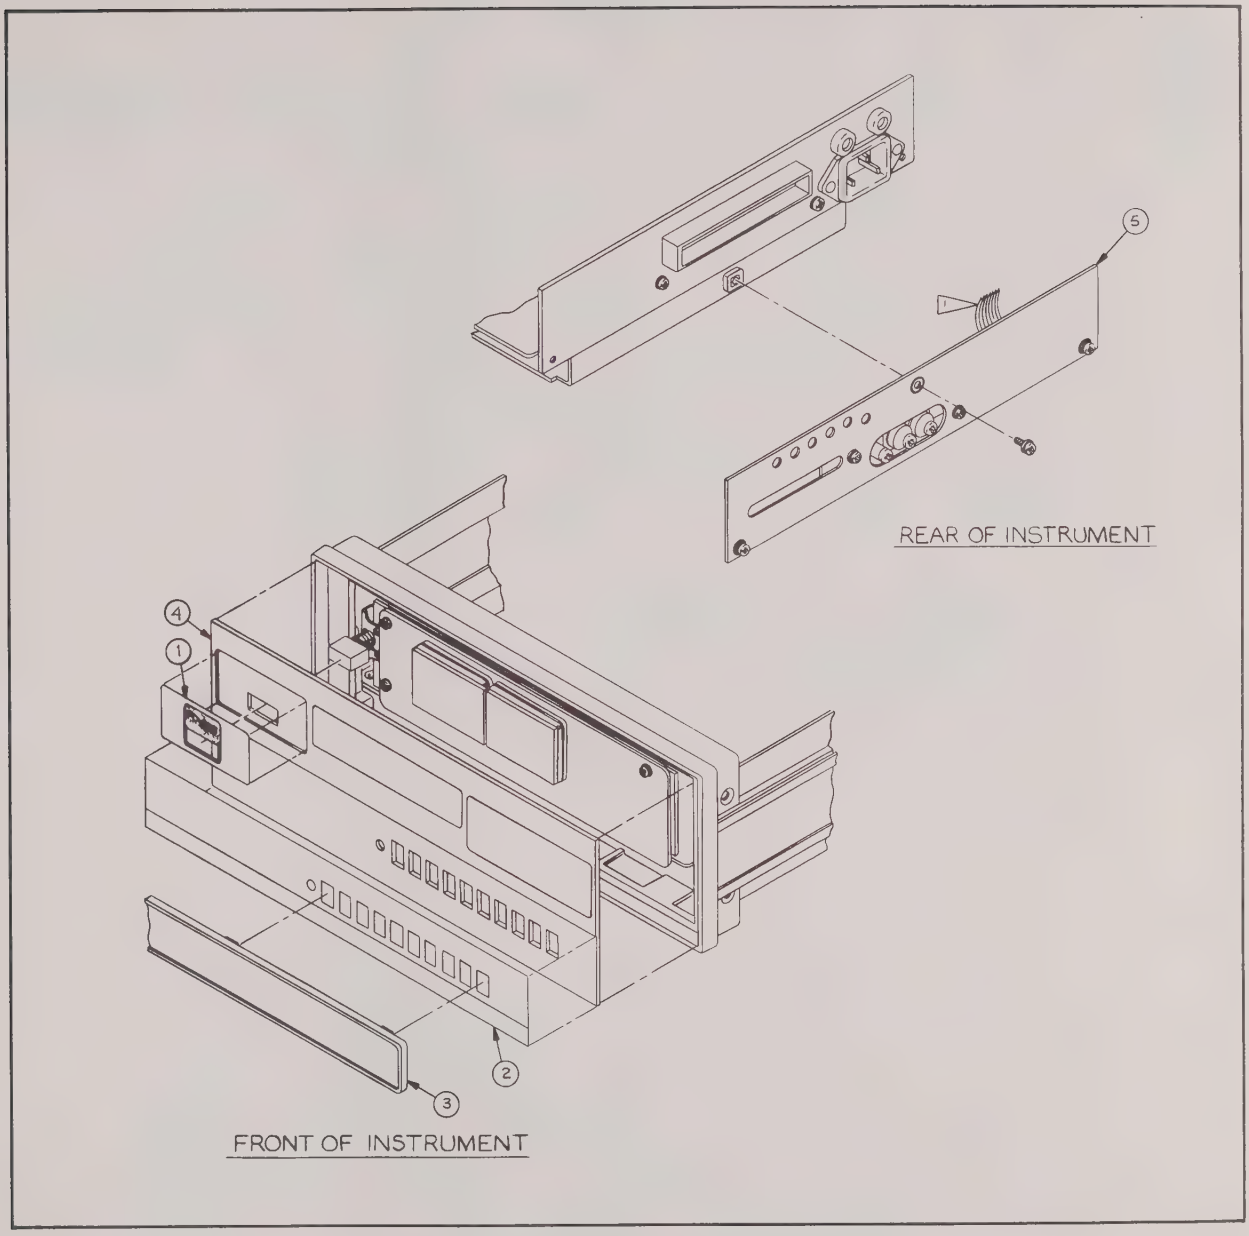

Figure 5-5. SINGLE INPUT CONFIGURATION

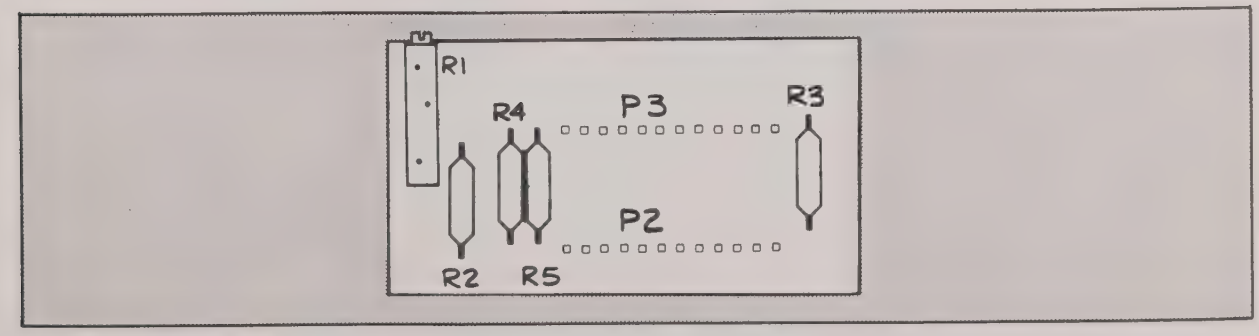

Figure 5-6. SINGLE TYPE PCB ASSEMBLY

MULTI-TYPE CONFIGURATION

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	MULTI-TYPE CONFIGURATION **Figure 5-7**	2100A–06					
1	Decal, AC Power, Front Panel	381152	89536	381152	1		
2	Decal, Type Select, Front Panel	380857	89536	380857	1		
3A	Decal, Type 06C	381210	80536	381210	1		
3B	Decal, Type 06F	381202	89536	381202	1		
41	Front Panel, Finished	397653	80536	397653	1		
5	Single Input Assembly	405316	89536	405316	1		
6A	Static ROM °C	370023	89536	370023	1		
6B	Static ROM °F	370015	89536	370015	1		

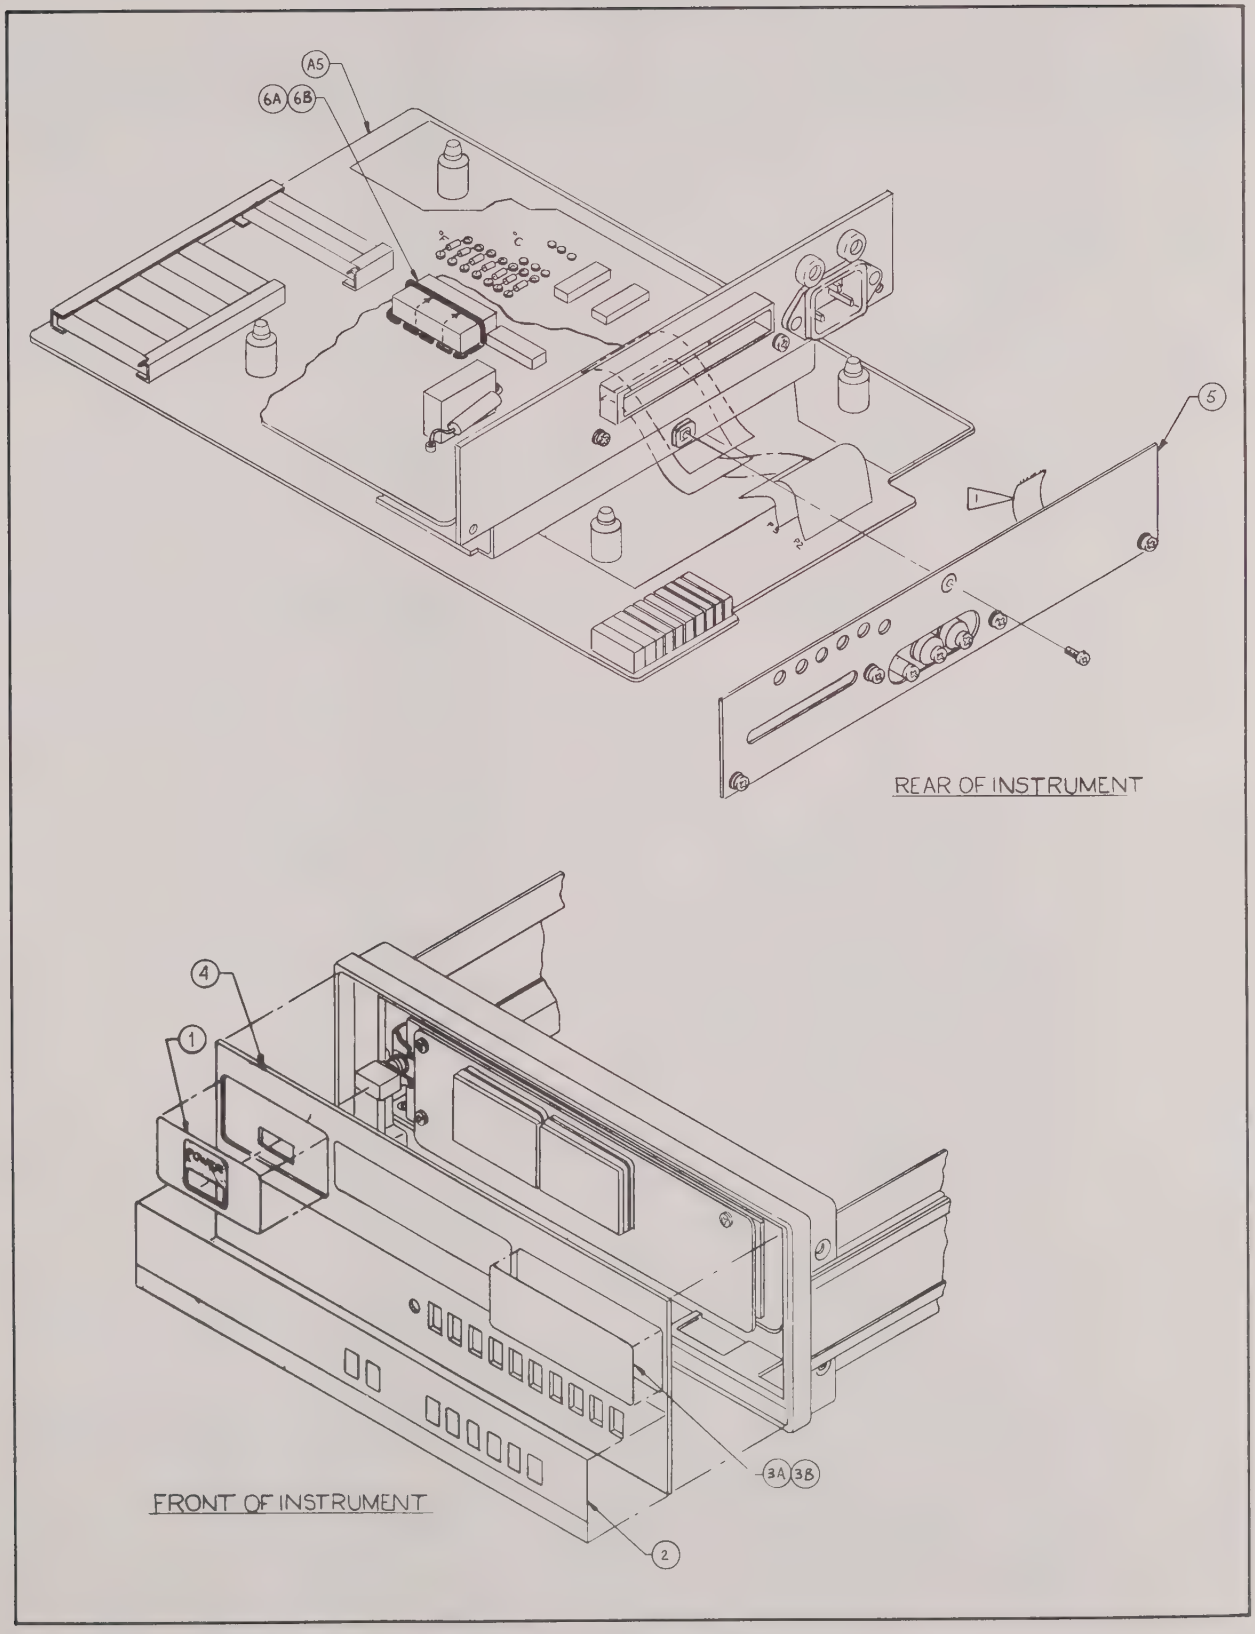

Figure 5-7. MULTI-TYPE CONFIGURATION

TYPE SELECT PCB ASSEMBLY °C

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A5	**TYPE SELECT PCB ASSEMBLY °C Figure 5-8**	371989	89536	371989			
CR1, CR2, CR3	Diode, Si, Hi-speed switching	289595	07910	1N4148	3		
R1	Res, met flm, 39.2k ±1%, 1/8W	236414	91637	MFF1–38922F	1		
R2	Res, fxd, sub-mini, ww, 60.75k ±0.1%	385625	54294	SP21D5–60751B	1		
R3	Res, var, cermet, 500 ±20%, ½W	267849	71450	190PC501B	1		
R4	Res, met flm, 57k ±1%, 1/8W	226217	91637	MFF1-8573F	1		
R5	Res, fxd, sub-mini, ww, 5.175k ±0.1%	385518	54294	SP21D5-51750B	1		
R6	Res, var, 50 ±20%, ½W	267815	71450	190PC500B	1		
R7	Res, met flm, 23.455k ±0.1%, 1/8w	386300	91637	MFF1-8234 551B	1		
R8	Res, met flm, 8.06k ±1%, 1/8W	294942	91637	MFF1-88061F	1		
R9	Res, fxd, sub-mini, ww, 11.97k ±0.1%	385559	54294	SP21D5-11971B	1		
R10, R14, R18, R22, R32, R45	Res, var, cermet, 100 ±20%, ½W	267823	71450	190PC 101B	6		
R11	REs, met flm, 29.931k ±0.1%, ½W	386318	91637	MFF1-829931B	1		
R12, R16	Res, met flm, 11.5k ±1%, 1/8W	267138	91637	MFF1-811501F	2		
R13	Res, sub-mini, ww, 17.55k ±0.1%	385567	54294	SP21D5–19551 B	1		
R15	Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFF1-829784B	1		
R17	Res, sub-mini, ww, 18.17k ±0.1%	385575	54294	SP21D5-18171B	1		

TYPE SELECT PCB ASSEMBLY °C (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R19	Res, met flm, 19.9k ±1%, 1/8W	386334	91637	MFF1-819928	1		
R20	Res, met flm, 7.68k ±1%, 1/8W	370999	91637	MFF1-876801B	1		
R21	Res, sub-mini, ww 11.35k ±0.1%	385542	54294	SP21D5= 11351B	1		
R23	Res, met flm, 204.5k ±0.1%, 1/8w	393793	91637	MFF1-820452B	1		
R24, R28	Res, met flm, 71.5k ±1%, 1/8w	291435	91637	MFF1-87151F	2		
R25, R29	Res, sub-mini, ww, 110.09k ±0.1%	385633	54294	SP21D5- 11009B	2		
R26, R30	Res, var, cermet, 1k ±20%, ½W	267856	71450	190PC102B	2		
R27	Res, met flm. 202.6k ±0.1%, 1/8W	386342	91637	MFF1–820262B	1		
R31	Res, sub-mini, ww, 9.975 ±0.1%	385526	54294	SP21D5- 99751B	1		
R33	Res, met flm, 44.563k ±0.1%, 1/8W	386367	91637	MFF1-844563B	1		
R34	Res, met flm, 55.947k ±0.1%, 1/8W	386383	91637	MFF1-855947B	1		
R35	Res, met flm, 55.09k ±0.1%, 1/8W	404038	91637	MFF1-855091B	1		
R36	Res, met flm, 37.01k ±0.1%, 1/8W	386425	91637	MFF1-837011B	1		
R37	Res, met flm, 368.9k ±0.1%, 1/8W	386441	91637	MFF1-836892B	1		
R38	Res, met flm, 366.7 ±0.1%, 1/8W	386466	91637	MFF1-836672B	1		
R39, R40, R41	Res, var, cermet, 5k ±10%, ½W	288282	71450	360S-502A	3		
R42, R43	Res, var, cermet, 25k ±10%, ½W	289678	71450	360S-253A	2		
S1 thru S 8	Switch Assembly	375246	89536	375246	1		

TYPE SELECT PCB ASSEMBLY °C (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U1	REs, network 10k ±5%, ¼W	355313	56889	Type 914C	1		
U2	IC, TTL, Hex Inverter	292979	01295	SN7404N	1		
U3	IC, TTL, Quad 2-input NOR Gate	288845	01295	SN7402N	1		
U4	IC, TTL, Triple, 3-input, pos NAND Gate	292995	01295	SN7410N	1		
U5	IC, TTL, Quad, 2-input NAND Gate	292953	01295	SN7400N	1		
	Button, putty grey	369546	71590	J52305 T31753	8		
	Cable, flex	385716	89536	385716	2		
	Guard, lower	374942	89536	374942	1		
	Spacer, switch	285353	71590	J64280	7		
	Spring contact	375360	89536	375360	1		

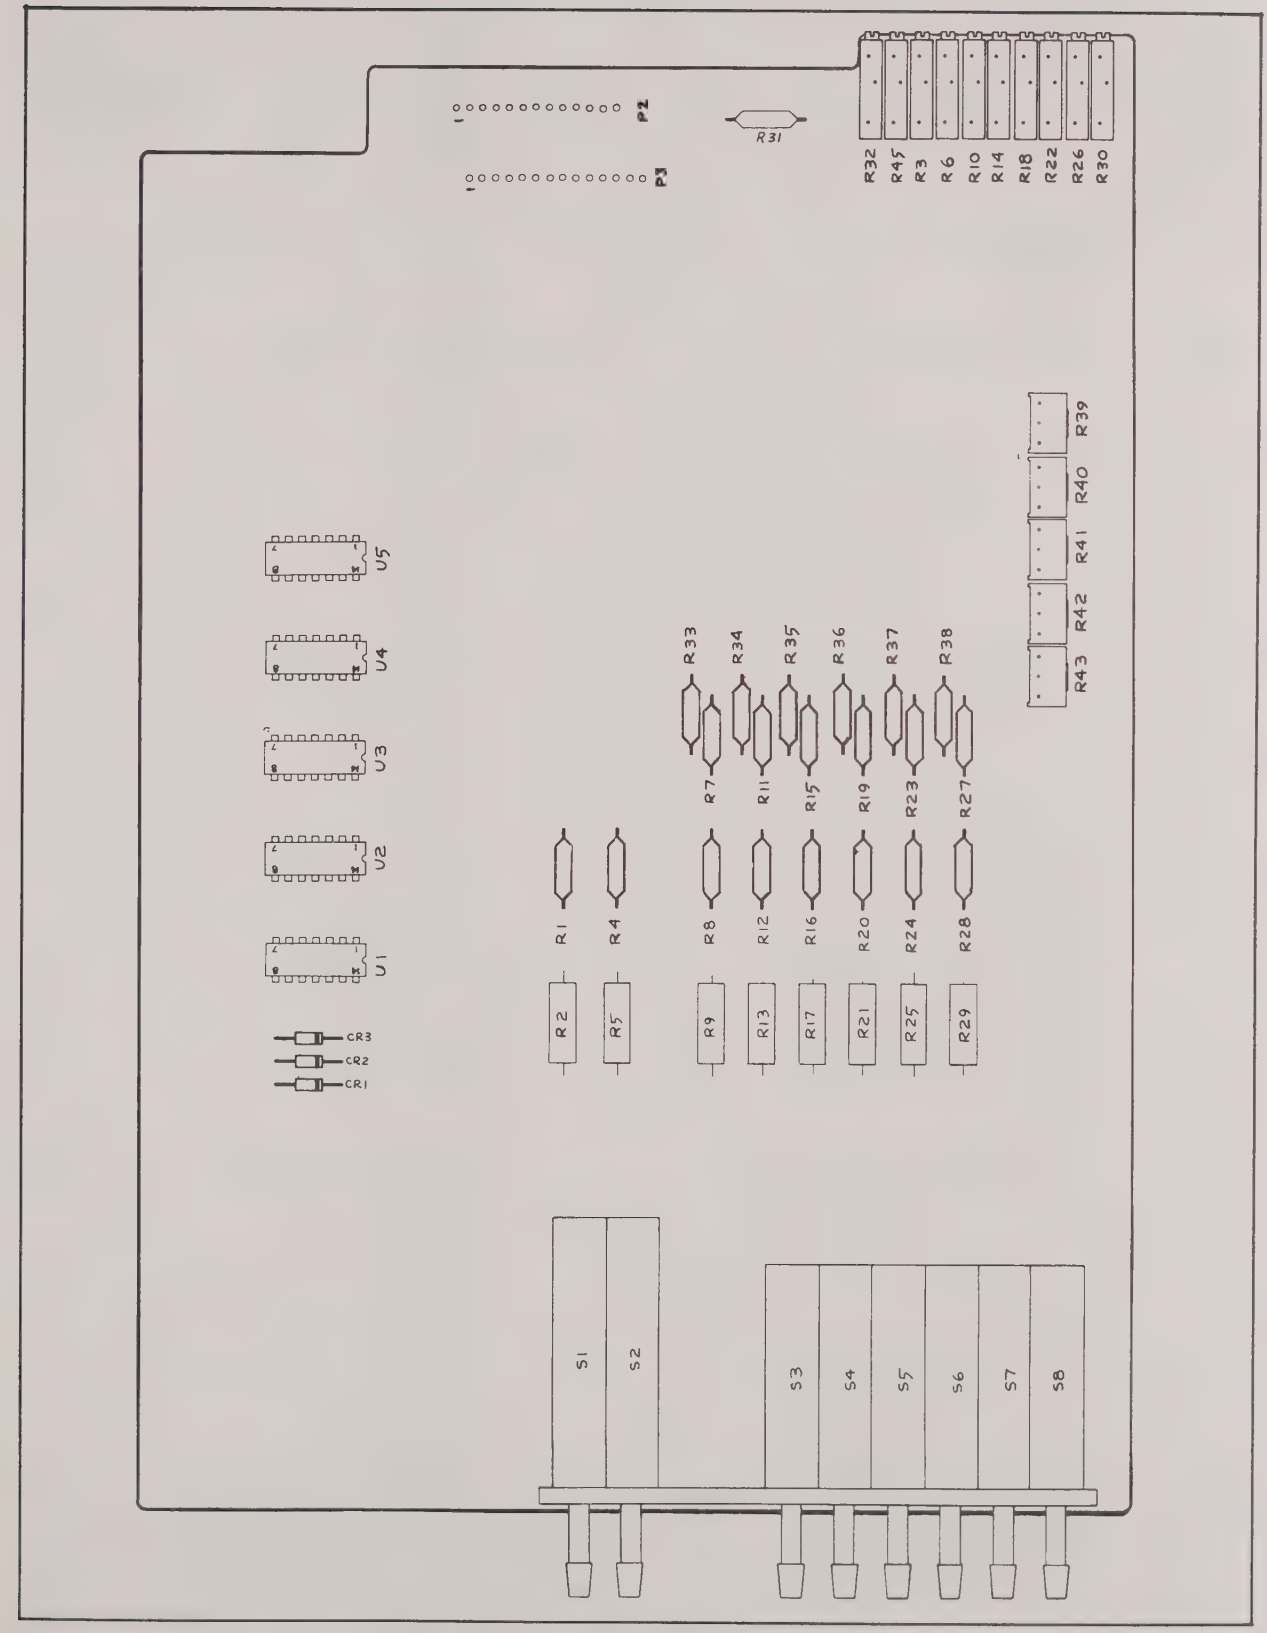

Figure 5-8. TYPE SELECT PCB ASSEMBLY °C

TYPE SELECT PCB ASSEMBLY ° F

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A5	**TYPE SELECT PCB ASSEMBLY ° F** **Figure 5-9**	371690	89536	371690			
CR4 thru CR10	Diode, Si, Hi-speed switching	289595	07910	1N4148	7		
R1	Res, met flm, 39.2k ±1%, 1/8W	236414	91637	MFF1-83920F	1		
R2	Res, fxd, sub-mini, ww, 60.75k ±0.1%	385625	54294	SP0215-L0751B	1		
R3	Res, var, cermet, 500 ±20%, ½W	267849	71450	190 PC 501B	1		
R4	Res, met flm, 57k ±1%, 1/8W	226217	91637	MFF1-8573F	1		
R5	Res, fxd, sub-mini, ww 5.175k ±0.1%	385518	54294	SP21D5-51750B	1		
R6	Res, var 50 ±20%, ½W	267815	71450	190 PC 500B	1		
R7	Res, met flm. 23.455k ±0.1% 1/8W	386300	91637	MFF1-8234551B	1		
R8	Res, met flm, 14.7k ±1%, 1/8W	226225	91637	MFF1-81472F	1		
R9	Res, fxd, sub-mini, ww, 23.7k ±0.1%	385609	54294	SP21D 52372B	1		
R10, R14, R18	Res, var, cermet, 200 ±20%, ½W	284711	71450	190 PC 201B	3		
R11	Res, met flm, 29.93k ±0.1%, 1/8W	386318	91637	MFF1–829931B	1		
R12, R16	Res, met, flm, 21k ±0.5%, 1/8W	229484	91637	MFF1-8213	2		
R13, R17	Res, fxd, sub-mini, ww, 32.38k ±0.1%	385617	54294	SP21D5-32381B	2		
R15	Res, met flm, 29.784k ±0.1%, 1/8W	386326	91637	MFF1-82978 40B	1		
R19	Res, met flm, 19.90k ±0.1%, 1/iW	386334	91637	MFF1-819901B	1		
R20	Res, met flm, 12.4k ±1%, 1/8W	261644	91637	MFF1-81242F	1		
R21	Res, fxd, sub-mini, 1941k ±0.1%	385583	54294	SP31D5-19411B	1		

TYPE SELECT PCB ASSEMBLY °F (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
R22, R32, R45	Res, var, cermet, 100 ±20%, ½W	267823	71450	190 PC 101B	3		
R23	Res, met flm, 204.5k ±0.1%, 1/8W	393793	91637	MFF1-820452F	1		
R24, R28	Res, met flm, 71.5k ±1%, 1/8W	291435	91637	MFF1-87152F	2		
R25, R29	Res, sub-mini, ww, 110.09k ±01%,	385633	54294	SP2105-110091B	2		
R26, R30	Res, var, cermet, 1k ±20%, ½W	267856	71450	190 PC 102B	2		
R27	Res, met flm. 202.6k ±0.1%, 1/8W	386342	91637	MFF1?820262B	1		
R31	Res, sub-mini, ww, 9.975 ±0.1%	385526	54294	SP21D5-99750B	1		
R33	Res, met flm. 121k ±0.1%, 1/8W	370817	91637	MFF1-81211B	1		
R34	Res, met flm. 149k ±0.1%, 1/8W	386375	91637	MFF1-81493B	1		
R35	Res, met flm. 137.04k ±0.1%, 1/8W	404046	91637	MFF1-8137041B	1		
R36	Res, met flm. 95.52K ±0.1%, 1/8W	386417	91637	MFF1-875521B	1		
R37	Res, met flm. 788.6k ±0.1%, 1/8W	386433	91637	MFF1-878862B	1		
R38	Res, met flm. 799.5k ±0.1%, 1/8W	386458	91637	MFF1-879952B	1		
R39, R40, R41	Res, var, cermet, 10k ±10%, ½W	285171	71450	360S103A	3		
R42, R43	Res, var, cermet, 50k ±10%, ½W	288290	71450	360S503A	2		
S1 thru S8	Switch Assembly	375246	89536	375246	1		
U1	Res, network, 10k ±5%, ¼W	355313	56289	914C 103J	1		
U2	IC, TTL, Hex inverter	292979	01295	SN7404N	1		
U3	IC, TTL, Quad, 2-input NOR gate	288845	01396	SN7402N	1		
U4	IC, TTL, Triple, 3-input, NAND Gates	292995	10295	SN7410N	1		

TYPE SELECT PCB ASSEMBLY °F (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
U5	IC, TTL, Quad, 2-input NAND Gate	292953	01295	SN7400N	1		
	Button, putty grey	369546	71590	J52305 J31753	8		
	Cable, flex	385716	89536	385716	1		
	Contact, spring	375360	89536	375360	1		
	Guard, Lower, type select	374942	89536	374942	1		
	Insulator, –06 Guard	412072	89536	412072	1		
	Spacer, switch	285353	71590	J64280	7		

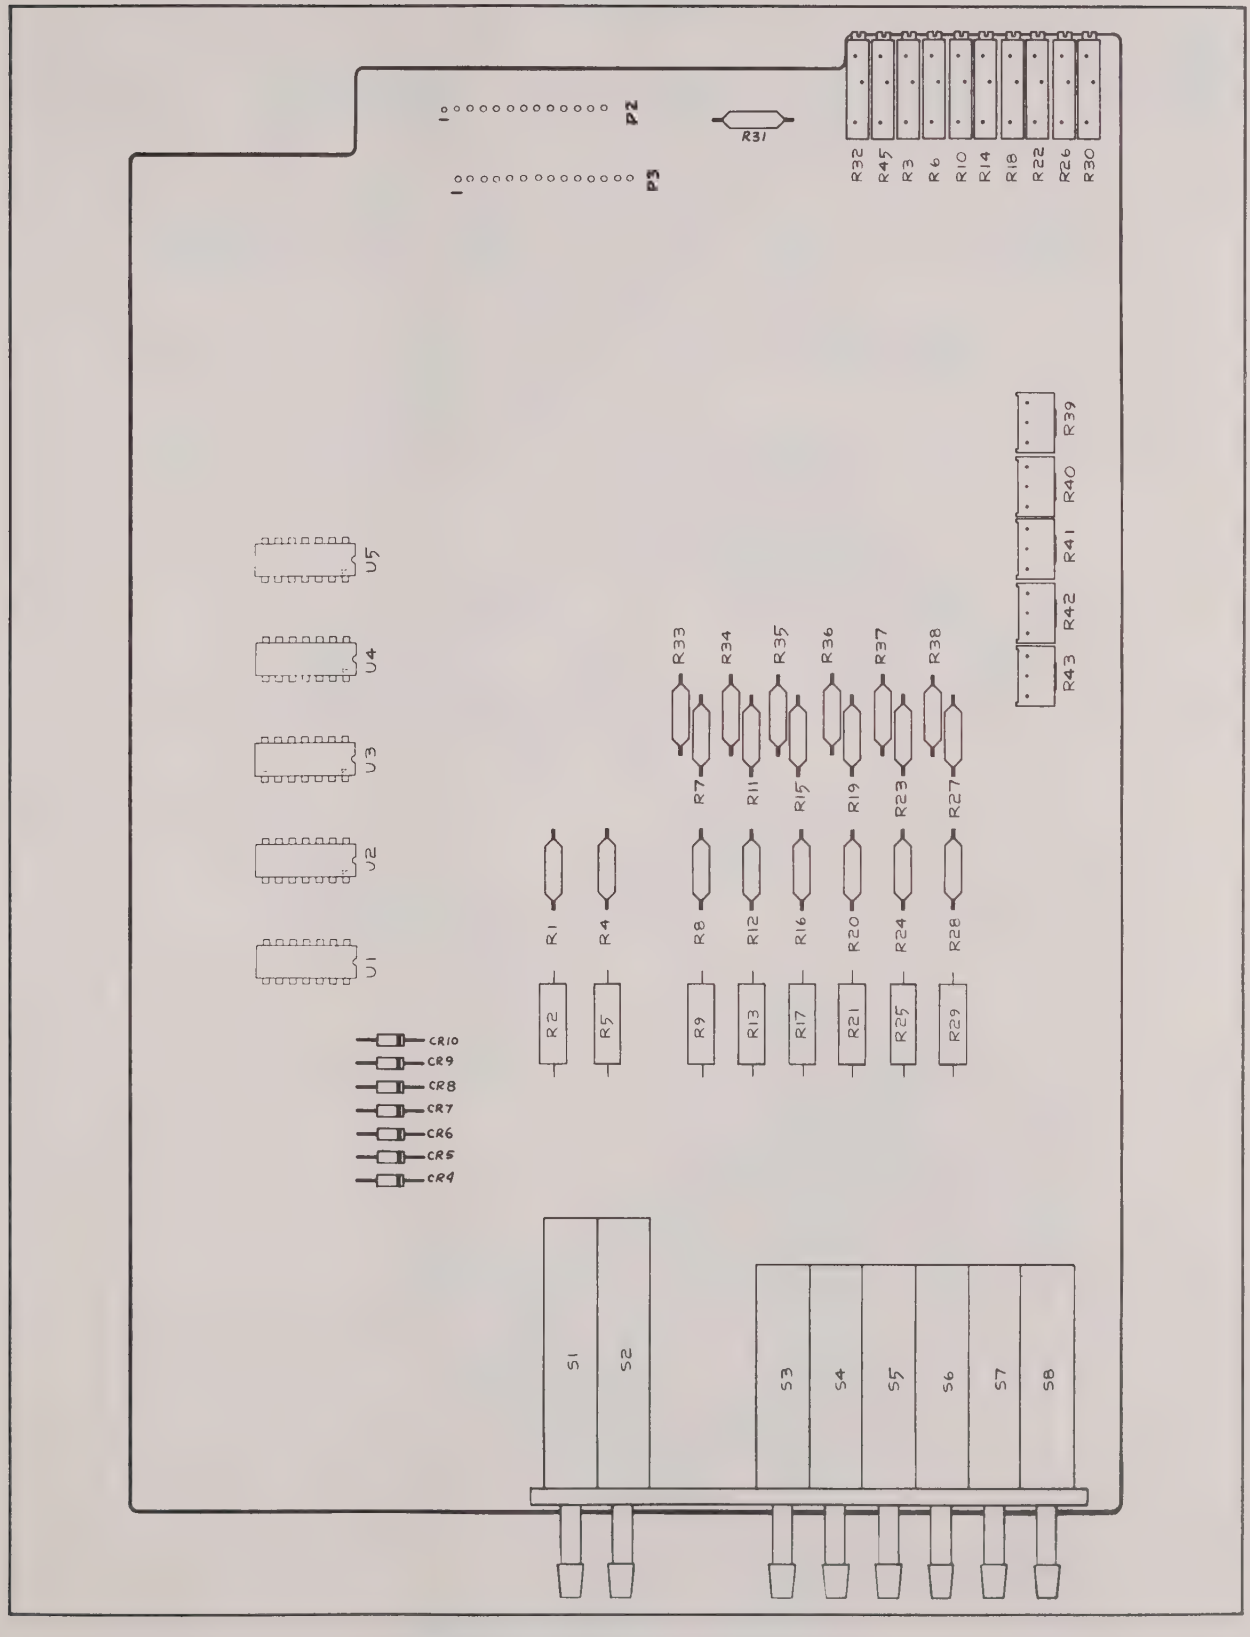

Figure 5-9. TYPE SELECT PCB ASSEMBLY °F

MULTI-POINT CONFIGURATION

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	MULTI POINT CONFIGURATION **Figure 5-10**	2100A-10					
1	Decal, AC Power, Front Panel	381152	89536	381152	1		
2	Decal, Basic, Front Panel	380873	89536	380873	1		
3	Front Panel, Finished	397653	89536	397653	1		

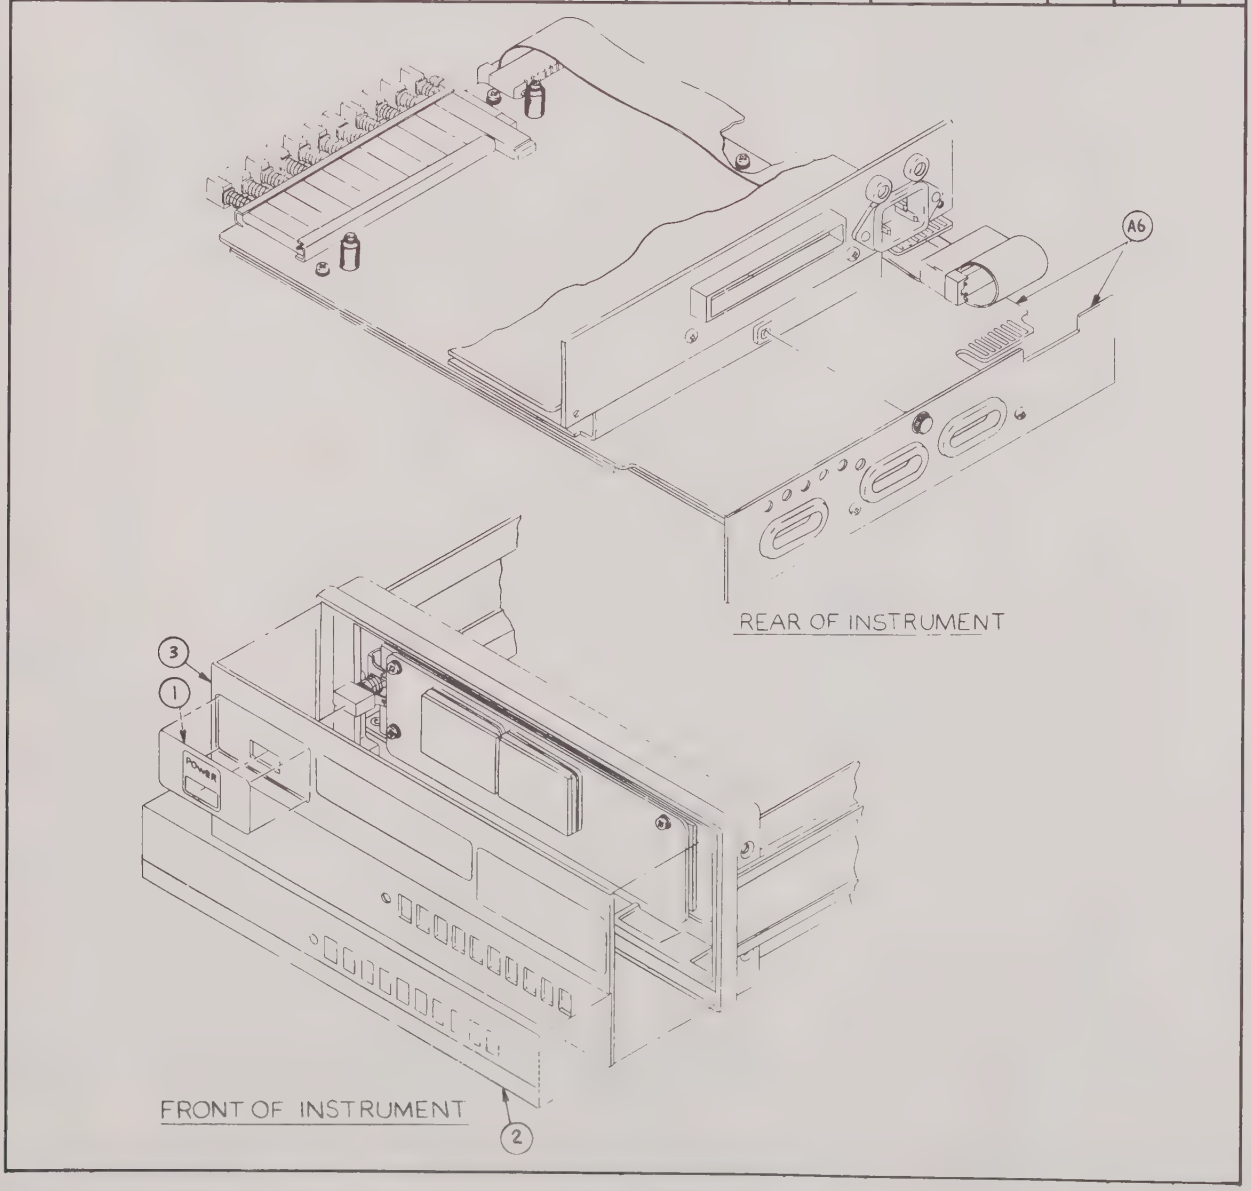

Figure 5-10. MULTI-POINT CONFIGURATION

POINT SELECT PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A6	**POINT SELECT PCB ASSEMBLY** **Figure 5-11**	373811	89536	373811			
CR1 thru CR4	Diode, Si	203323	07910	TD8253	4		
DS1	Light=emitting diode, red	309617	07263	FLV102	1		
R1	Res, comp, 330 ±5%, ¼W	147967	01121	CB3315	1		
R2, R3, CR5	Res, junction set	400127	89536	400127	3		
R4, R5, R6	Res, comp, 100 ±5%. ¼W	147926	01121	CB1015	3		
S1 thru S11	Switch Assy	375253	89536	375253	1		
U1	Diode, matrix, custom programmed	370676	91417	HM1-0104	1		
	Clamp, xstr	393967	89536	393967	1		
	Cover, xstr	394577	89536	394577	1		
	Flex circuit assy	395483	89536	395483	1		
	Gasket xstr	394585	89536	394585	1		
	Iso-thermal sink	380287	89536	380287	1		
	Lower guard	374082	89536	374082	1		
	Rear panel	374074	89536	374074	1		

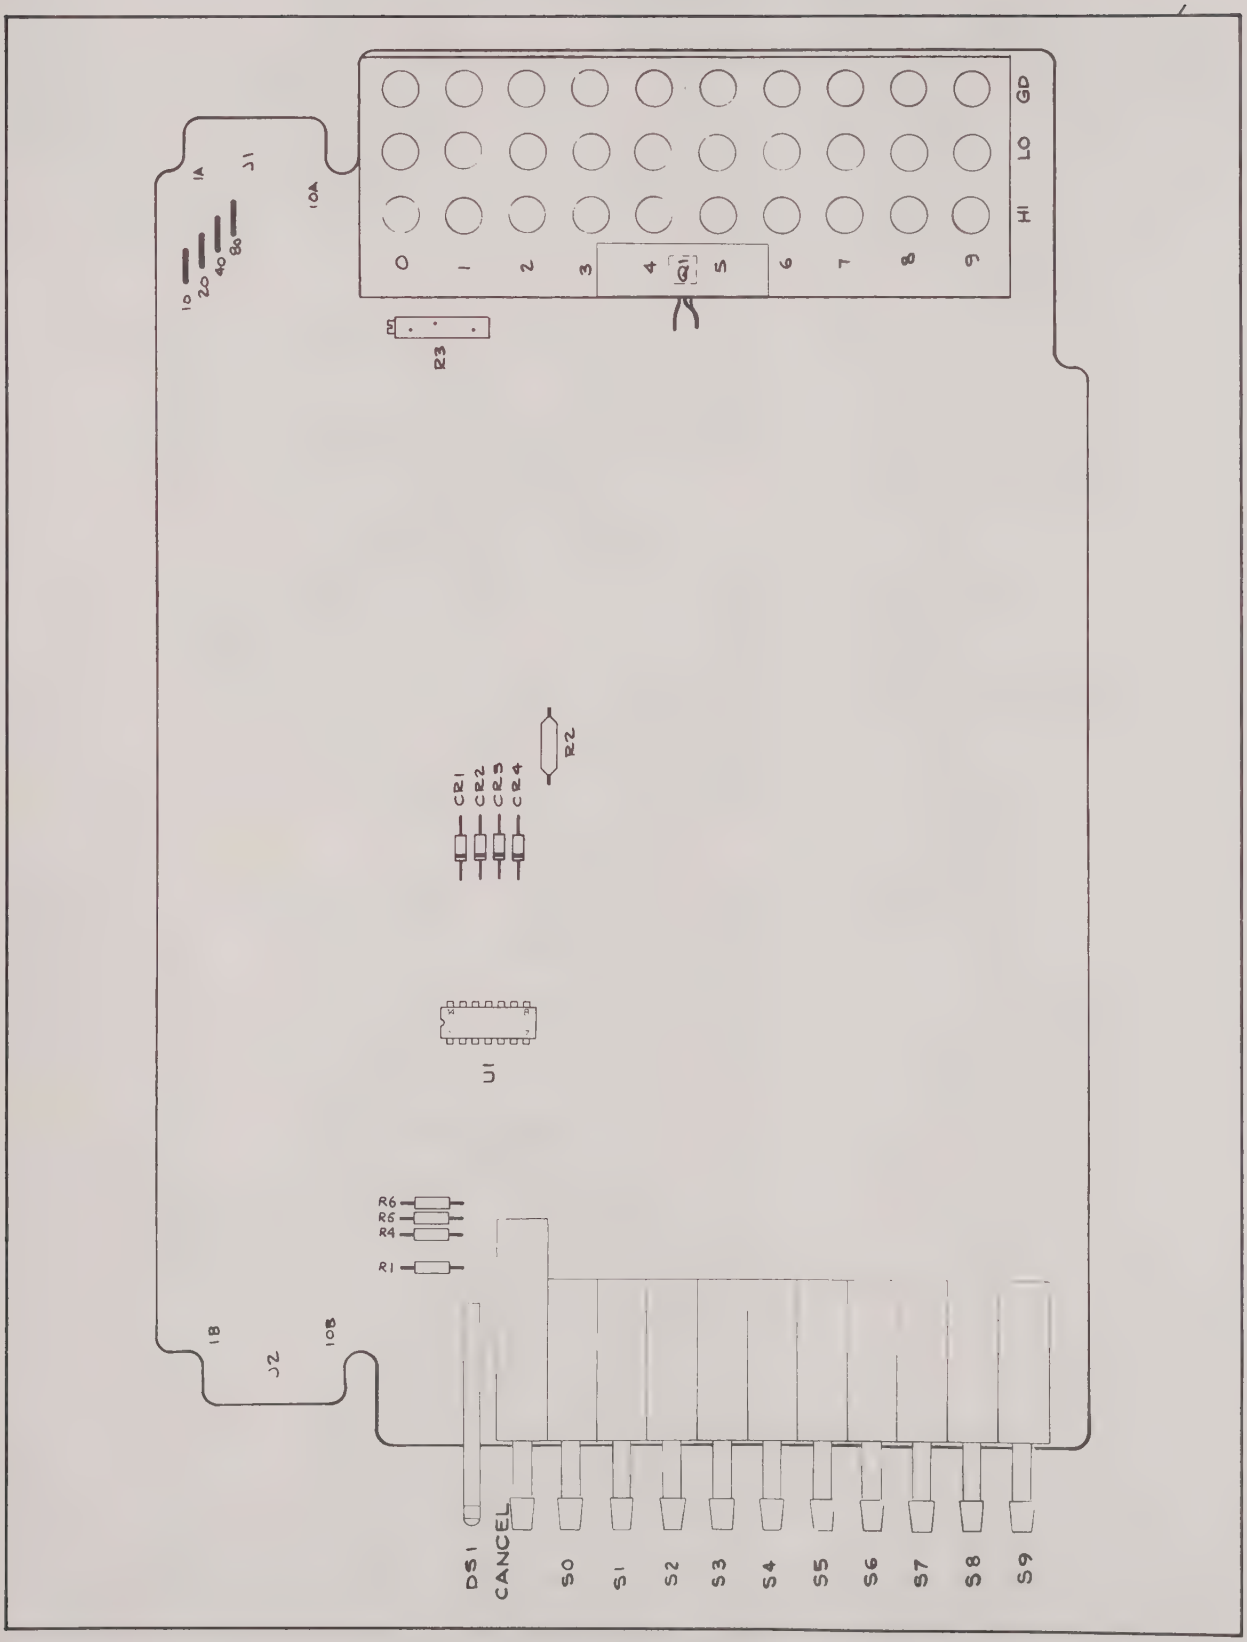

Figure 5-11. POINT SELECT PCB ASSEMBLY

BATTERY POWER SUPPLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
	BATTERY POWER SUPPLY (Figure 5-12)	2100A–01					
BT1-BT9	Battery, Rechargeable (2100A–01)	370759	89536	370759	9		
1	Retainer, Battery	374066	89536	374066	2		
2	Screw, 4-40 x 1 3/8	404400	89536	404400	4		
3	Battery Charge Assembly	374645	89536	374645	1		
4	Battery Cable Harness	372243	89536	372243	1		
5	Battery Support	373308	89536	373308			
A7	Battery Charge PCB Assembly	374645	89536	374645	1		

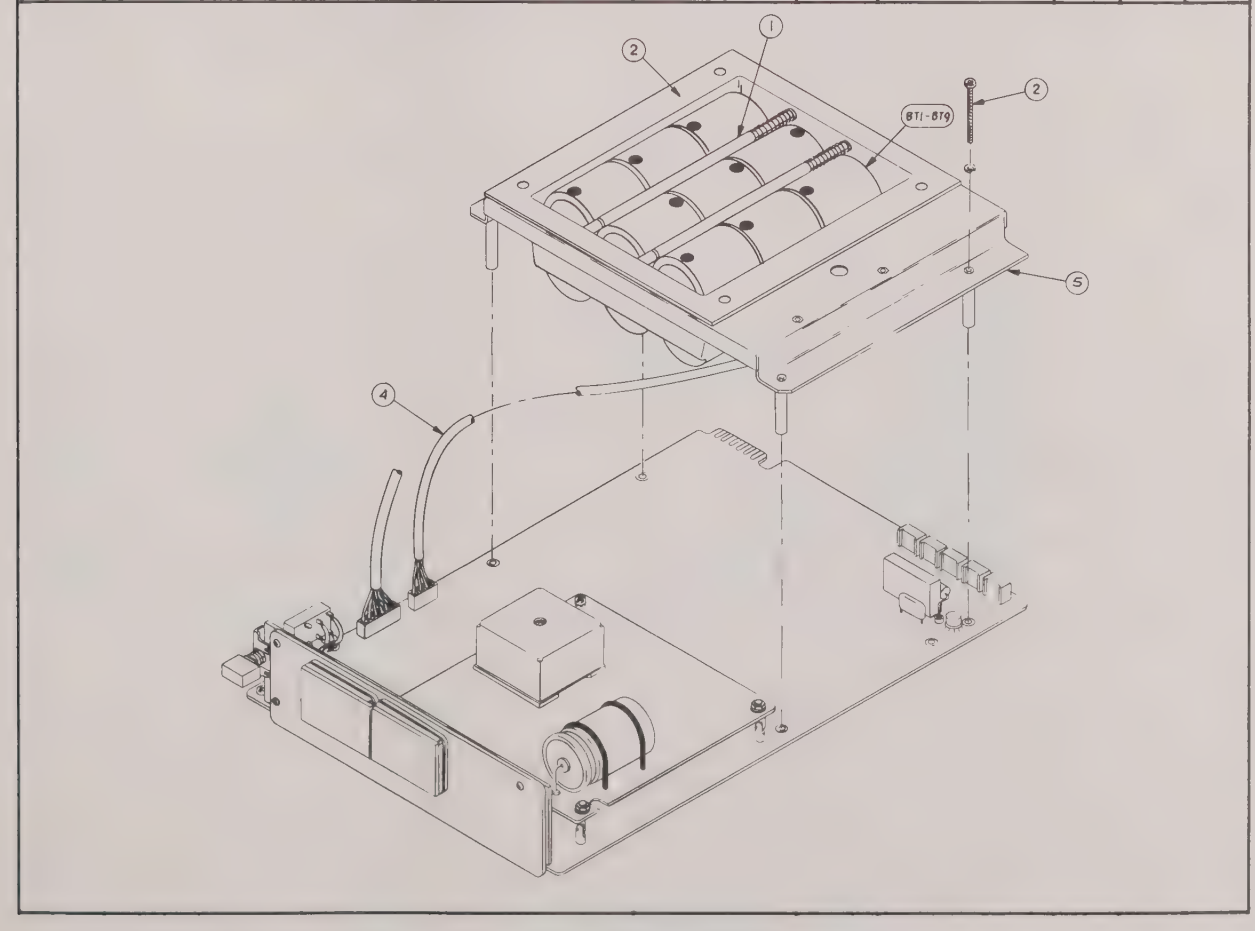

Figure 5-13. BATTERY CHARGE PCB ASSEMBLY

BATTERY CHARGE PCB ASSEMBLY

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A7	BATTERY CHARGE PCB ASSEMBLY Figure 5-13	374645	89536	374645			
CR1 thru CR4	Diode, Si, 100 piv	116111	05277	1N481	4		
Q1	Xstr, Si, PNP	195974	04713	2N3906	1		
Q2	Xstr, power PNP	325753	03508	D45C5	1		
R1	Res, comp 1.6 ±5% ½W	218727	01121	EB16G5	1		
R2	Res, comp 470 ±5%, ½W	108787	01121	EB4715	1		

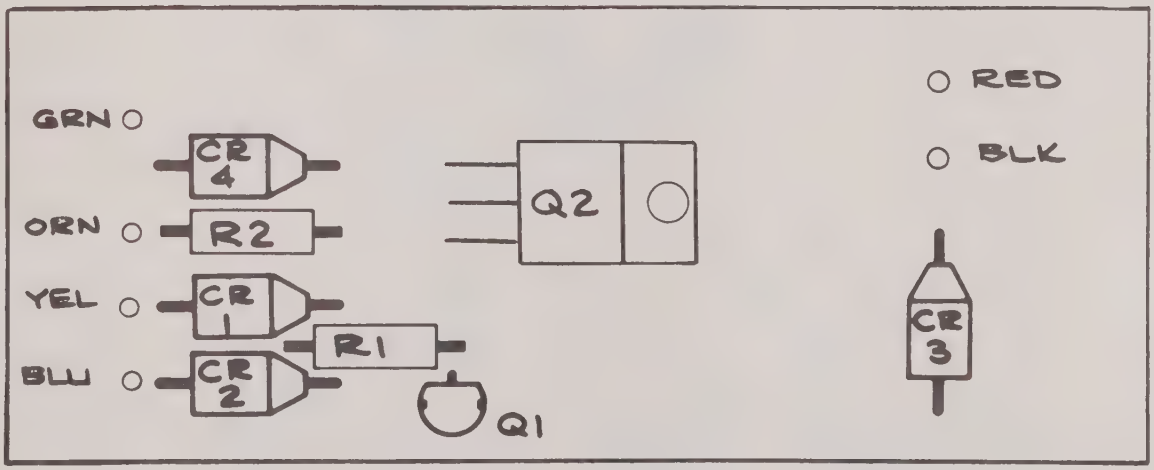

Figure 5-14. DIGITAL OUTPUT UNIT PCB ASSEMBLY

DIGITAL OUTPUT UNIT PCB ASSEMBLY (Figure 5-14)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
A8	DIGITAL OUTPUT UNIT PCB ASSY Figure 5-14	371526	89536	371526	REF		
C1	Cap, cer, 500 pF ±10%, 1kV	105692	32897	2D0H60N501K	1		
C2	Cap, cer, 180 pF ±10%, 1kV	105890	71590	BB60181KS3N	1		
C3,C4	Cap, Ta, 10 uF ±20%, 20V	330662	56289	196D106X0020JA1	2		
C5	Cap, cer, 0.01 uF ±20%, 100V	149153	56289	C023B101F103M	1		
C6	Cap, mica, 33 pF ±5%, 500V	160317	71236	DM15E330J	1		
CR1 thru CR3	Diode, Si, Rect - 1 amp	343491	04713	1N4002	3		
Q1 thru Q4	Xstr, Si, NPN	218396	04713	2N3904	4		
R1,R2, R18	Res, comp, 51k ±5%, ¼W	193334	01121	CB5135	3		
R3,R4, R5, R13	Res, comp, 100k ±5%, ¼W	148189	01121	CB1045	4		
R6,R8, R10	Res, comp, 2k ±5%, ¼W	202879	01121	CB2025	3		
R7,R9, R11	REs, comp 16k ±5%' ¼W	221606	01121	CB1635	3		
R12	RFs, comp 15k ±5%, ¼W	148114	01121	CB1535	1		
R14, R17	REs, comp, 10k ±5%, ¼W	148106	01121	CB1035	2		
R15, R16	Res, comp, 33k ±5%, ¼W	148155	01121	CB3335	2		
R19, R20, R21	Res, comp, 200 k ±5%, ¼W	248781	01121	CB2045	3		

DIGITAL OUTPUT UNIT PCB ASSEMBLY (Cont.)

REF DESIG OR ITEM NO.	DESCRIPTION	FLUKE STOCK NO.	MFG FED SPLY CDE	MFG PART NO. OR TYPE	TOT QTY	REC QTY	USE CDE
T1	Xfmr, pwr, 8 kHz	377812	89536	377812	1		
U1	IC, C-MOS, Quad 2-input NAND Gate	355198	04713	MC14011CP	1		
U2,U19, U22	IC, C-MOS, NOR Gates	355172	04713	MC14000CL	3		
U3,U4, U6,U7, U11,U13	IC, C–MOS, Quad Bilateral Switch	363838	12040	MM5616AN	6		
U5	IC, C-MOS, Dual J-K Master Slave Flip-Flop	355230	04713	MC14027CL	1		
U8,U18	IC, C-MOS, Dual "D" Flip-Flop	340117	04713	MC14013CL	2		
U9,U17 U20, U27 thru U32	IC, C-MOS, Hex Buffer/Conv	355214	04713	MC14009CP	9		
U10	Res, Network, 6k	355131	56289	Type 914C	1		
U12, U21 U23 thru U26	IC, C-MOS, Dual 4-Bit Static Shift Register	340125	04713	MC14015CP	6		
U14, U15, U16	IC, Opto-Isolator	380014	01295	TIL116	3		
	Cable, flex	376293	15912	.100F401S2A10	2		
	Guard, DOU	378042	89536	378042	1		
	Mini-sert	376418	22526	75060-005	10		

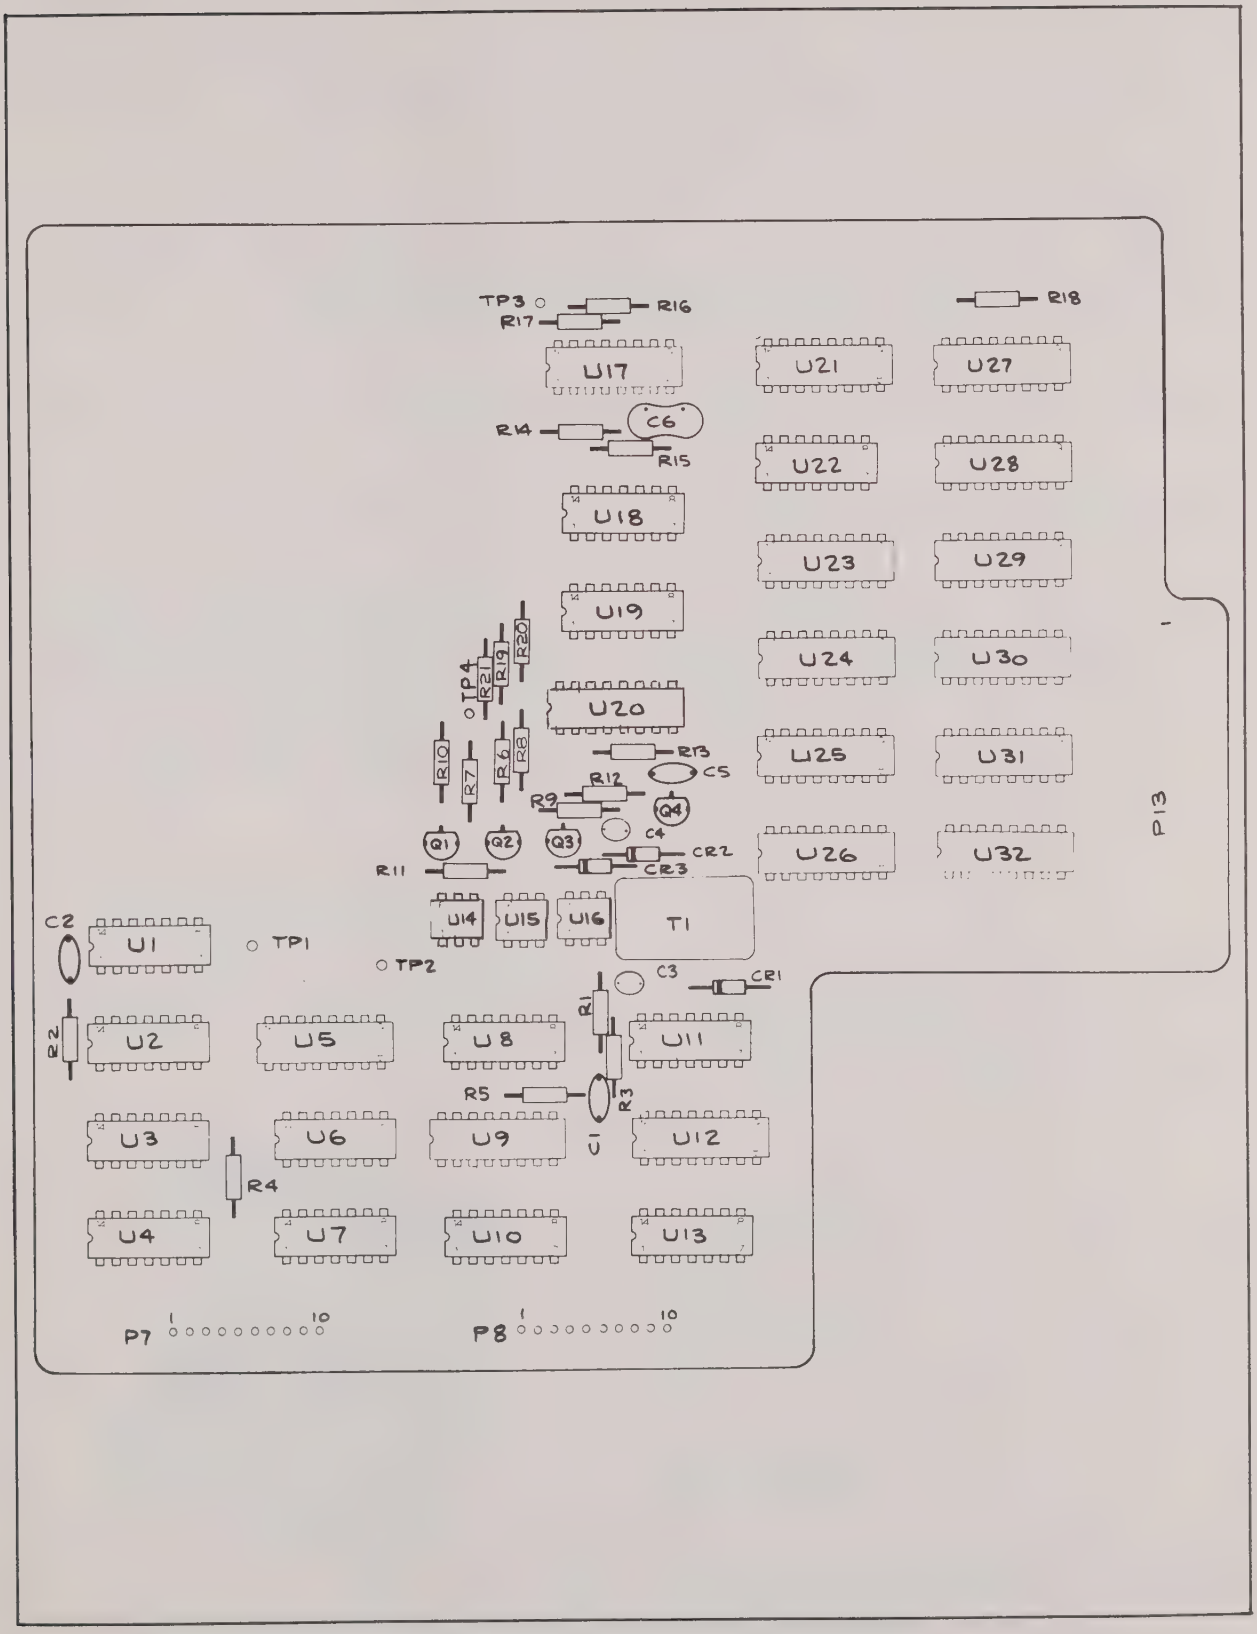

Figure 5-14. DIGITAL OUTPUT UNIT PCB ASSEMBLY

Section 6
Option & Accessory Information

6-1. INTRODUCTION

6-2. This section of the manual contains information pertaining to the options and accessories available for your instrument. Each option and accessory is described under an identifying major heading. The descriptions contain operating and maintenance instructions, and field installation procedures where applicable. A list of replaceable parts and schematics for all options are given in Section 5 and 8, respectively.

6-3. CARRYING CASE (C81)

6-4. The Model C81 Carrying Case, Figure 6-1, is a fiber-glass container for convenient transport or shipment of the 2100A. A foam liner provides the instrument protection from extreme shock. A separate storage compartment provides space for thermocouples, instruction manual, etc.

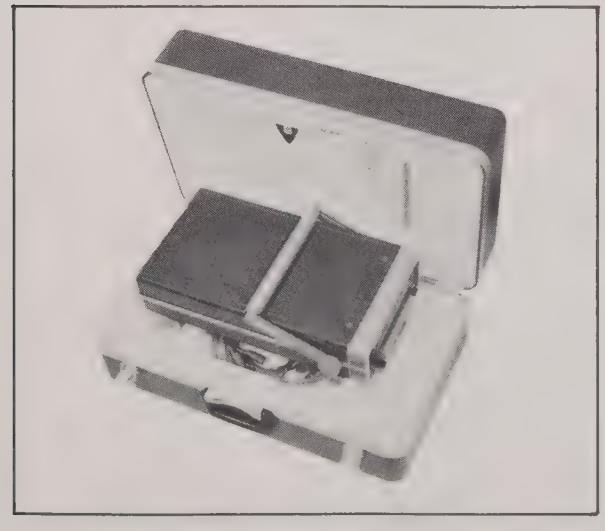

Figure 6-1. C81, CARRYING CASE

6-5. FRONT PANEL COVER (M03-203-700)

6-6. The front panel cover is a molded plastic snap-on accessory which fits over the front panel of the 2100A. The cover provides protection for the front panel controls and display lens, and is useful when storing or transporting the 2100A.

6-7. INSTRUMENT MOUNTING KITS

6-8. Introduction

6-9. Three mounting kits are available for the 2100A. Two kits provide either side-by-side or offset mounting in a standard 19-inch equipment rack; the third kit allows the 2100A to be mounted in any rigid panel (cabinet, console, etc.). Table 6-1 lists the part numbers for each mounting kit.

Table 6-1. MOUNTING KITS

MOUNTING STYLE	MODEL NUMBER
Side-by-Side Rack Mounting	M00-200-618
Offset Rack Mounting	M00-200-619
Panel Mounting	M00-200-620

6-10. Installation Procedures

6-11. Installation instructions for each of the mounting kits is given in the following paragraphs. Use the procedure which corresponds to the model number of the kit being installed.

6-12. SIDE-BY-SIDE RACK MOUNTING KIT (M00-200-618)

a. Remove the top and bottom dust covers from one instrument.

b. Remove the feet from the bottom covers.

c. Remove handle disk decals and the handles.

d. Remove the side trim decals to expose the mounting holes.

e. Remove the printed circuit boards from the uncovered unit. (See the Access information in Section 4).

f. Remove the guard enclosure (not shown).

g. Insert three (3) 8-32 fasteners through the side of the unit, from which the guard enclosure was removed, into the captive nuts on the side of the other unit (see Figure 6-2).

h. Replace the guard enclosure and printed circuit boards.

i. Secure the rack ears to the sides, at the front panel end of the assembled units, as shown in Figure 6-2.

j. Replace the top and bottom dust covers.

d. Attach the rack ear extension bracket to the rack ear extension using three elastic stop nuts. (See Figure 6-3).

6-13. OFFSET RACK MOUNTING KIT

a. Remove the feet from the bottom cover.

b. Remove the handle disk decals and handle.

c. Remove the side trim decals to expose the mounting holes.

e. Attach the assembled extension to the left or right side (dependent on the offset desired, right or left) of the unit.

f. Attach the rack ear to the other side of the unit.

g. Secure the brace support between the rack extension and side of the unit as shown in Figure 6-3.

6-14. PANEL MOUNTING.

6-15. Prepare the cutout in the panel as indicated in Figure 6-4. Insure that the dimensions given for the cutout are followed precisely. Install the 2100A in the panel as follows:

a. Remove the handle disc decals and the handle from the 2100A.

b. Remove the chassis side decals.

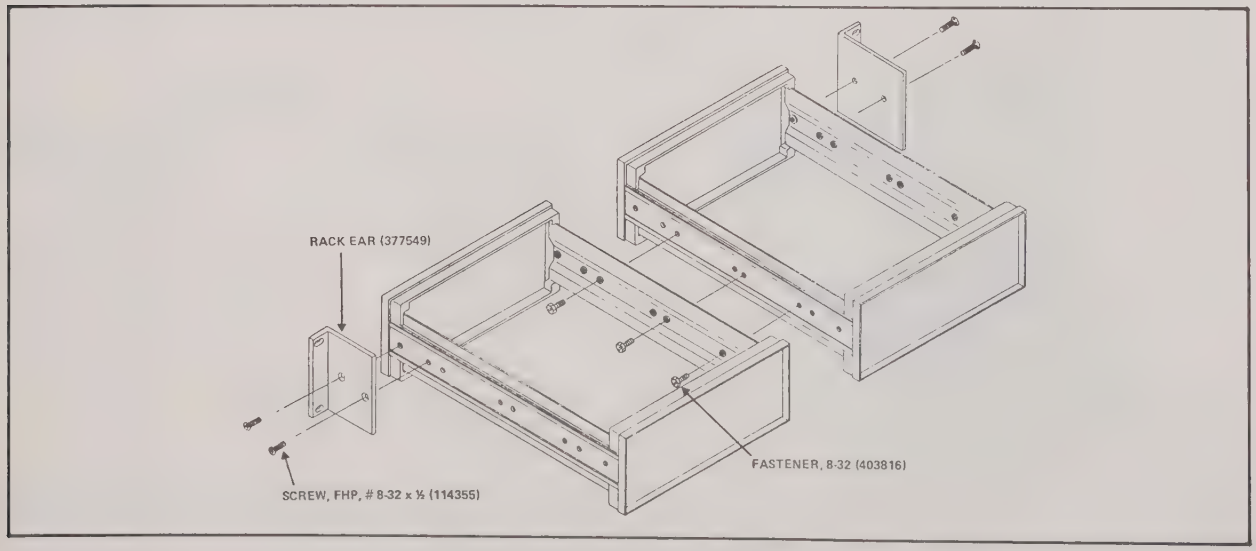

Figure 6-2. SIDE-BY-SIDE RACK MOUNTING

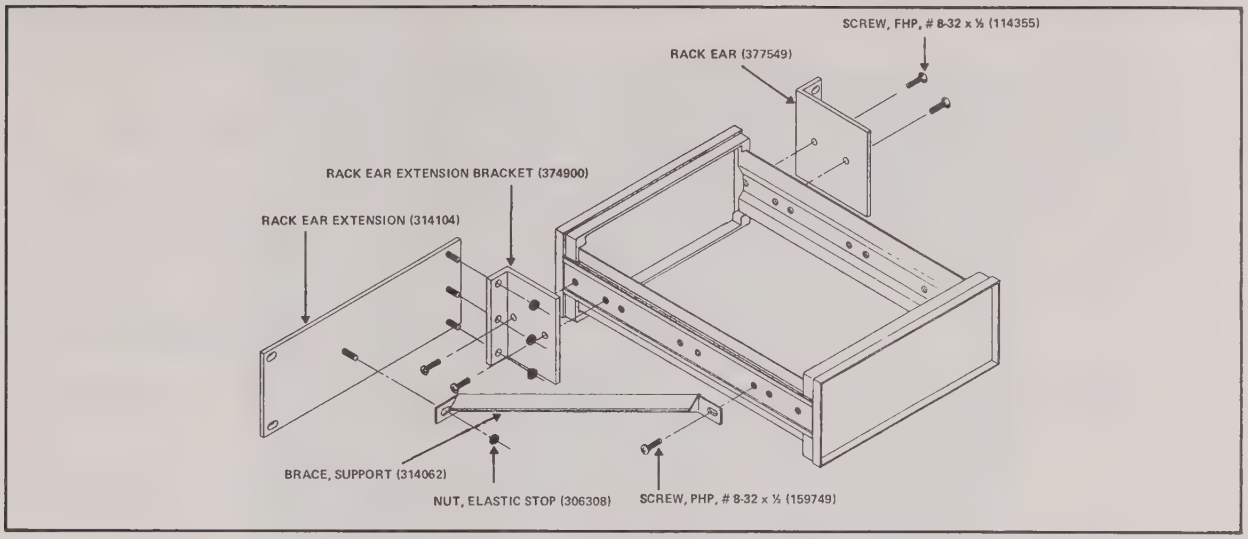
SCREW, FHP, # 8-32 x ⅛ (114355)
RACK EAR (377549)
RACK EAR EXTENSION BRACKET (374900)
RACK EAR EXTENSION (314104)
BRACE, SUPPORT (314062)
NUT, ELASTIC STOP (306308)
SCREW, PHP, # 8-32 x ⅛ (159749)

Figure 6-3. OFFSET RACK MOUNTING

c. Position the panel mount rack ear against the side of the chassis as shown in Figure 6-4 and secure it in place with two screws. Repeat on the opposite side.

d. Insert the 2100A into the panel cutout from the rear and fasten it to the panel with the screws provided.

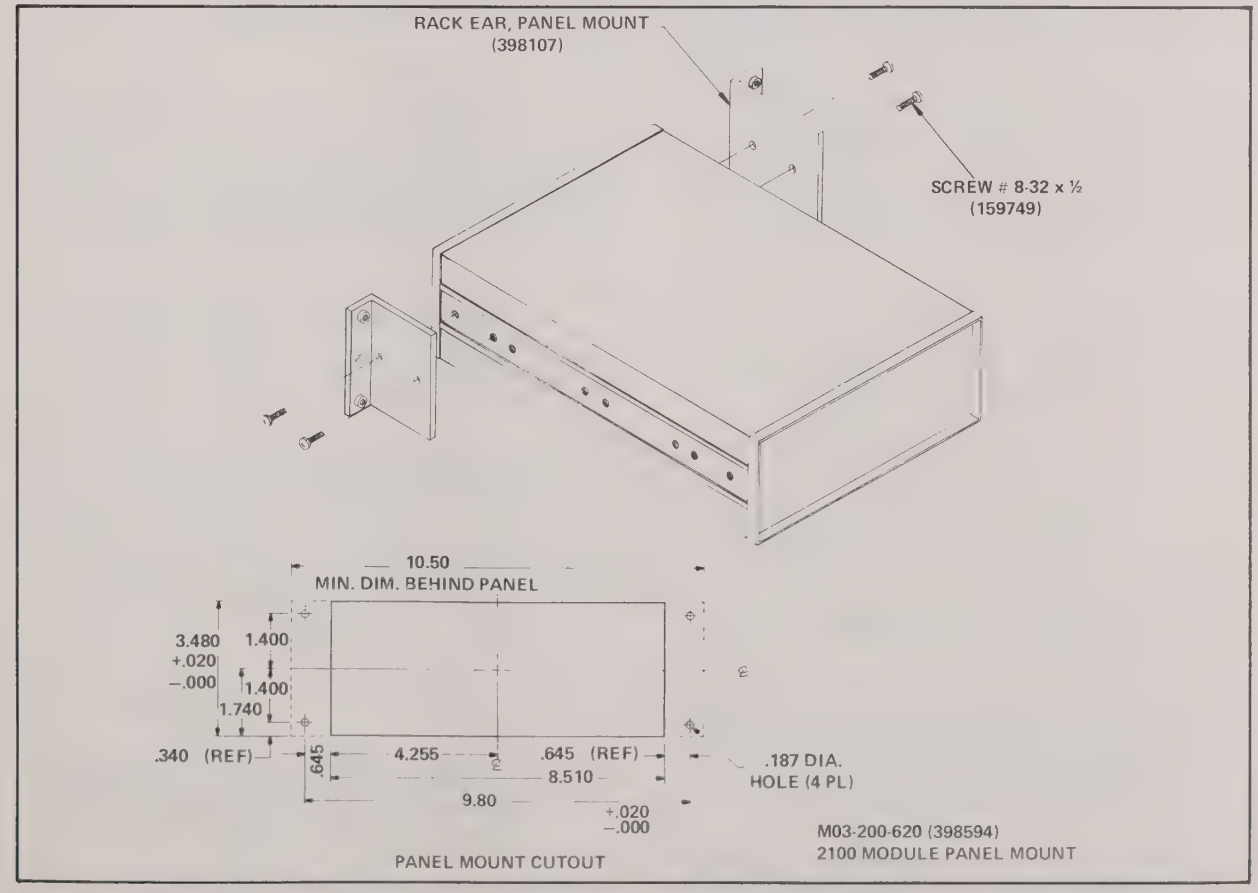

Figure 6-4. PANEL MOUNTING

6-16. THERMOCOUPLE PROBES

6-17. Three thermocouple probes (J type, K type, and T type) are available from Fluke as accessories for the 2100A. The thermocouple junction of each probe is connected to the tip of a six inch long one-eighth inch diameter Inconel sheath. Three feet of insulated conductor provide thermocouple connection to the 2100A' The conductor insulation can withstand continuously applied temperatures up to +480° C , (+900°F) or temperatures for a single reading up to +760°C (+1400°C)

6-18. The thermocouple probes (J type, K type, or T type) can be ordered by model numbers P20J, P20K, or P20T, respectively. The type of thermocouple must match the single type configuration of the 2100A–03 or 2100A–10 it is to be used with.

6-19. THERMOCOUPLE TYPE CONVERSION KIT (2100A - –– K

6-20. Introduction

6-21. The 2100A–03 or 2100A–10 configured for a particular type thermocouple can be changed to accommodate a new type thermocouple by installing a thermocouple type conversion kit. Each specific conversion kit is identified by filling in the two blanks in the (2100A - _ _ K) model identification. That is, a kit to accommodate a T type thermocouple in an instrument that displays the termperature in degrees Fahrenheit would be 2100A–TFK. The letter placed in the first blank identifies the thermocouple type (J, K, E, T, R, or S); the letter in the second blank indicates the temperature unit, degrees Celsius (C) or degrees Fahrenheit (F).

6-22. Installation

6-23. Use the following procedure to install the 2100 A- _ _ K in the 2100A instrument.

a. Remove the line power cord from the instrument.

b. Remove the four retainer screws from the rear panel; two on the extreme left and two on the extreme right of the panel.

c. Pull the rear panel straight back from the outer case about five inches.

d. Locate and remove the old thermocouple type PCB (see Figure 6-5). Use both hands, one at each end of the type pcb, to pull the pcb straight up from the Basic PCB Assembly.

e. Position the new type pcb as indicated in Figure 6-5, i.e., upside down as viewed from the rear of the instrument.

f. Align P2 pins 2 thru 13 and P3 pins 1 thru 12, on the type pcb with J-2 pins 2 thru 13 and J3 pins 1 thru 12 of the basic pcb.

g. Press the type pcb down until the pins seat.

h. Remove the old thermocouple type identification decal from the front panel; insert a knife point under one corner and peel it back.

i. Remove the paper back from the new identification decal and press it into place on the front panel.

j. Slide the instrument back into the outer case and secure it in place .

k. Connect the line power cord to the instrument, press the power switch, and allow it to warm up for one-half hour.

l. Recalibrate the instrument following the procedure of section four as they pertain to the new type thermocouple.

6-24. FAHRENHEIT TO CELSIUS CONVERSION KIT (F2CK)

6-25. Introduction

6-26. The 2100A–03 and 2100A–10 are configured to display temperature in either degrees Fahrenheit or degrees Celsius. Either instrument can be converted from Fahrenheit to Celsius display by installing the 2100A - _ _ K and the 2100A - F2CK.

6-27. Installation

6-28. The following procedure provides step-by-step instructions for installing the 2100A–F2CK.

a. Remove the 2100A chassis from the outer case as described in steps a, b, and c of paragraph 6-21.

b. Locate and remove the old Read Only Memory (ROM) U22.

NOTE

Use an IC extraction tool to remove the ROM

c. Align the new ROM as shown in Figure 6-5 and press it into place in the IC socket; pin number one should be at the upper left of the ROM as viewed from the rear of the instrument.

d. Reassemble the instrument.

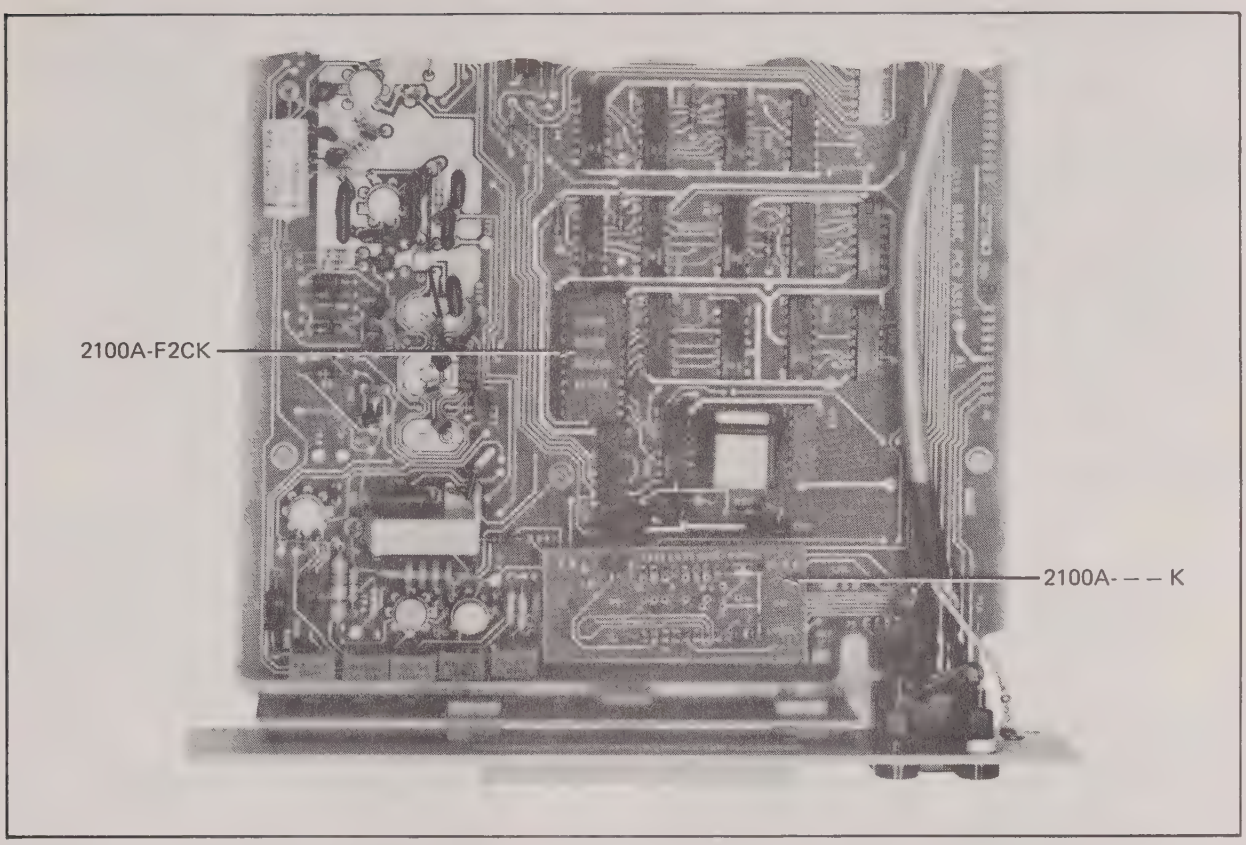

Figure 6-5. 2100A-–– K AND F2CK LOCATION

e. Calibrate the 2100A in accordance with the procedure in Section 4 as it pertains to the new configuration of the instrument.

6-29, MULTI-POINT SELECTOR SWITCH (2100A-10K)

6-30. Introduction

6-31. The 2100A–10K provides for field conversion from the 2100A–03 single point configuration to the 2100A–10 multipoint configureation. Up to ten thermocouples (all of the same type) can be connected to the 2100A equipped with the multi-point selector switch. Each thermocouple can be selected for display by pressing one of the ten selector switches.

6-32. Installation

6-33. The following instructions provide a step-by-step procedure for the installation of the 2100A–10K.

a. Remove the 2100A from the outer case. Four screws on the rear panel (two each side) secure it in place.

b. Remove the lower half of the rear panel.

NOTE

Use care when removing the flex connector from J5 on the Main PCB Assy.

c. Plug one end of the connector cable into J2 on the Multi-Point Assy.

d. Plug the other end of the cable into P1 on the rear of the Main PCB Assy.

e. Place the ends of the four plastic standoffs, mounted on the Multi-Point PCB Assy into the slots in the guard cover on the bottom of the Main PCB Assy.

f. Slide the Multi-Point Assy forward until the two halves of the rear panel are together and secure them with the center mounted thumb screw.

g. Remove the plastic shield covering the lower half of the outer case front panel.

h. Slide the assembled 2100A–10 into the outer case and secure it with two screws.

6-34. OPTION –01 BATTERY PACK

6-35. Introduction

6-36. The 2100A–03, –06, and –10 instruments can be fitted with a battery pack to provide up to seven hours of continuous operation free from external power sources. The battery pack is mounted inside the 2100A case, causing no change in outside dimensions. There is, however, an increase of about two pounds in total instrument weight. Recharging the battery is accomplished by connecting the instrument, via the line power cord, to the appropriate ac power source and turning the instrument on. Recharging will take a maximum of 16 hours.

6-37. Option –01 Operation

CAUTION!

Damage may result if alkaline, zinc-carbon, or mercury batteries are charged in the 2100A.

6-38. With a fully charged Battery Pack the 2100A can be disconnected from line power and operated for approximately 7 hours, as a portable instrument. When the least significant digit shows excessive instability plug the 2100A back into line power; the instability of the digit should immediately stop. This is an indication that the battery is low. If battery operation of the 2100A is continued after instability of the last digit begins, the instrument will stop operating in about 15 minutes.

6-39. Recharging a fully discharged Battery Pack takes about 14 hours. This is accomplished by connecting the 2100A to line power and turning the unit on. The time required to charge the batteries is not significantly affected by operating the 2100A while charging.

NOTE

Battery manufacturers recommend that Ni-cad batteries be recharged at least every 90 days. Storage temperatures below +25°C are recommended.

6-40. There are some phenomena that should be considered when charging nickel-cadmium batteries. For instance, charging Ni-Cad batteries with cell case temperatures above 25°C will cause the cell's charge capacity to decrease. The decrease in capacity is linear from 100% of rated capacity at 25°C to only 60% of rated capacity at 50°C, and as low as 45% at 60°C. Cell case temperatures typically run from 5°C to 10°C above ambient temperature during charging due to heat dissipated by the charging circuit.

6-41. Charging capacity may also be affected by a cell's charge-discharge routine, due to a memory-type phenomena. For instance, if a Ni-Cad battery pack is used in a daily routine where it is allowed to discharge by only 30% before being fully recharged again, it will eventually become a battery pack capable of delivering only 30% of its rated capacity. To return such a battery pack to its rated capacity, connect an external load to completely discharge the battery at a rate equal to its capacity divided by 20. For example, a pack of nine series-connected 1.2 - volt cells having individual capacity ratings of 2.3 ampere hours should be discharged at 2.3 amp hrs/20 = .115 amp. This requires a load resistor of 10.8V/.115 amp = 100 ohms (approximate) with a wattage rating of at least (10.8V) (.115 amp) = 1.25W. (A 2-watt carbon composition resistor would be suitable.)

6-42. Allow the battery pack to discharge for 30 hours, then charge the battery pack at twice the discharge rate for 20 hours. (In the example, the charging rate would be 0.23 amperes at10.8 volts.) When charging is complete, discharge the pack at the capacity - divided-by-20 rate for 30 hours, then recharge at twice the discharge rate for 20 hours. The battery pack should now be restored to its rated capacity.

6-43. Option –01 Theory of Operation

6-44. The battery charging circuitry, shown in Figure 6-6, will supply charging current to a low battery when the 2100A is connected to line power. The output from the secondary of T1 is connected, via rectifier diodes CR1 and CR2, to a constant current source comprised of Q1, Q2, R1, R2, and CR3. This current source operates as long as the 2100A has line power applied and the power switch is on. When the ac line power is disconnected from the 2100A, operating power comes from the battery via CR4.

6-45. OPTION –01 Installation

6-46. The following procedure provides step-by-step instruction for installing the battery pack in the 2100A.

a. Remove the line power cord from the instrument.

b. Remove the four retainer screws from the rear panel, two on each side.

c. Pull the rear panel straight back from the outer case to expose the interior of the instrument.

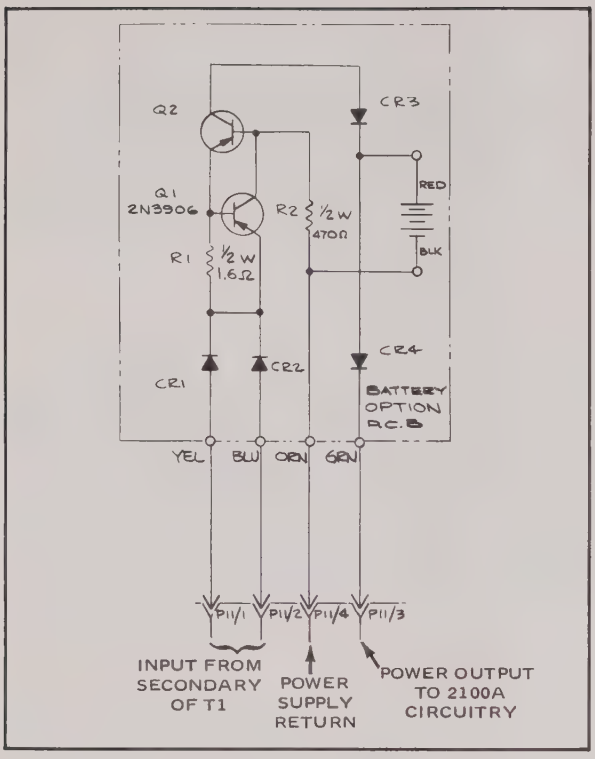

Figure 6-6. BATTERY CHARGING CIRCUIT

d. Remove four screws from the Main PCB to allow the four standoffs of the battery pack to set on the board (see Figure 6-7).

f; Secure the battery pack to the Main PCB by inserting the long screws (four supplied) down through each standoff into the Main PCB.

g. Plug the battery cable into J11 on the Main PCB.

h. Place the 2100A chassis back into the outer case.

6-47. Option –01 Battery Replacement

6-48. Use the following procedure for removing and replacing batteries.

CAUTION!

Do not attempt to use alkaline, zinc-carbon or mercury batteries in the 2100A.

a. Disconnect the line power cord. Remove the retaining screws from the rear of the instrument.case and remove the instrument from the case.

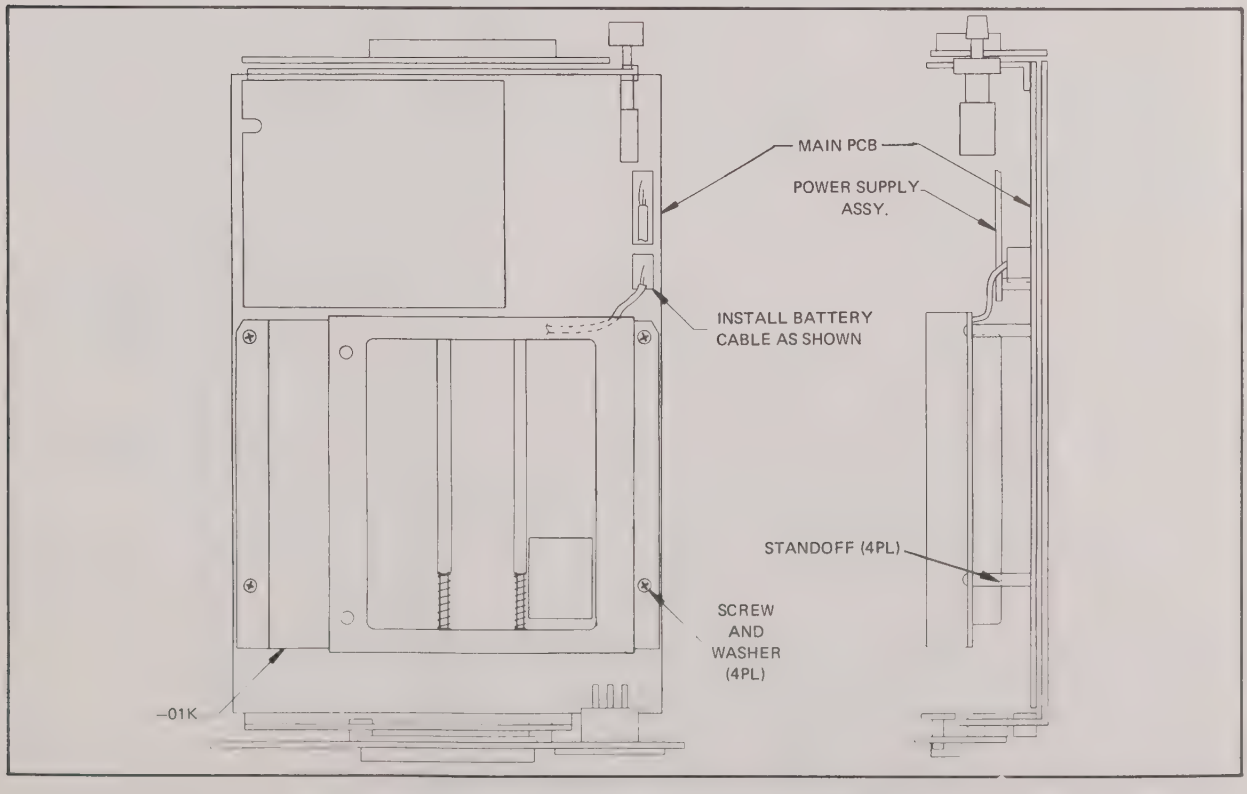

Figure 6-7. BATTERY PACK INSTALLATION

b. Remove the two spring-loaded battery retaining rods from the top of the battery pack and remove the batteries.

c. Replace the batteries with 1.2 volts, 2.3 ampere hour, nickel-cadmium (JF Part No. 370759). Install the batteries in the positions indicated by the molded forms in the battery tray.

6-49. OPTION–02, DIGITAL OUTPUT UNIT

6-50. Introduction

6-51. The Digital Output Unit (DOU) provides 2100A measurement data, in bcd format, at a rear panel output connector. The DOU options can be installed, either at the factory or in the field, in any of the three basic configurations of of the digital thermometer (2100A–03, 2100A–06, or the 2100A–10). The output data that can be available at the rear connector (some data changes with 2100A configuration) is presented in Table 6-2. The 2100A equipped with the DOU option can be connected to the Fluke Model 2010A Digital Printer to provide a printed record of temperature data.

6-52. Option –02 Specifications

6-53. The specifications pertaining to the Digital OUtput Unit are provided in Section I of this manual.

6-54. Option –02 Operation

6-55. DATA UPDATE

6-56. The data available at the DOU output connector can be updated upon command from an external source or allowed to automatically update once each 400 milliseconds. The data will be automatically updated when pin B (arm enable) of output connector J13 is pulled low (grounded). A commanded update is accomplished by leaving pin B high (open input) and pulling pin C (arm input) low (negative edge trigger) to request new data. The next complete data input from the 2100A will be applied to the DOU output connector. The arm input signal applied to pin C must be low for a minimum of 500 ns to insure that the output data will be updated.

Table 6-2. DOU INPUT/OUTPUT DATA

DATA		DOU CONNECTOR			DATA
+5V Ref		1	A		Ground
BUSY FLAG		2	B		Arm Enable
POLARITY		3	C		Arm Input
CHAN 10 (units)	(8)	4	D	(4)	CHAN 10 (units)
	(2)	5	E	(1)	
Open Thermocouple		6	F	(4)	Decimal Location
Decimal Location	(2)	7	H	(1)	
Digit 5	(8)	8	J	(4)	Digit 5
	(2)	9	K	(1)	
Digit 4	(8)	10	L	(4)	Digit 4
	(2)	11	M	(1)	
Digit 3	(8)	12	N	(4)	Digit 3
	(2)	13	P	(1)	
Digit 2	(8)	14	R	(4)	Digit 2
	(2)	15	S	(1)	
Digit 1	(8)	16	T	(4)	Digit 1
	(2)	17	U	(1)	
CHAN 1D (tens)	(8)	18	V	(4)	CHAN 10 (tens)
	(2)	19	W	(1)	
	°C	20	X		Ground
	°F	21	Y		Ground
	mV	22	Z		Ground

NOTES:

1. *Bit weights are shown in parenthesis.*
2. *Digit 1 is most significant.*
3. *Digit 5 is least significant.*
4. *Pins B and C, arm enable and arm input, have no wires in cable. Connections are available in the plug. Pin B, arm enable is normally tied low. See Figure 2.*
5. *A high on pin 6, open thermocouple, prints red.*

6-57. BUSY FLAG

6-58. The Busy Flag (J13 pin 2) is generated when new data is being applied to the DOU output connector. The output at J13 pin 2 can be selected to provide a high true indication (BUSY) or a low true indication ($\overline{\text{BUSY}}$)that new data is being applied to J13. (Refer to the installation instructions for logic level selection.) The output data on J13 is not valid while the Busy Flag is true.

6-59. Option –02 Theory of Operation

6-60. The DOU is separated by an isolation guard into two halves. One half receives binary coded data from the 2100A and serially passes the data across the guard to the second half. Circuitry in the second half will automatically, or upon command, apply the serial data to a series of shift registers which hold the input data and present it in parallel at the DOU output connector. Timing signals, generated by the 2100A, control the data transfer.

6-61. The three timing signals used to synchronize the data transfer in the DOU are: the Busy Flag (BZ) input on P7-8, the Register pulses (RG) input on P7-7, and Strobe Five (S5) input on P7-6. Figure 6-8 shows the relationship of these three signals. The BZ signal goes high for 2.5 ms (one series of strobe signals; ST0 through ST7) to indicate that new data has been loaded into the latches within the LSI chip (2100A–U1). The S5 signal that occurs while BZ is high starts the data transfer. The RG pulses then time the sampling of the four bit bcd word(s) applied to the DOU input lines. Refer to the Digital Output Unit schematic in Section 8 when reading the following theory.

6-62. When the BZ signal (P7-8) is high the S5 signal will clock U8 causing the Q output (DT signal) to go high. The DT (Data Transer) signal is applied to U11-6, U6-12, and U6-6; enabling them to pass the new input data across the GUARD to the DOU output shift registers. The S5 signal is also applied to pin 7 of dual shift register U12. The RG pulse input from P7-7 is applied to U12-9 to clock the S5 signal into the shift register. The RG pulse is also coupled across C1 to U8-4, causing the $\overline{Q}$ output (U8-2) to go low. This low output is applied to the input (U1-6) of a four pulse oscillator comprised of U1, R2, and C2. This oscillator produces four output pulses for each RG pulse input. The four pulses are inverted by U9-14 and applied to the clock inputs of dual JK Flip-Flop U5. The Q and $\overline{Q}$ outputs of U5 are connected tu U2 in such a way as to enable only one nand gate at a time. The enabled gate then opens the corresponding U3 data transfer gate; U3-13 first, then U3-5, then U3-12, and finally U3-6. The first three gate control signals, indicated as A, B, and C, are also applied to U11-12, U11-5, and U11-13 respectively.

6-63. Input data is applied to the DOU on one of two, four-bit parallel inputs (P7-2 thru 5 or P8-2 through 5) plus two three bit parallel inputs (P7-9, P7-10, and P8-7 or P8-8 through 10). The four bit data word transmitted on these lines during each strobe signal is presented in Table 6-3. The code for the decimal location is also provided. Bits of the parallel input data word are sampled one at a time so that the data word is transmitted across the guard in serial form.

6-64, During strobe five (S5), as indicated in Table 6-3, the data word for the decimal location will be present on DOU input lines P7-2 through 5. The four data transfer gates (U4-13, 5, 12, and 6) are opened by the inverted out-

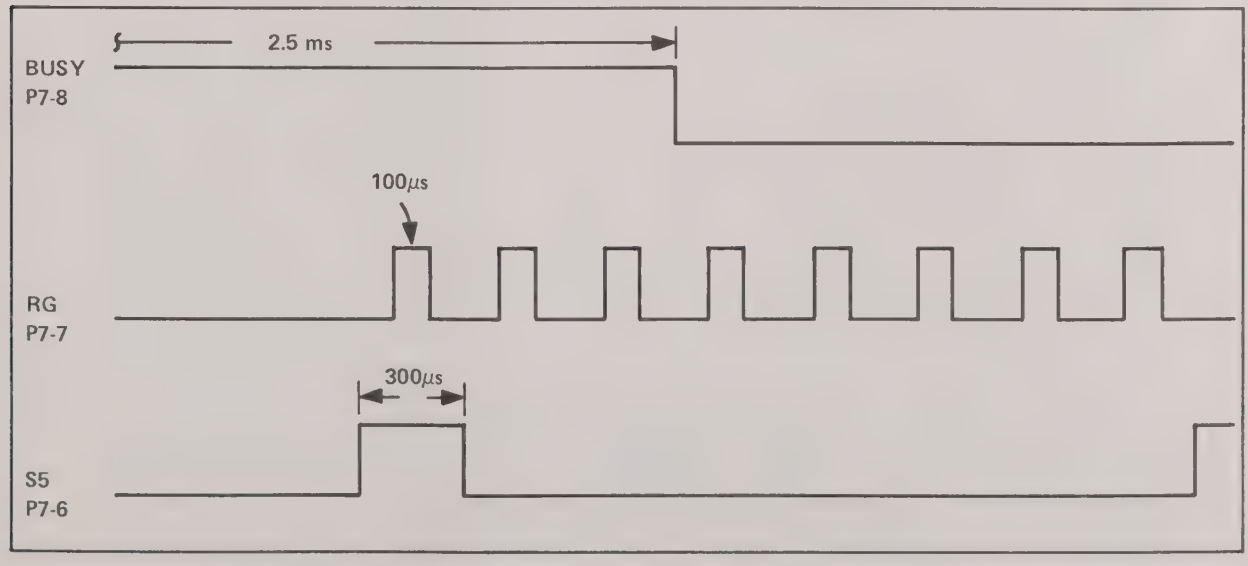

Figure 6-8. DOU TIMING SIGNALS

put signal of U12-10 and the data word is applied to data transfer gates U3-13, 5, 12, and 6. The four pulse generator in conjunction with U5 and U2 causes the U3 data transfer gates to open one at a time changing the paralled data word input to serial form for transfer across the guard. The data words of strobe six and strobe seven are transmitted across the guard in the same manner. During strobe zero, however, the output of U12-10 changes state, causing the data transfer gates of U4 to close and those of U7 to open. The data word present on P8-2 thru 5 during strobe zero is changed to serial form for transmission across the guard. The output of U12-10 again changes, at the end of strobe zero, to close the data transfer gates in U7 and reopen those in U4 for the remaining four strobe signals.

6-65. Due to the amount of data, two three bit data words, one during strobe three and one during strobe four, are transmitted across the guard by a separate path. At strobe three, the output of U12-11 will cause data transfer gates U13-13, U6-5, and U6-13 to open. At the end of strobe three, these gates close and strobe four (U12-2) will open gates U13–6, 5, and 12.

6-66. On the other side of the guard the serial data is loaded into shift registers so that all output data is presented in parallel form. The data is clocked into the shift registers by the output signal of the four pulse generator. The pulses are transmitted across the guard, via U16, and applied to U19-5 and U20-5. As long as the pulses are present at U20-5, the circuit, comprising Q4, R13, and C5, will hold U29-3 low. The resultant high output at U20-2 is inverted through U20-14 so that U19-2 will be held low for the duration of the data transfer. A low applied to U19-1 will cause a high output at U19-3. The high is inverted through U20-11 and applied to U19-6 to enable that gate to pass the clock pulses to the shift registers. The BUSY (U17-9) and $\overline{\text{BUSY}}$ (U17-11) are true as long as U19-6 is low.

6-67. The low input to U19-1 is generated to provide either automatic updating or command updating of the DOU output data. Automatic updating occurs when J13-B (ARM ENABLE) is pulled low. the low input is inverted through U16-14 and the resulting high is applied to U19–12 and U18-9. the output at U19-11 goes low which will enable U19-1. Command updating requries a high signal at U13-B (open input) which, when inverted through U17-14 will cause U18-9 to be low. The ARM INPUT signal at J13-C is an edge triggered command; i.e., the high to low transition, when inverted through U17-3, will clock U18-11. The resulting low output at U18-13 is applied to U19-9. The other input (U19-8) will be low when data is not being transmitted across the guard. (This insures that the DOU is not command-

Table 6-3. DOU INPUT DATA

DATA	CONNECTOR PINS					CONNECTOR PINS				DATA
	P7-5	P7-4	P7-3	P7-2	STROBE					
DECIMAL LOCATION	–	L	M	N	5					
3rd S. D.	8	4	2	1	6					
POLARITY	POL		$\overline{\text{POL}}$		7	P8-2	P8-3	P8-4	P80 5	
NO DATA	–	–	–	–	0	80	40	20	10	CHAN ID
4th S.D.	8	4	2	1	1					
MSD	8	4	2	1	2		P7-9	P7-10	P8-7	
LSD	8	4	2	1	3	–	OPEN THERM	mV DEGREE	CHAN ID , 8	
2nd SD	8	4	2	1	4		P8-8	P8-9	P8-10	
						–	4	2	1	CHAN ID

DECIMAL LOCATION	FUNCTION	CODE L M N
39.999	mV	1 0 0
399.99	mV	1 1 0
3999.9	DEGREE	0 0 1

ed to update the output in the middle of the data transfer.) When the output at U19-10 goes high both U18-8 and U18-6 are set. The high output from U18-1 is applied to U19-13 causing a low input at U19-1. The next data transfer will cause U19-2 to go low enabling the shift register clock pulses to pass through U19-5. At the end of the data transfer U20-15 will go high which clocks U18-3. The output at U18-1 goes low causing U19-11 to go high to disable U19-1 until a new ARM INPUT command is applied to J13-C.

6-68. Option –02 Installation

6-69, Use the following procedure to install the Digital Output Unit in the 2100A. Refer to Figure 6-9 for item locations:

a. Remove the 2100A from the outer case.

b. Remove four screws from the Main PCB to allow the four standoffs of the DOU to set on the Main PCB.

c. Position the DOU on the Main PCB as shown in Figure 6-9.

d. Insert the DOU flexible land connectors P7 and P8 into J7 and J8 on the Main PCB.

e. Secure the DOU to the Main PCB by inserting the long screws (four supplied) down through each standoff into the Main PCB.

f. Install the polarity (POL or $\overline{\text{POL}}$) and busy (BZ or $\overline{\text{BZ}}$) jumpers to obtain the desired high true or low true logic.

g. Install the two degree selection jumpers to provide either Celsius or Fahrenheit operation.

h. Install the 2100A back into the outer case.

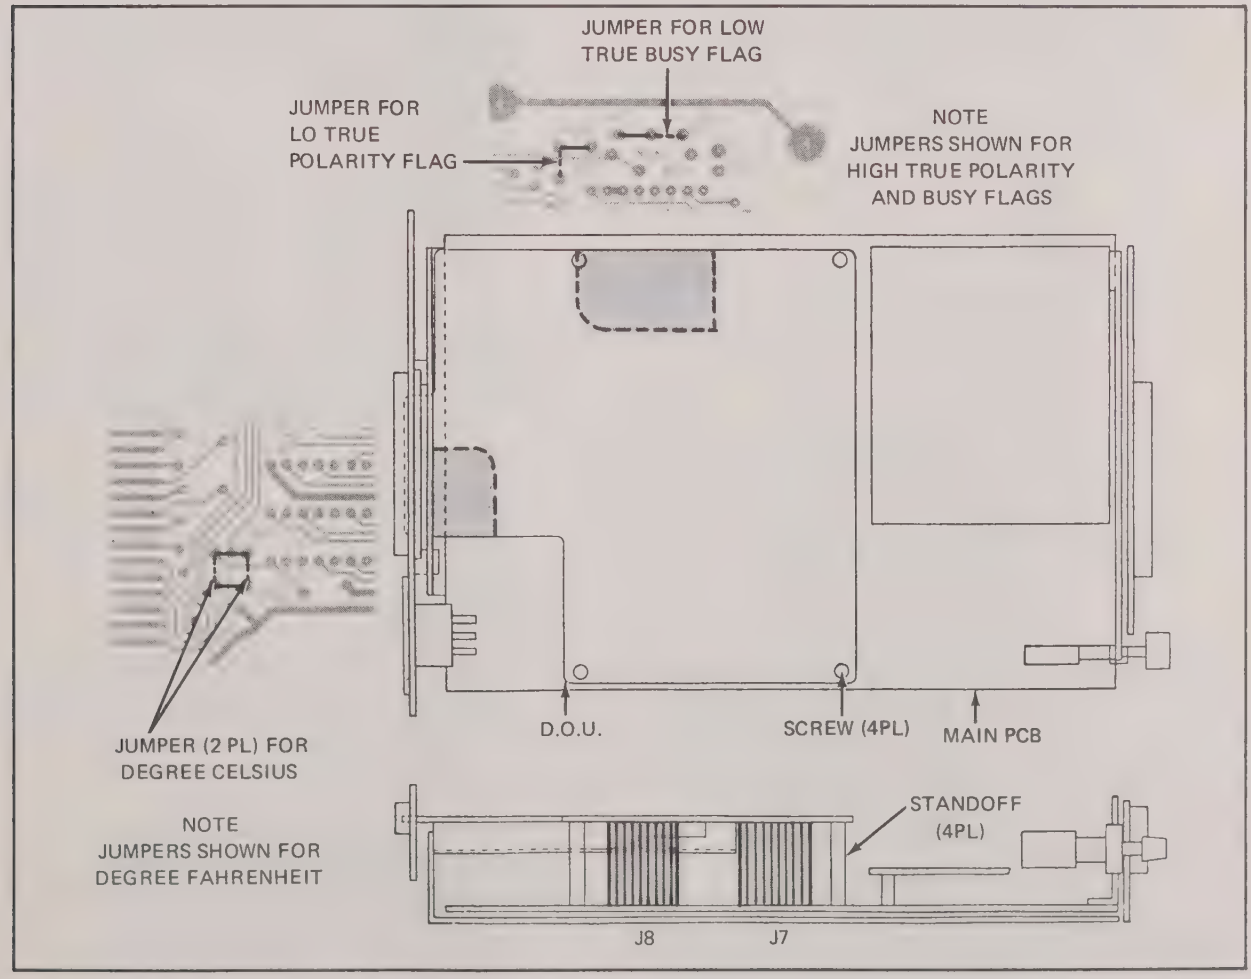

Figure 6-9. DOU INSTALLATION ILLUSTRATION

6-70. 2150A MULTIPOINT SELECTOR SWITCH

6-71. Introduction

6-72. The 2150A is an accessory to the 2100A that provides input connections for additional thermocouples. This accessory is compatable with all 2100A configurations. Three configurations of the 2150A provide switch selectable input connections for ten thermocouples (2150A-10), twenty thermocouples (2150A–20), or thirty thermocouples (2150A–30). Two or three 2150A units can be connected in series to obtain as many as ninty additional input connections.

6-73. Connection for Operations

6-74. Thermocouple connections to the 2150(s) and point selection, for display on the 2100A, are explained in the following procedure.

a. Remove the rear panel cover from the 2150 (s).

b. Slide the lower pcb out of the 2150A case and make the thermocouple connections (see Figure 6-10.)

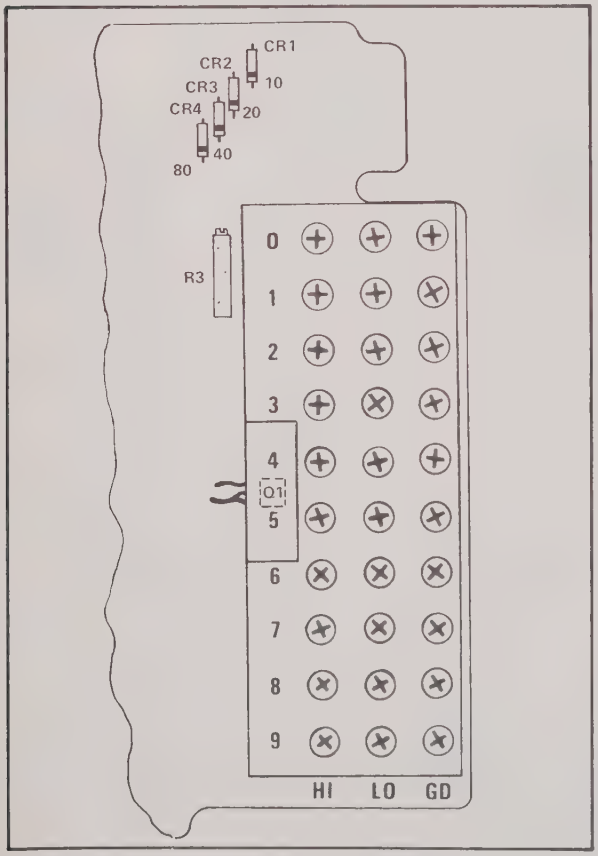

Figure 6-10. THERMOCOUPLE CONNECTIONS AND CALIBRATION ADJUSTMENT LOCATIONS

NOTE

The first metal of the thermocouple, as indicated on the 2100A front panel decal, connects to the HI terminal; the second metal, to the LO terminal If the thermocouple has a shield lead connect it to the GD (guard) terminal; if not, short the LO terminal to the GD terminal

c. Make the thermocouple connections to the middle pcb next, and the top pcb last.

6-75. The 2150A is connected to the 2100A via a ribbon cable that allows the two units to sit side-by-side or be stacked. Use the following procedure to connect the 2150A to the 2100A. Any difference in procedure related to the 2100A configuration (i.e., 2100A–03, 2100A–06, or 2100A–10) will be noted.

a. Remove the rear cover from the 2150A.

b. (1) (2100A–03 or 2100A–06)

Remove the lower rear panel of the 2100A by removing the three encircled screws and disconnecting the flex cable connector.

b. (2) (2100A–10)

Loosen the thumb screw from the rear panel (center) of the 2100A and slide the lower half of the chassis out about four inches.

c. Connect the supplied interconnect cable to the 2150A board edge connector (s) as shown in Figure 6-11. (One connection for the 2150A–10, two for the 2150A–20, and three for the 2150A–30.)

d. (1) (2100A–03 or 2100A–06)

Connect the other end of the interconnect cable to the board edge connector described as (–03 or –06 CONNECTION) in Figure 6-11.

d. (2) (2100A–10)

Connect the other end of the interconnect cable to the board edge connector described as (–10 CONNECTION) in Figure 6-11.

NOTE

Do not reconnect the flex cable of the 2100A–03 or 2100A–06 disconnected in step b(1). Bend the flex cable perpendicular to the lower rear panel before reinstallation.

e. Replace the rear panels of the 2150A and 2100A in Figure 6-11

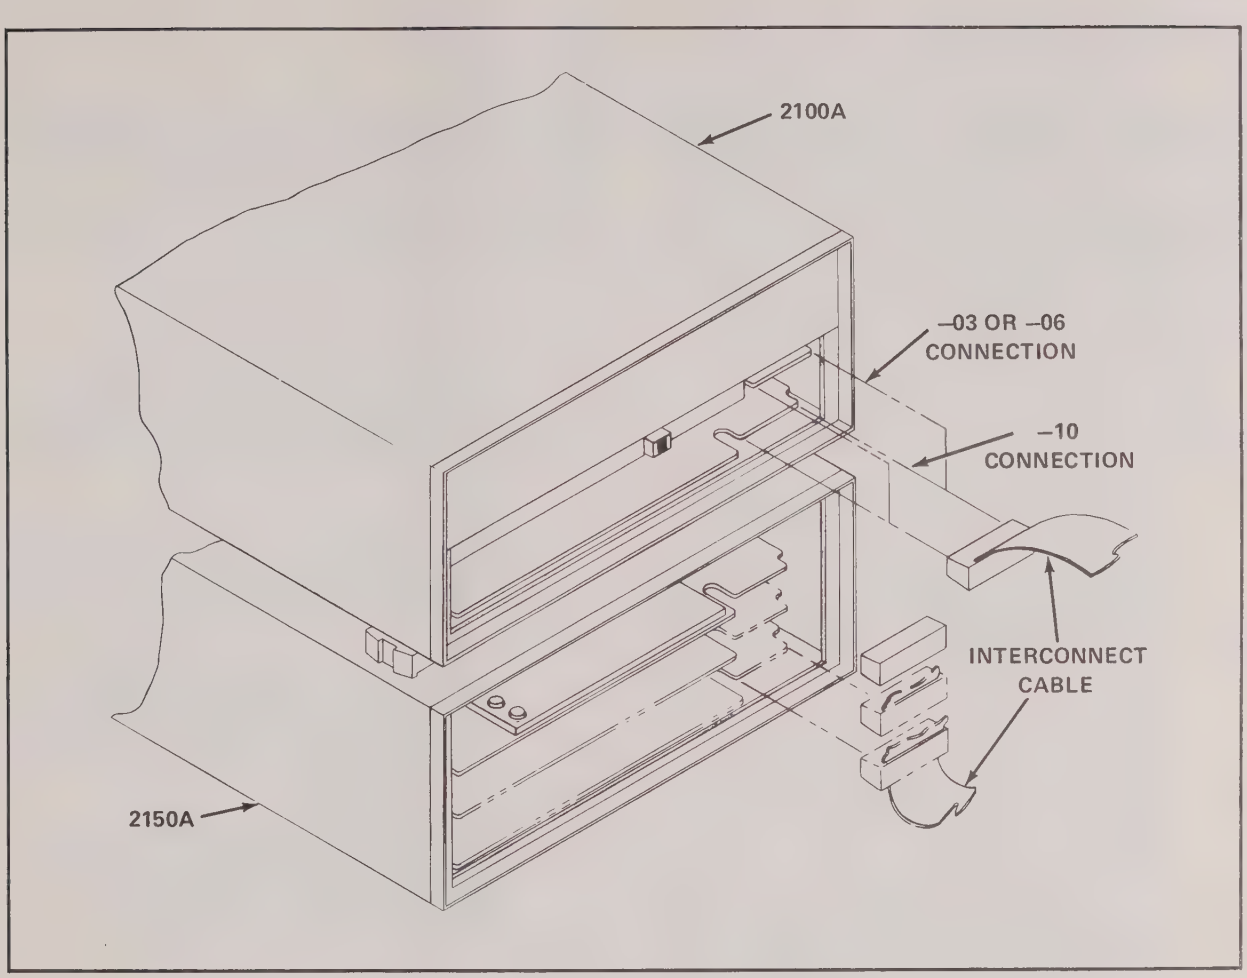

Figure 6-11. 2150A - 2100A INTERCONNECTION

6-76. Series connection of two or three 2150A instruments is described in the following procedure.

a. Remove the rear panels from the 2150A's

b. Connect one end of the interconnect cable to the board edge connectors (see Figure 6-11) on one 2150A.

c. Slide the upper board of the second 2150A out of the case.

d. Connect the free end of the interconnect cable to the board edge connector at the front end of the board removed in step c.

e. Place the upper board back into the 2150A.

NOTE

Connecting a third 2150A to the second is done in the same manner as described above.

f. Attach the series connected 2150A units to the 2100A following the same procedure used to connect a single 2150A.

6-77. When the 2150A is used with a 2100A, equipped with the –02 option (DOU). the channel identification of each decade is determined by selecting and removing the proper diodes from the 2150A pcbs. Figure 6-10 shows the four channel identification diodes, CR1, CR2, CR3 and CR4, which correspond to decades 10, 20, 40, and 80 respectively. Identification of each decade of the 2150 is accomplished in a binary coded manner. To identify the units decade, leave all diodes in place, identify the tens decade by removing CR1, the twenties decade by removing CR2, the thirties decade by removing both CR1 and CR2, and so on until the diodes of each pcb have been selected to provide the proper channel identification code.

6-78. Operational Evaluation

6-79. Correct operation of the combined 2100A and 2150A(s) is determined by comparing the temperature indicated by an accurate calibration thermometer (Princo ASTM-56C). At least one input point in each decade of inputs should be checked to insure correct operation of the 2150A (s). Use the following procedure for the operational evaluation of the 2100A/2150A (s) configuration.

NOTE

Insure that the 2100A is within the calibration limits as specified in Section 4.

a. Attach one thermocouple to the 0 position input terminals in each decade of the 2150A (s).

b. Place the 2100A/2150A (s) and thermocouples in a room temperature (20°C to 26°C) environment protected from drafts that may cause short term instabilities in the temperature.

c. Place the calibration thermometer next to the thermocouples.

d. Energize the 2100A and allow one-half hour for the instrument to stabilize.

e. Press the 0 POINT select switch of each decade (one at a time) and observe the 2100A display for a temperature indication approximately equal to that indicated by the calibration thermometer.

NOTE

Since the absolute accuracy of the temperature reading depends upon the 2100A instrument type (−03, −06, or −10) and thermocouple type (J, K, E, R, or S) plus the 2150A, the operational evaluation checks for a close approximation of equal temperature indication not an absolute accuracy.

6-80. Calibration

6-81. The 2100A(−03, −06, or −10) and 2150 (s), with attached thermocouple type, must be calibrated as a system in order to assure maximum absolute temperature display accuracy. For this reason it is recommended that the 2150A be adjusted to fit the particular 2100A it is to be used with. Use the following procedure to adjust the 2150A (s).

a. Connect the 2150A (s) to the 2100A.

b. Place the thermocouple of the appropriate type (for the 2100A-06 also press the corresponding type select switch) and the calibration thermometer into a temperature lag bath at room temperature (20° C to 26°C).

c. Connect the thermocouple to the 0 POINT to each decade of the 2150A. (Allow about two minutes for the system to stabilize before going on to step d.

d. Adjust R3, on the 2150A pcb to which the thermocouple is connected, for a 2100A display equal to the temperature indicated by the calibration thermometer plus or minus 0.1° Celsius or Fahrenheit.

e. Connect the thermocouple to each decade of the 2150A(s), and wait two minutes, then adjust the corresponding R3 for a 2100A display within 0.1° of the calibration thermometer indication.

NOTE

The CANCEL switch of the completed decade must be pressed and the POINT selection switch, corresponding to the thermocouple location on the next decade, must also be pressed.

Section 7
General Information

7-1. This section of the manual contains generalized user information as well as supplemental information to the Lists of Replaceable parts contained in Section 5. The following information is presented in this section:

TABLE	TITLE	PAGE
7-1.	List of Abbreviations	7-1
7-2.	Federal Supply Codes for Manufacturers	7-3
7-3.	Fluke Technical Service Centers	7-10
7-4.	Sales Representatives - Domestic	7-11
7-5.	Sales Representatives - International	7-13

Table 7-1. LIST OF ABBREVIATIONS AND SYMBOLS

A or amp	ampere	cont	continue
ac	alternating current	crt	cathode-ray tube
af	audio frequency	cw	clockwise
a/d	analog-to-digital	d/a	digital-to-analog
assy	assembly	dac	digital-to-analog converter
AWG	american wire guage	dB	decibel
B	bel	dc	direct current
bcd	binary coded decimal	dmm	digital multimeter
°C	Celsius	dvm	digital voltmeter
cap	capacitor	elect	electrolytic
ccw	counter clockwise	ext	external
cer	ceramic	F	farad
cermet	ceramic to metal (seal)	°F	Fahrenheit
ckt	circuit	FET	field-effect transistor
cm	centimeter	ff	flip-flop
cmrr	common mode rejection ratio	freq	frequency
comp	composition	FSN	federal stock number

Table 7-1. LIST OF ABBREVIATIONS AND SYMBOLS (Continued)

g	gram
G	giga (10^9)
gd	guard
Ge	germanium
GHz	gigahertz
gmv	guaranteed minimum value
gnd	ground
H	henry
hd	heavy duty
hf	high frequency
Hz	hertz
IC	integrated circuit
if	intermediate frequency
in	inch(es)
intl	internal
I/O	input/output
k	kilo (10^3)
kHz	kilohertz
kΩ	kilohm(s)
kV	kilovolt(s)
lf	low frequency
LED	light-emitting diode
LSB	least significant bit
LSD	least significant digit
M	mega (10^6)
m	milli (10^{-3})
mA	milliampere(s)
max	maximum
mf	metal film
MHz	megahertz
min	minimum
mm	millimeter
ms	millisecond
MSB	most significant bit
MSD	most significant digit
MTBF	mean time between failures
MTTR	mean time to repair
mV	millivolt(s)
mv	multivibrator
MΩ	megohm(s)
n	nano (10^{-9})
na	not applicable
NC	normally closed
(–) or neg	negative
NO	normally open
ns	nanosecond
opnl ampl	operational amplifier
p	pico (10^{-12})
para	paragraph
pcb	printed circuit board
pF	picofarad
pn	part number
(+) or pos	positive
pot	potentiometer
p-p	peak-to-peak
ppm	parts per million
PROM	programmable read-only memory
psi	pound-force per square inch
RAM	random-access memory
rf	radio frequency
rms	root mean square
ROM	read-only memory
s or sec	second (time)
scope	oscilloscope
SH	shield
Si	silicon
serno	serial number
sr	shift register
Ta	tantalum
tb	terminal board
tc	temperature coefficient or temperature compensating
tcxo	temperature compensated crystal oscillator
tp	test point
u or μ	micro (10^{-6})
uhf	ultra high frequency
us or μs	microsecond(s) (10^{-6})
uut	unit under test
V	volt
v	voltage
var	variable
vco	voltage controlled oscillator
vhf	very high frequency
vlf	very low frequency
W	watt(s)
ww	wire wound
xfmr	transformer
xstr	transistor
xtal	crystal
xtlo	crystal oscillator
Ω	ohm(s)
μ	micro (10^{-6})

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS

00213	Sage Electronics Corp. Rochester, New York
00327	Welwyn International, Inc. Westlake, Ohio
00656	Aerovox Corp. New Bedford, Massachusetts
00686	Film Capacitors Passaic, New Jersey
00779	AMP Inc. Harrisberg, Pennsylvania
01121	Allen-Bradley Co. Milwaukee, Wisconsin
01281	TRW Semiconductors Lawndale, California
01295	Texas Instruments, Inc. Semiconductor Components Div. Dallas, Texas
01537	Motorola Communications & Electrical Inc. Franklin Park, Illinois
01686	RCL Electronics Inc. Manchester, New Hampshire
01730	Deleted
01884	Dearborn Electronics Inc. Orlando, Florida
02114	Ferroxcube Corp. Saugerties, New York
02395	Rason Mfg. Co. Brooklyn, New York
02533	Snelgrove, C.R. Co., Ltd. Don Mills, Ontario, Canada M3B 1M2
02606	Replaced by 15801
02660	Amphenol-Borg Elect. Corp. Broadview, Illinois
02799	Areo Capacitors, Inc. Torrence, California
03508	General Electric Co. Semiconductor Products Syracuse, New York
03614	Replaced by 71400
03651	Replaced by 44655
03797	Eldema Corp. Compton, California
03877	Transistron Electronic Corp. Wakefield, Massachusetts
03888	Pyrofilm Resistor Co., Inc. Cedar Knolls, New Jersey
03911	Clairex Corp. New York, New York
03980	Muirhead Instruments, Inc. Mountainside, New Jersey
04009	Arrow Hart and Hegemen Electronic Company Hartford, Connecticut
04062	Replaced by 72136
04202	Replaced by 81312
04217	Essex Wire Corp. Wire & Cable Div. Anaheim, California
04221	Aemco, Div. of Midtex Inc. Mankato, Minnesota
04222	Aerovox Corp. (H-Q) Myrtle Beach, South Carolina
04645	Replaced by 75376
04713	Motorola Semiconductor Products Inc. Phoenix, Arizona
05082	Replaced by 94154
05236	Jonathan Mfg. Co. Fullerton, California
05277	Westinghouse Electric Corp. Semiconductor Dept. Youngwood, Pennsylvania
05278	Replaced by 43543
05397	Union Carbide Crop. Electronics Div. Cleveland, Ohio
05279	Southwest Machine & Plastic Co. Los Angeles, California
05397	Union Carbide Corp. Electronics Div. New York, New York
05571	Sprague Electric Co. Pacific Div. Los Angeles, California
05574	Viking Industries Chaisworth, California
05704	Alac, Inc. Glendale, California
05820	Wakefield Engineering Ind. Wakefield, Massachusetts
06001	General Electric Company Capacitor Department Irmo, South Carolina
06136	Replaced by 63743
06383	Panduit Corp Tinley Park, Illinois
06473	Amphenol Space & Missile Sys. Chatsworth, California
06555	Beede Electrical Instrument Co. Penacook, New Hampshire
06739	Electron Crop. Littletown, Colorado

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

06743	Clevite Corp. Cleveland, Ohio
06751	Semcor Div., Components, Inc. Phoenix, Arizona
06860	Gould National Batteries Inc. City of Industry, California
06980	Varian-Eimac San Carlos, California
07047	Ross Milton, Co., The South Hampton, Pennsylvania
07115	Replaced by 14674
07138	Westinghouse Electric Corp., Electronic Tube Division Elmira, New York
07233	TRW Electronic Components Cinch Graphic City of Industry, California
07256	Silicon Transistor Corp. Garden City, New York
07263	Fairchild Semiconductor Div. of Fairchild Camera & Instrument Corp. Mountain View, California
07344	Bircher Co., Inc. Rochester, New York
07792	Lerma Engineering Corp. Northampton, Massachusetts
07910	Teledyne Corp. (Continental Device) Hawthorne, California
08225	Industro Transistor Corp. Long Island City, New York
08261	Spectra Strip Corp Garden Grove, California
08530	Reliance Mica Corp. Brooklyn, New York
08792	Discontinued
08806	General Electric Co. Miniature Lamp Dept. Cleveland, Ohio
08863	Nylomatic Corp. Norrisville, Pennsylvania
08988	Skottie Electronics Inc. Archbald, Pennsylvania
09214	G.E. Semi-Conductor Products Dept. Auburn, New York
09353	C and K Components Watertown, Massachusetts
09423	Scientific Components, Inc. Santa Barbara, California
09922	Burndy Corp. Norwalk, Connecticut
09969	Dale Electronics Inc. Yankton, S Dakota
11236	CTS of Berne Berne, Indiana
11237	Chicago Telephone of Calif. Inc., (CTC) Paso Robles, California
11358	Discontinued
11403	Best Products Co. Chicago, Illinois
11503	Keystone Mfg. Div. of Avis Industrial Crop. Warren, Michigan
11711	General Instrument Corp Rectifier Division Hickville, New York
11726	Qualidyne Corp. Santa Clara, California
12014	Chicago Rivet & Machine Co. Bellwood, Illinois
12040	National Semiconductor Corp. Danburry, Connecticut
12060	Diodes, Inc. Chatsworth, California
12136	Philadelphia Handle Co. Camden, New Jersey
12300	Potter-Brumfield Division AMF Canada LTD. Guelph, Ontario, Canada
12323	Presin Co., Inc. Shelton, Connecticut
12327	Freeway Washer & Stamping Co. Cleveland, Ohio
12400	Replaced by 75042
12615	U.S. Terminals Inc. Cincinnati, Ohio
12617	Hamlin Inc. Lake Mills, Wisconsin
12697	Clarostat Mfg. Co. Dover, New Hampshire
12749	James Electronics Chicago, Illinois
12856	Micrometals Sierra Madre, California
12954	Dickson Electronics Corp. Scottsdale, Arizona
12969	Unitrode Corp. Watertown, Massachusetts
13103	Themalloy Co. Dallas, Texas
13327	Solitron Devices Inc. Tappan, New York

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

13511	Amphenol Corp. Los Gatos, California
13606	Sprague Electric Co. Transistor Div. Concord, New Hampshire
13839	Replaced by 23732
14099	Semtech Corp. Newbury Park, California
14193	California Resistor Corp. Santa Monica, California
14298	American Components, Inc. Conshohocken, Pennsylvania
14655	Cornell-Dubilier Electronics Newark, New Jersey
14674	Discontinued, see 16299
14752	Electro Cube Inc. San Gabriel, California
14869	Replaced by 96853
15636	Elec-Trol Inc. Northridge, California
15801	Fenwal Electronics Inc. Framingham, Massachusetts
15818	Amelco Semiconductor Div. of Teledyne Inc. Mountain View, California
15849	USECO, Inc. Mt. Vernon, New York
15898	International Business Machines (IBM) Essex Junction, Vermont
15909	Replaced by 17870
16299	Corning Glass Raleigh, North Carolina
16332	Replaced by 28478
16473	Cambridge Scientific Ind. Inc. Cambridge, Maryland
16742	Paramount Plastics Downey, California
16758	Delco Radio Div. of General Motors Kokomo, Indiana
17001	ITT Cannon Santa Ana, California
17069	Circuit Structures Lab. Upland, California
17338	High Pressure Eng. Co., Inc. Oklahoma City, Oklahoma
17856	Siliconix, Inc. Sunnyvale, California
17870	Daven Div. of Thomas A. Edison Ind. - McGraw - Edison Co. Manchester, New Hampshire
18083	Deleted
18178	Vactec Inc. Maryland Heights, Missouri
18324	Signetics Corp. Sunnyvale, California
18612	Vishay Intertechnology Inc. Malvern, Pennsylvania
18736	Voltronics Corp. Hanover, New Jersey
18927	G T E Sylvania Inc. Precision Material Group Parts Division Titusville, Pennsylvania
19429	Discontinued, use 89536
19451	Perine Machinery & Supply Co. Seattle, Washington
19701	Electra Mfg. Co. Independence, Kansas
25084	Enochs Mfg. Co. Indianapolis, Indiana
20891	Self-Organizing Systems, Inc. Dallas, Texas
21604	Buckeye Stamping Co. Columbus, Ohio
21845	Solitron Devices Inc. Transistor Division Riveria Beach, Florida
22767	ITT Semiconductors Div. of ITT Palo Alto, California
23050	Product Comp. Corp. Mount Vernon, New York
23732	Tracor Rockville, Maryland
23880	Stanford Applied Engrng. Santa Clara, California
23936	Pamotor Div., Wm. J. Purdy Co. Burlingame, California
24248	Southco Div. of South Chester Corp. Lester, Pennsylvania
24355	Analog Devices Inc. Norwood, Massachusetts
24655	General Radio Co. West Concord, Massachusetts
24759	Lenox-Fugle Electronics Plainfield, New Jersey
25088	Siemen Corp. Isilen, New Jersey
25403	Amperex Electronic Corp. Semiconductor & Receiving Tube Division Slatersville, Rhode Island

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

27014	National Semiconductor Corp. Santa Clara, California
27264	Molex Products Downers Grove, Illinois
28213	Minnesota Mining & Mfg. Co. Consumer Products Div. St. Paul, Minnesota
28425	Bohannan Industries Fort Worth, Texas
28478	Deltrol Controls, Corp. Milwaukee, Wisconsin
28480	Hewlett Packard Co. Palo Alto, California
28520	Heyman Mfg. Co. Kenilworth, New Jersey
29083	Monsanto, Co., Inc. Santa Clara, California
29604	Stackpole Components Co. Raleigh, North Carolina
30148	A B Enterprise Inc. ahoskie, North Carolina
30323	Illinois Tool Works, Inc. Chicago, Illinois
31091	Optimax Inc. Colmar, Pennsylvania
32539	Mura Corp. Great Neck, New York
32767	Griffith Plastic Products Co. Burlingame, California
32879	Advanced Mechanical Components Northridge, California
32897	Erie Technological Products, Inc. Frequency Control Div. Carlisle, Pennsylvania
32997	Bourns Inc. Trimpot Products Division Riverside, California
33173	General Electric Co. Tube Dept. Owensboro, Kentucky
34333	Silicon General Westminister, California
34335	Advanced Micro Devices Sunnyvale, California
37942	Mallory, P.R. & Co., Inc. Indianapolis, Indiana
42498	National Company Melrose, Massachusetts
43543	Nytronics Inc. Transformer Co. Div. Alpha, New Jersey
44655	Ohmite Mfg. Co. Skokie, Illinois
49671	Radio Corp. of America New York, New York
49956	Raytheon Company Lexington, Maine
50088	Mostek Corp. Carrollton, Texas
50579	Litronix Inc. Cupertino, California
51605	Scientific Components Inc. Linden, New Jersey
53021	Sanamo Electric Co. Springfield, Illinois
54294	Shallcross, A Cutler-Hammer Co. Selma North Carolina
55026	Simpson Electric Company Chicago, Illinois
56289	Sprague Electric Co. North Adams, Massachusetts
58474	Superior Electric Co. Bristol, Connecticut
60399	Torrington Mfg. Co. Torrington, Connecticut
62460	Deleted
63743	Ward Leonard Electric Co. Mount Vernon, New York
64834	West Mfg. Co. San Francisco, California
65092	Weston Instruments Inc. Newark, New Jersey
66150	Winslow Tele-Tronics Inc. Asbury Park, New Jersey
70563	Amperite Company Union City, New Jersey
70903	Belden Mfg. Co. Chicago, Illinois
71002	Birnbach Radio Co., Inc. New York, New York
71236	"ELMENCO" Willimantic, Connecticut
71400	Bussmann Mfg. Div. of McGray - Edison Co. Saint Louis, Missouri
71450	CTS Corp. Elkhart, Indiana
71468	ITT Cannon Electric Inc. Los Angeles, California
71482	Clare, C.P. & Co. Chicago, Illinois
71590	Centralab Div. of Globe Union Inc. Milwaukee, Wisconsin

71707	Coto Coil Co., Inc. Providence, Rhode Island
71744	Chicago Miniature Lamp Works Chicago, Illinois
71785	Cinch Mfg. Co. & Howard B. Jones Div. Chicago, Illinois
72005	Driver, Wilber B., Co. Newark, New Jersey
72092	Replaced by 06980
72136	Electro Motive Mfg. Co. Williamantic, Connecticut
72259	Nytronics Inc. Berkeley Heights, New Jersey
72354	Deleted
72619	Dialight Corp. Brooklyn, New York
72653	G. C. Electronics Rockford, Illinois
72665	Replaced by 90303
72794	Dzus Fastener Co., Inc. West Islip, New York
72928	Gudeman Co. (Gulton Ind.) Chicago, Illinois
72982	Erie Tech. Products Inc. Erie, Pennsylvania
73138	Beckman Instruments Inc. Helipot Division Fullerton, California
73293	Hughes Aircraft Co. Electron Dynamics Div. Torrence, California
73445	Amperex Electronic Corp. Hicksville, New York
73559	Carling Electric Inc. Hartford, Connecticut
73586	Circle F Industries Trenton, New Jersey
73734	Federal Screw Products, Inc. Chicago, Illinois
73743	Fischer Special Mfg. Co. Cincinnati, Ohio
73899	JFD Electronics Co. Brooklyn, New York
73949	Guardian Electric Mfg. Co. Chicago, Illinois
74199	Quam Nichols Co. Chicago, Illinois
74217	Radio Switch Corp. Marlboro, New Jersey
74276	Signalite Inc. Neptune, New Jersey
74306	Piezo Crystal Co. Carlisle, Pennsylvania
74542	Hoyt Elect. Instr. Works Penacook, New Hampshire
74970	Johnson. E. F., Co. Waseca, Minnesota
75042	IRC Inc. (Div. of TRW) Philadelphia, Pennsylvania
75376	Kurz-Kasch. Inc. Dayton, Ohio
75378	CTS Knights Inc. Sandwich, Illinois
75382	Kulka Electric Corp. Mount Vernon, New York
75915	Littlefuse Inc. Des Plaines, Illinois
76854	Oak Mfg. Co. Crystal Lake, Illinois
77342	Potter & Brumfield Div. of Amer. Machine & Foundry Princeton, Indiana
77638	General Instrument Corp. Rectifier Division Brooklyn, New York
77969	Rubbercraft Corp. of Calif. LTD. Torrance, California
78189	Shakeproof Div. of Illinois Tool Works Elgin, Illinois
78277	Sigma Instruments, Inc. South Braintree, Massachusetts
78488	Stackpole Carbon Co. Saint Marys, Pennsylvania
78553	Tinnerman Products Cleveland, Ohio
78136	Waldes Kohinoor Inc. Long Island City, New York
79497	Western Rubber Company Goshen, Indiana
79963	Zierick Mfg. Corp. New Rochelle, New York
80031	Mepco Div. of Sessions Clock Co. Morristown, New Jersey
80145	API Instruments Co. Chesterland, Ohio
80183	Sprague Products North Adams, Massachusetts
80294	Bourns Inc. Riverside, California
80583	Hammarlund Co., Inc. Mars Hill, North Carolina
80640	Stevens, Arnold Inc. Boston, Massachusetts

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

81073	Grayhill, Inc. La Grange, Illinois
81590	Korry Mfg. Co. Seattle, Washington
81312	Winchester Electronics Div. of Litton Industries Oakville, Connecticut
81439	Therm-O-Disc Inc. Mansfield, Ohio
81483	International Rectifier Corp. Los Angeles, California
81741	Chicago Lock Corp. Chicago, Illinois
82305	Palmer Electronics South Gate, California
82389	Switchcraft Inc. Chicago, Illinois
82415	Price Electric Corp. Frederick, Maryland
82872	Roanwell Corp. New York, New York
82877	Rotron Mfg. Co., Inc. Woodstock, New York
82879	ITT Wire & Cable Div. Pawtucket, Rhode Island
83003	Varo Inc. Garland, Texas
83298	Bendix Corp. Electric Power Division Eatontown, New Jersey
83330	Smith, Herman H., Inc. Brooklyn, New York
83478	Rubbercraft Corp. of America New Haven, Connecticut
83594	Burroughs Corp. Electronic Components Div. Plainfield, New Jersey
83740	Union Carbide Corp. Consumer Products Div. New York, New York
84171	Arco Electronics, Inc. Great Neck, New York
84411	TRW Ogallala, Nebraska
84613	Fuse Indicator Corp. Rockvillw, Maryland
86577	Precision Metal Products Stoneham, Massachusetts
86684	Radio Corp. of America Electronic Components & Devices Harrison, New Jersey
86689	Deleted
87034	Marco-Oak Inc. Anaheim, California
88245	Litton Products Inc. Van Nuys, California
88419	Use 14655
88690	Replaced by 04217
89536	Fluke, John Mfg. Co., Inc. Seattle, Washington
89730	Replaced by 08806
90201	Mallory Capacitor Co. Indianapolis, Indiana
90215	Best Stamp & Mfg. Co. Kansas City, Missouri
90211	Square D Co. Chicago, Illinois
90303	Mallory Battery Co. Tarrytown, New York
91293	Johanson Mfg. Co. Boonton, New Jersey
91407	Replaced by 58474
91502	Associated Machine Santa Clara, California
91506	Augat Attleboro, Massachusetts
91637	Dale Electronics Inc. Columbus, Nebraska
91662	Elco Corp. Willow Grove, Pennsylvania
91737	Gremar Mfg. Co., Inc. (ITT) Woburn, Massachusetts
91802	Industrial Devices, Inc. Edgewater, New Jersey
91833	Keystone Electronics Corp. New York, New York
91836	King's Electronics Tuckahoe, New York
91929	Honeywell Inc. Micro Switch Div. Freeport, Illinois
91934	Miller Electric Co., Inc. Pawtucket, Rhode Island
93332	Sylvania Electric Products Semiconductor Products Div. Woburn, Massachusetts
94145	Replaced by 49956
94154	Tung-Sol Div. of Wagner Electric Corp. Newark, New Jersey
95146	Alco Electronics Products Inc. Lawrence, Massachusetts
95263	Leecraft Mfg. Co. Long Island City, New York
95264	Replaced by 98278

Table 7-2. FEDERAL SUPPLY CODES FOR MANUFACTURERS (Continued)

95275	Vitramon Inc. Bridgeport, Connecticut
95303	Radio Corp. of America Solid State & Receiving Tube Div. Cincinnati, Ohio
95354	Methode Mfg. Corp. Rolling Meadows, Illinois
95712	Dage Electric Co., Inc. Franklin, Indiana
95987	Weckesser Co. Inc. Chicago, Illinois
96733	San Fernando Electric Mfg. Co. San Fernando, California
96853	Rustrak Instrument Co. Manchester, New Hampshire
96881	Thomson Industries, Inc. Manhasset, New York
97540	Master Mobile Mounts Div. of Whitehall Electronics Corp. Los Angeles, California
97913	Industrial Electronic Hdware Corp. New York, New York
97945	White, S.S. Co. Plastics Div. New York, New York
97966	Replaced by 11358
98094	Replaced by 49956
98159	Rubber-Teck, Inc. Gardena, California
98278	Microdot Inc. Pasadena, California
98291	Sealectro Corp. Conhex Div. Mamaroneck, New York
98388	Accurate Rubber & Plastics Culver City, California
98743	Replaced by 12749
98925	Deleted
99120	Plastic Capacitors, Inc. Chicago, Illinois
99217	Southern Electronics Corp. Burbank, California
99392	STM Oakland, California
99515	Marshall Industries Capacitor Div. Monrovia, California
99779	Barnes Corp. Lansdowne, Pennsylvania
99800	American Precision Industries Inc. Delevan Division East Aurora, New York
	Toyo Electronics (R-Ohm Corp.) Irvine, California
	National Connector Minneapolis, Minnesota

Table 7-3. FLUKE TECHNICAL CENTERS

Fluke Western Technical Center
2020 North Lincoln St.
Burbank, CA 91504
Tel. 213-849-4641
TWX: 910-497-2086

Fluke Western Technical Center
2359 De La Cruz Blvd.
Santa Clara, CA 95050
Tel. 408-244-1505
TWX: 910-338-0121

Fluke S.W. Technical Center
Unit 4
1980 South Quebec Street
Denver, CO 80231
Tel. 303-750-1228

Fluke S.E. Technical Center
P.O. Box 6578
940 North Fern Creek Avenue
Orlando, FL 32803
Tel. 305-896-2296
TWX: 810-850-0185

Fluke Midwestern Technical Center
1287 North Rand Road
Des Plaines, IL 60016
Tel. 312-298-7470
TWX: 910-233-4978

Fluke Mideastern Technical Center
11501 Huff Court
Kensington, MD 20795
Tel. 301-881-5300
TWX: 710-825-9645

Fluke N.E. Technical Center
109 Massachusetts Ave.
Lexington, MA 02173
Tel. 617-861-8620
TWX: 710-826-1715

Fluke Midwestern Technical Center
10800 Lyndale Avenue South
Minneapolis, MN 55420
Tel. 612-884-4541
TWX: 910-576-3141

Fluke Eastern Technical Center
101 Berkshire Ave.
Paterson, NJ 07502
Tel. 201-742-3215
TWX: 710-988-5945

Fluke Eastern Technical Center
4515 Culver Road
Rochester, NY 14622
Tel. 716-342-6940
TWX: 510-253-6145

Fluke S.E. Technical Center
P.O. Box 9619
1310 Beaman Place
Greensboro, NC 27408
Tel. 919-273-1918
TWX: 510-925-1173

John Fluke Mfg. Co., Inc.
7001 - 220th S.W.
Mountlake Terrace, WA 98043
Tel. 206-774-2238
TWX: 910-449-2850

Fluke Canadian Technical Center
640 11th Ave. S.W.
Calgary Alberta
Tel. 403-261-0780
TWX: 610-821-2233

Fluke Canadian Technical Center
6427 Northam Drive
Mississauga, Ontario
Tel. 416-678-1500
TWX: 610-492-2119

Table 7-4. SALES REPRESENTATIVES – DOMESTIC

ALABAMA

HUNTSVILLE
BCS Associates, Inc.
3322 S. Memorial Parkway
P.O. Box 1273
Tel. (205) 881-6220
Zip 35801

ALASKA

ANCHORAGE
Harry Lang & Associates
1406 W. 47th Ave.
Tel. (907) 279-5741
Zip 99503

ARIZONA

PHOENIX
Barnhill Associates
7319 E. Stetson Dr.
Tel. (602) 947-7841
Scottsdale, AZ 85251

CALIFORNIA

LOS ANGELES
Instrument Specialists, Inc.
2020 N. Lincoln Street
Burbank , CA 91504
Tel. (213) 849-7181

NEWPORT BEACH
Instrument Specialists, Inc.
4120 Birch Street
Suite 119
Tel. (714) 752-6200
Zip 92660

SANTA CLARA
Instruments Specialists, Inc.
2359 De La Cruz Blvd.
Tel. (408) 244-1505
Zip 95050

SAN DIEGO
Instrument Specialists, Inc.
4805 Mercury St., Ste. 1
Tel. (714) 565-2555
Zip 92111

COLORADO

DENVER
Barnhill Associates, Inc.
1980 South Quebec St.
Tel. (303) 750-1228
Zip 80231

CONNECTICUT

HARTFORD
Instrument Representatives, Inc.
P.O. Box 165
Glastonbury, CT 06033
Tel. (203) 633-0777

FLORIDA

ORLANDO
BCS Associates, Inc.
940 N. Fern Creek Ave.
Tel. (305) 896-4881
(305) 843-1510
Zip 32803

GEORGIA

DECATUR
BCS Associates, Inc.
2522 Tanglewood Road
Tel. (404) 321-0980
Zip 30033

HAWAII

HONOLULU
Industrial Electronics, Inc.
646 Queen Street
P.O. Box 135
Tel. (808) 533-6095
Zip 96817

ILLINOIS

CHICAGO
Cozzens & Cudahy, Inc.
1301 N. Rand Road
Des Plaines, IL 60016
Tel. (312) 298-3600

INDIANA

INDIANAPOLIS
Cozzens & Cudahy, Inc.
Port O'Call Executive Ctr.
21 Beachway Drive
Tel. (317) 244-2456
Zip 46244

KENTUCKY

VALLEY STATION
BCS Associates, Inc.
4506 Freda Way
Tel. (502) 935-9634
Zip 40272

MARYLAND

BALTIMORE
Electronic Marketing Assoc.Inc.
11501 Huff Court
Kensington, MD 20795
Tel. (301) 881-5300,744-7700

MASSACHUSETTS

BOSTON
Instrument Representatives, Inc.
109 Massachusetts Ave.
Lexington, MA 02173
Tel. (617) 861-8620

MICHIGAN

DETROIT
WKM Associates, Inc.
1474 East Outer Dr.
Tel. (313) 892-2500
Zip 48234

MINNESOTA

MINNEAPOLIS
Cozzens & Cudahy, Inc.
10800 Lyndale Ave. S.
Tel. (612) 884-4336
Zip 55420

MISSOURI

KANSAS CITY
Cozzens & Cudahy, Inc
4404 Chouteau Traffic Way
Tel. (816) 454-5836
Zip 64117

ST. LOUIS
Cozzens & Cudahy Inc.
P.O. Box 10013
Lambert Field - Zip 63145
Tel. (314) 423-1234

NEW JERSEY

NEWARK
SBM Representatives
1519 Stuyvesant Avenue
Union, NJ 07083
Tel. (201) 687-8737

NEW MEXICO

ALBUQUERQUE
Barnhill Associates
1410 - D Wyoming N.E.
Tel. (505) 299-7658
Zip 87112

NEW YORK

NEW YORK
SBM Representatives
28 Hobby Street
Pleasantville, NY 10570
Tel. (914) 769-1811

ROCHESTER
SBM Representatives
4515 Culver Road
Tel. (716) 226-1400
Zip 14622

NORTH CAROLINA

GREENSBORO
BCS Associates, Inc.
P.O. Box 9619
1310 Beaman Place
Tel. (919) 273-1918
Zip 27408

OHIO

CLEVELAND
WKM Associates, Inc.
16141 Puritas Ave.
Tel. (216) 267-0445
Zip 44135

DAYTON
WKM Associates, Inc.
6073 Far Hills Ave.
Tel. (513) 434-7500
Zip 45459

OREGON

BEAVERTON
Showalter Instruments, Inc.
13485 S.W. Hargis Road
Tel. (503) 646-3004
Zip 97005

PENNSYLVANIA

PHILADELPHIA
Electronic Marketing Assoc.
210 Goddard Blvd., Ste. 100
King of Prussia, PA
Tel. (215) 248-5050
Zip 19406

PITTSBURGH
WKM Associates, Inc.
90 Clairton Blvd.
Tel. (412) 892-2953
Zip 15236

Table 7-4. SALES REPRESENTATIVES – DOMESTIC (Continued)

TEXAS

DALLAS
Barnhill Associates
908 Business Parkway
Richardson, TX 75080
Tel. (214) 231-2573

HOUSTON
Barnhill Associates
10606 Hempstead Hwy.
Suite 132
Tel. (713) 688-9971
Zip 77018

VIRGINIA

WILLIAMSBURG
BCS Associates
107 Rich Neck Road
Tel. (703) 229-5108
Zip 23185

WASHINGTON

SEATTLE
Showalter Instruments, Inc.
1521 - 130 N.E.
Bellevue, WA 98005
Tel. (206) 455-4922
(206) 624-4035

CANADA

BRITISH COLUMBIA

NORTH VANCOUVER
Allan Crawford Associates, Ltd.
234 Brooksbank Ave.
Tel. (604) 980-4831

ALBERTA

CALGARY
Allan Crawford Associates, Ltd.
640 - 11th Ave. S.W.
Tel. (403) 261-0780

ONTARIO

MISSISSAUGA
Allan Crawford Associates, Ltd.
6427 Northam Drive
Tel. (416) 678-1500

OTTAWA, 3
Allan Crawford Associates, Ltd.
1299 Richmond Road
Tel. (613) 829-9651

QUEBEC

LONGUEUIL
Allan Crawford Associates, Ltd.
1330 Marie Victorian Blvd. East
Tel. (514) 670-1212

NOVA SCOTIA

DARTMOUTH
Allan Crawford Associates, Ltd.
St. 201, Townsend Pl.
800 Wind Mill Road
Burns Industrial Park
Dartmouth, N.S. B3B 1L1
Tel. (902) 469-7865

Table 7-5. SALES REPRESENTATIVES – INTERNATIONAL

Argentina
Coasin S.A.
Virrey del Pino 4071
Buenos Aires, Argentina
Tel. 523185

Australia
Elmaesco Instruments Pty. Ltd.
P.O. Box 334
Brookvale, N.S.W. Australia 2100
Tel. 939-7944

Austria
Kontron GmbH & Co. KG
Lederergasse 16
1080 Vienna, Austria
Tel. 425667

Belgium
C.N. Rood S/A
37 Place de Jamblinne de Meux
B-1040 Brussels, Belgium
Tel. 352135

Brazil
Ambriex S.A.
Rue Ceara, 104-2° . e 3° . Andares
ZC - 29
Rio de Janeiro GB, Brazil
Tel. 2647406

Ambriex S.A.
Rua Tupi, 535
01233 Sao Paulo, SP Brazil
Tel. 527806

Caribbean
West Indies Sales Co.
606 Calle Aboy
San Juan, Puerto Rico 00907
Tel. (809) 723-3743

Central America
Intermetra, Corporation
11 Park Place, Suite 2003
New York, NY 10007
Tel. (212) 349-7630

Chile
Coasin Chile Ltd.
Casilla 14588
Correo 15
Santiago, Chile
Tel. 396713

Columbia
Marones Ltda.
Apartado Aero 90687
Bogota 8, Colombia
Tel. 364731

Cyprus
Chris Radiovision Ltd.
P.O. Box 1989
Nicosia, Cyprus
Tel. 66121

Denmark
Tage Olsen A/S
Teglvaerksgade 37
2100 Copenhagen 0, Denmark
Tel. 294800

Ecuador
Proteco Coasin CIA, Ltda.
Apartado 228A
Quito, Ecuador
Tel. 526759

Finland
Oy Findip AB
Teollisuustie 7
02700 Kauniainen, Finland
Tel. 502255

France
M.B. Electronique S.A.
29 Rue Emile Duclaux
92, Suresnes, France
Tel. 7723108

Greece
Hellenic Scientific Representations Ltd.
10, Nympheou Street
Athens, 615 Greece
Tel. 7792320

Hong Kong
Gilman & Co. Ltd.
P.O. Box 56
Hong Kong
Tel. 227011

India
Hinditron Services Pvt. Ltd.
69/A L. Jagmohandas Marg
Bombay 400006, India
Tel. 365344

Indonesia
P.T. United Dico-Citas Co., Ltd.
JLN Penjaringan 39A
Jakarta, Indonesia

Iran
Berkeh Company, Ltd.
20 Salm Road, Roosevelt Ave.
Tehran, Iran
Tel. 828294

Italy
Sistrel S.p.A.
Via Giorgio da Sebenico 11/13
00143 Roma, Italy
Tel. 06-500-1860

Japan
Toyo Trading Company, Ltd.
P.O. Box 5014
Tokyo International
Tokyo 100-31, Japan
Tel. 2790771

Toyo Trading Company, Ltd.
Suzuki Bldg.
2-38 Junkeicho-dori
Minami-ku, Osaka
Tel. (06) 262-3471

Korea
Asia Science & Co
International P.O. Box 1250
Seoul, Korea
Tel. 76-2761

Lebanon
General Marketing Trading &
Contracting Company
Anis Nsouli Street
Nsouli Bldg.
P.O. Box 155.655
Beirut, Lebanon
Tel. 319383

Malaysia
O'Connor's (Pte) Ltd.
P.O. Box 1197
Kota Kinabalu, Sabah
East Malaysia
Tel. 54082

P.O. Box 91
Petaling Jaya, Selangor
West Malaysia
Tel. 51563

Mexico
Mexitek, S.A.
Eugenia 408
Departments 1 y 5
Mexico 12, D.F.
Tel. 5360910

Table 7-5. SALES REPRESENTATIVES – INTERNATIONAL (Continued)

The Netherlands
C.N. Rood, B.V.
P.O. Box 42
13 - Cort van der Lindenstraat
Rijswijk (Z.H.) 2100
Netherlands
Tel. 996360

Fluke (Nederland) B.V.
P.O. Box 5053
Ledeboerstraat 27
Tilburg, Netherlands
Tel. (13) 673973

New Zealand
Elmeasco Instruments Pty. Ltd.
P.O. Box 30515
Lower Hutt, New Zealand
Tel. 63976

Nigeria
Deemtee Electrotechnics Ltd.
P.O. Box 3073
Lagos, Nigeria

Norway
Morgenstierne & Co. A/S
P.B. 6688 Rodelokka
Oslo 5, Norway
Tel. 372940

Pakistan
Pak International Operations
P.O. Box 5323
505 Muhammadi House
McLeod Rd.
Karachi, Pakistan

Peru
Importaciones y Representaciones
Electronicos S.A.
Avda, Franklin D. Roosevelt 105
Lima 1, Peru
Tel. 272078

Portugal
Equipamentos De Laboratorio Lda.
P.O. Box 1100
Lisbon 1, Portugal
Tel. 976551

Singapore
O'Connor's (Pte) Ltd.
98 Pasir Panjang Road
Singapore 5, Singapore
Tel. 637944

South Africa
Elairco (Pty.) Ltd.
P.O. Box 13091
Northmead 1511
Benoni, Transvaal
Republic of South Africa
Tel. 545513

Spain
Ataio Ingenieros S.A.
Enrique Larreta 12
Madrid 16, Spain
Tel. 7330562

Sweden
Teleinstrument AB
P.O. Box 490
Maltesholmvagen 490
S-162 04 Vallingby - 4
Sweden
Tel. 380370

Switzerland
Kontron Electronic A.G.
Bernerstrasse (Sud) 169
8048 Zurich, Switzerland
Tel. 628282

Taiwan - Republic of China
Heighten Trading Co., Ltd.
P.O. 1408 - Taipei, Taiwan 104
Republic of China
Tel. 518324

Thailand
G. Simon Radio Ltd.
30 Patpong Ave.
Suriwong
Bangkok, Thailand
Tel. 30991-3

Turkey
M. Suheyl Erkman
Necatibey Cad. 92/2
Karakoy/Istanbul
Turkey
Tel. 441546

The United Kingdom
Fluke International Corp.
Garnett Close
Watford, WD24TT, England
Tel. 33066

Uruguay
Coasin Uruguaya S.R.L.
Cerrito 617 4° Piso
Montevideo, Uruguay

Venezuela
Coasin C.A.
APDO Postal 50939
Sabana Grande No. 1
Caracas 105, Venezuela
Tel. 722311

West Germany
Fluke (Deutschland) GmbH
4-DUSSELDORF
Meineckestrasse 53
Tel. (0211) 450831
Telex: 8585576 Flk D

Fluke (Deutschland) GmbH
8 MUNCHEN 40
Imhofstrasse 3
Tel. (089) 369086
Telex: 052-16087

In Europe, contact FLUKE NEDERLAND, B.V., P.O. Box 5053, Industrieterrein Noord, Tilburg, The Netherlands

FLUKE REGIONAL SERVICE CENTER: THE NETHERLANDS
FLUKE (NEDERLAND) B.V.
P.O. BOX 5053
TILBURG, THE NETHERLANDS

FLUKE REGIONAL SERVICE CENTER, UNITED KINGDOM
FLUKE INTERNATIONAL CORP.
GARNETT CLOSE
WATFORD, WD24TT ENGLAND

AUTHORIZED SERVICE LABORATORIES INTERNATIONAL

EACH INTERNATIONAL REPRESENTATIVE IS EQUIPPED WITH AN AUTHORIZED SERVICE LABORATORY. PLEASE REFER TO THE INTERNATIONAL REPRESENTATIVE LISTING FOR YOUR SERVICE NEEDS.

Section 8
Schematic Diagrams

FIGURE NO.	NAME	DRAWING NO.	PAGE
8-1	Basic Instrument Schematic	2100A-1201	8-3
8-2	Single Type PCB Schematic	2100A-1210	8-13
8-3	Multi-Type PCB, °F Schematic	2100A-1205	8-15
8-4	Multi-Type PCB, °C Schematic	2100A-1222	8-17
8-5	Multi-Point PCB Schematic	2100A-1208	8-19
8-6	Data Output Unit Schematic	2100A-1207	8-21

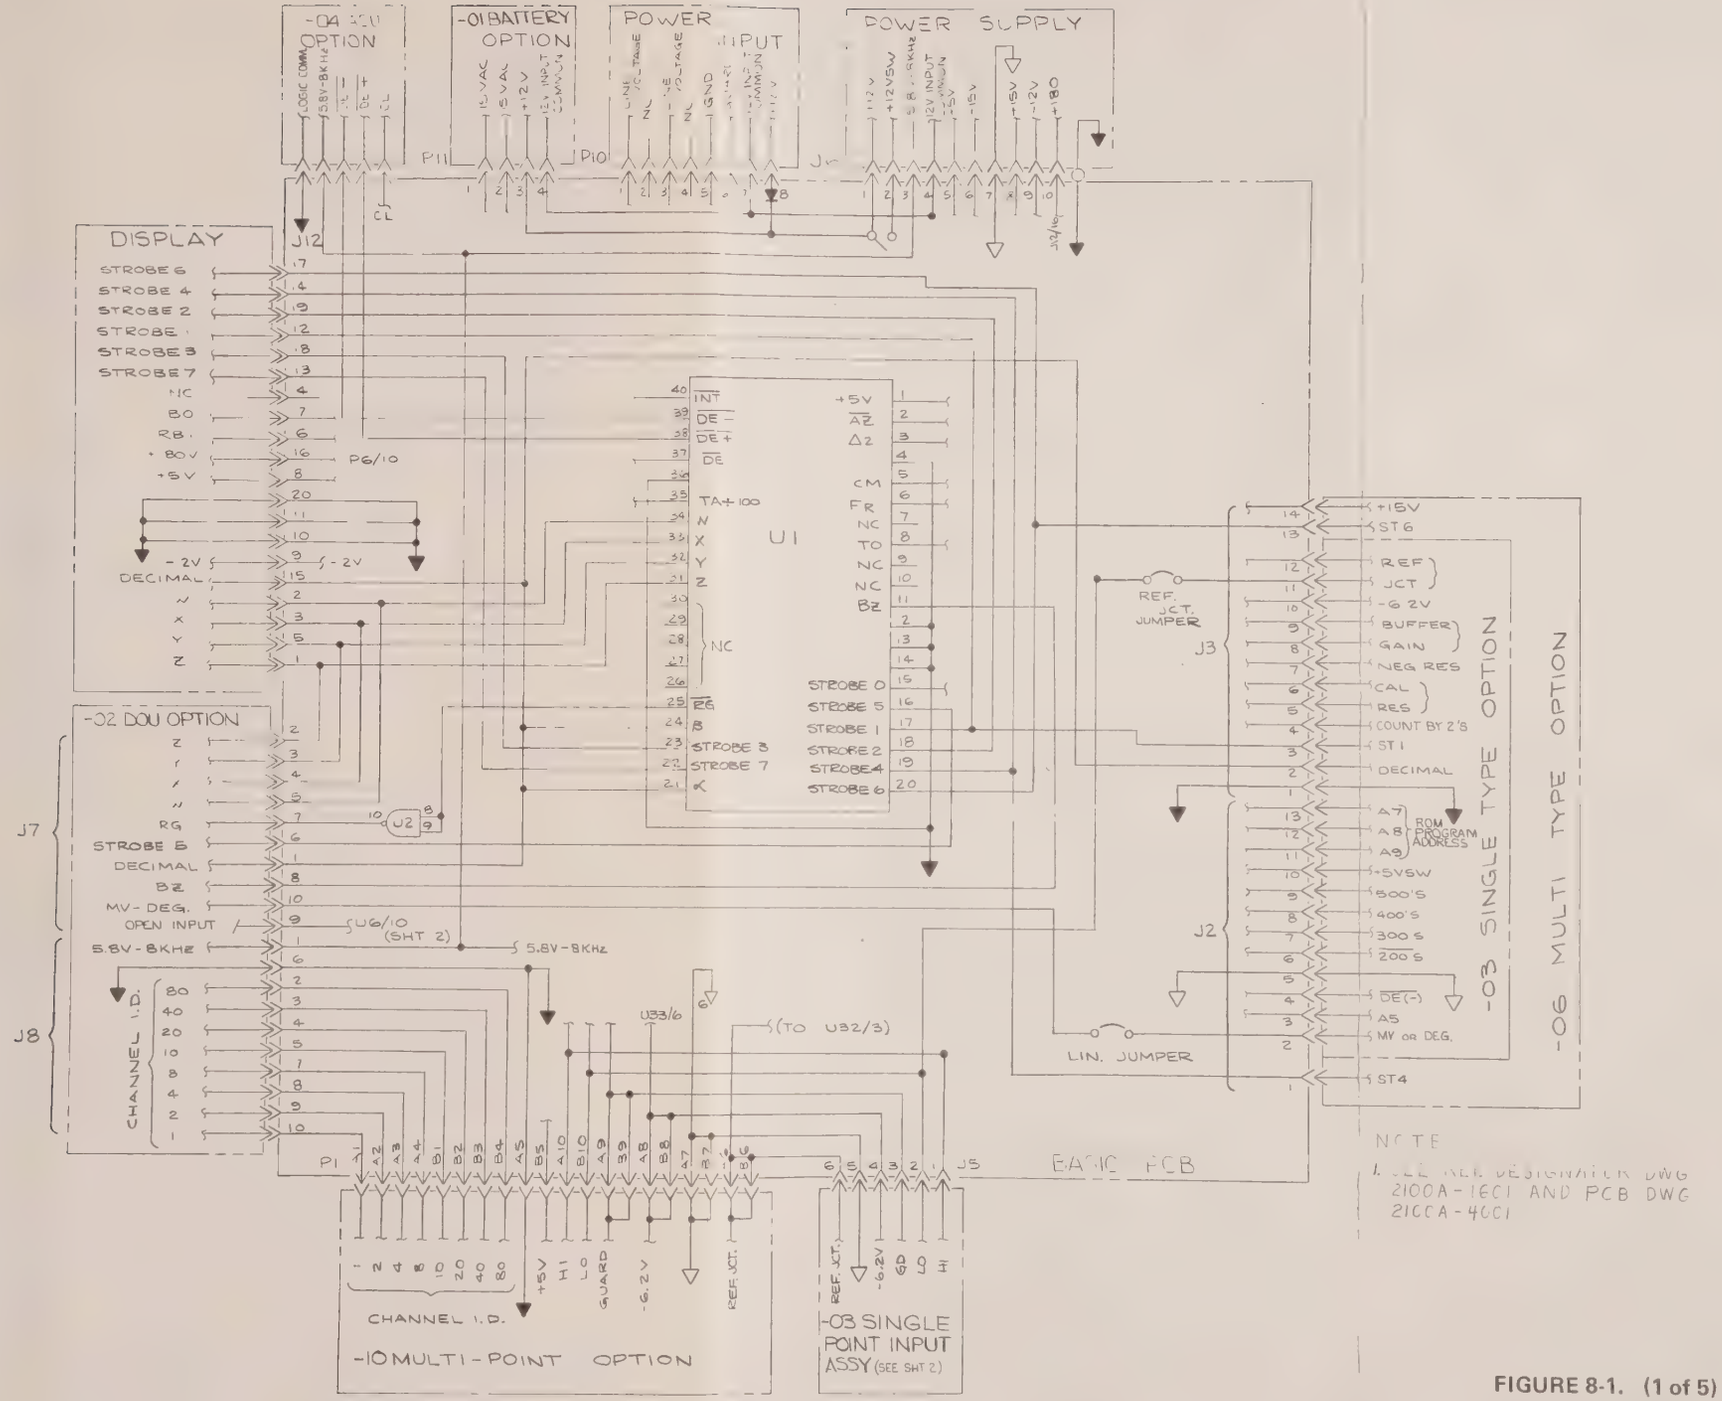

FIGURE 8-1. (1 of 5) BASIC INSTRUMENT SCHEMATIC

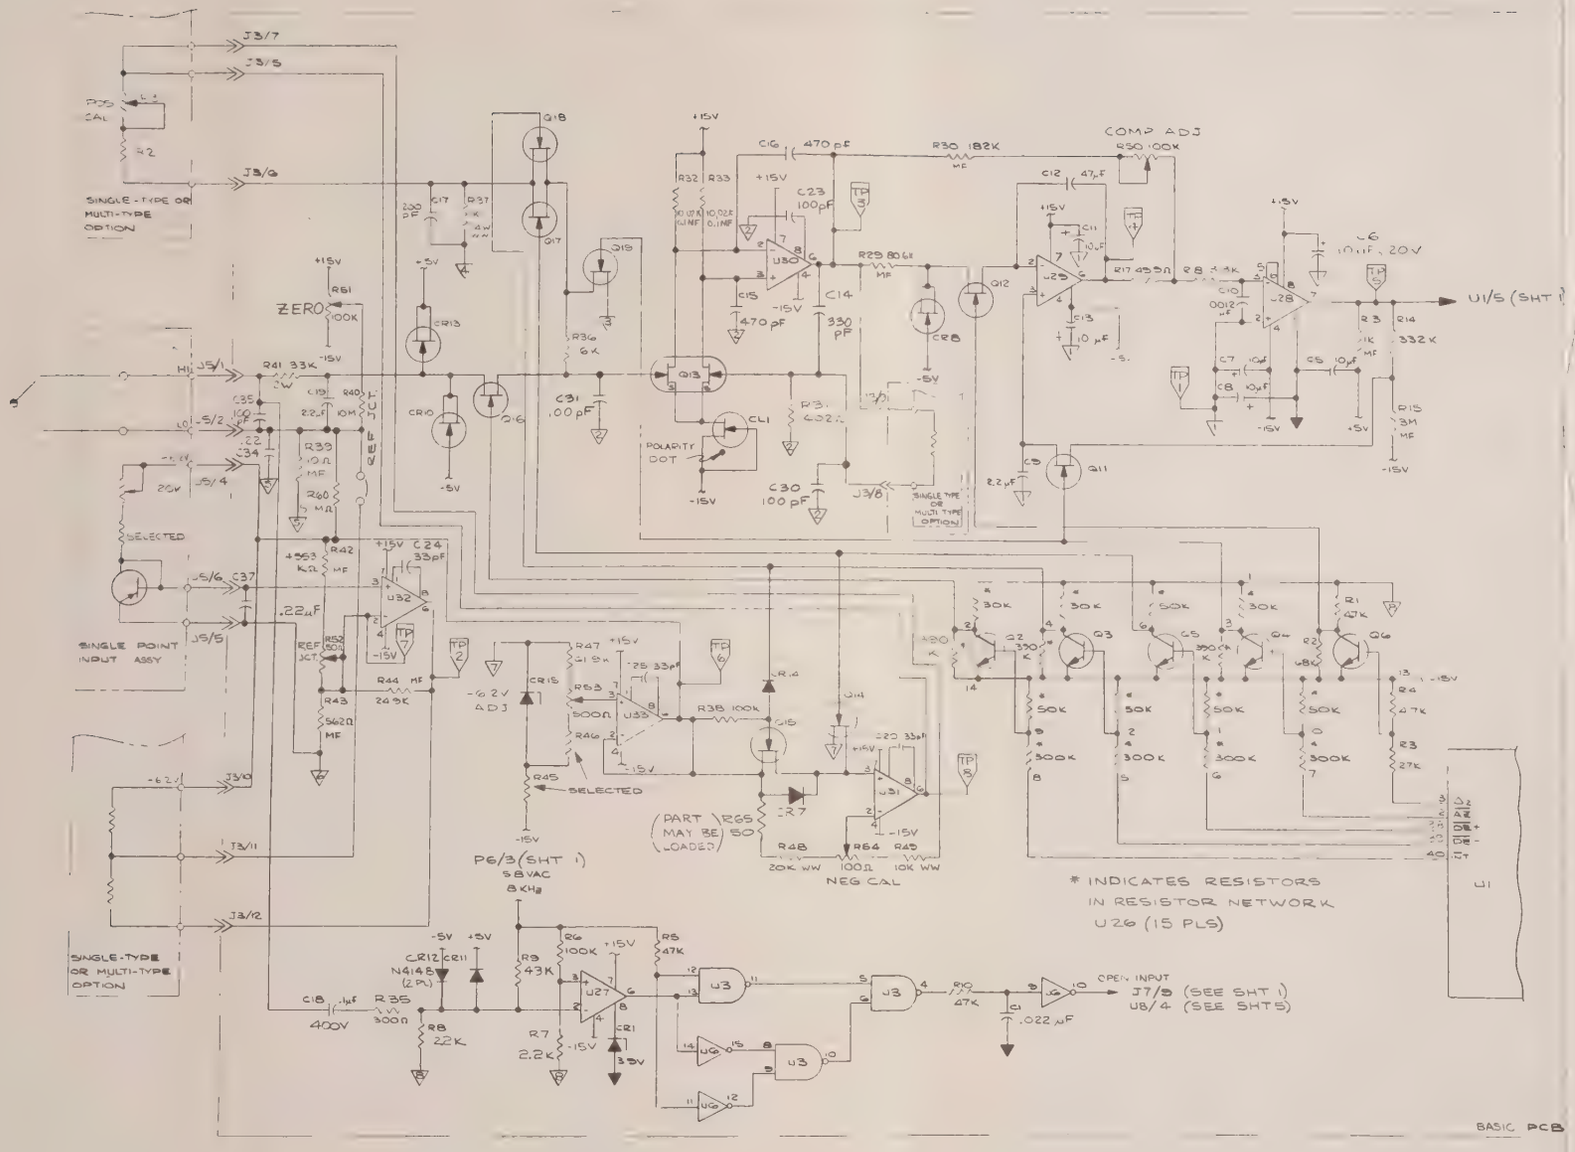

MAIN PCB

REF DES	+5V	+5VSW	▼	HP PN
U1	1		4,12,13,14,21,28,36	354085
U2,U3,U4	14		7	355188
U5,U10,U15		14	7	293043
U6,U25	16,1		8	355214
U7	14		7	340117
U9		14	7	292979
U11		14	7	292995
U12		14	7	292953
U13		14	7	292987
U14,U18		14	7	292961
U16	14		7	292979
U17	14		7	292953
U19		5	8,12	293099
U20		4,5	10	320739
U21		16	8	370692
U22		24	4	▷
U23		14	7	293001
U24		14	7	342709

▷ 370015 -°F
370023 -°C

FIGURE 8-1. (2 of 5) BASIC INSTRUMENT SCHEMATIC

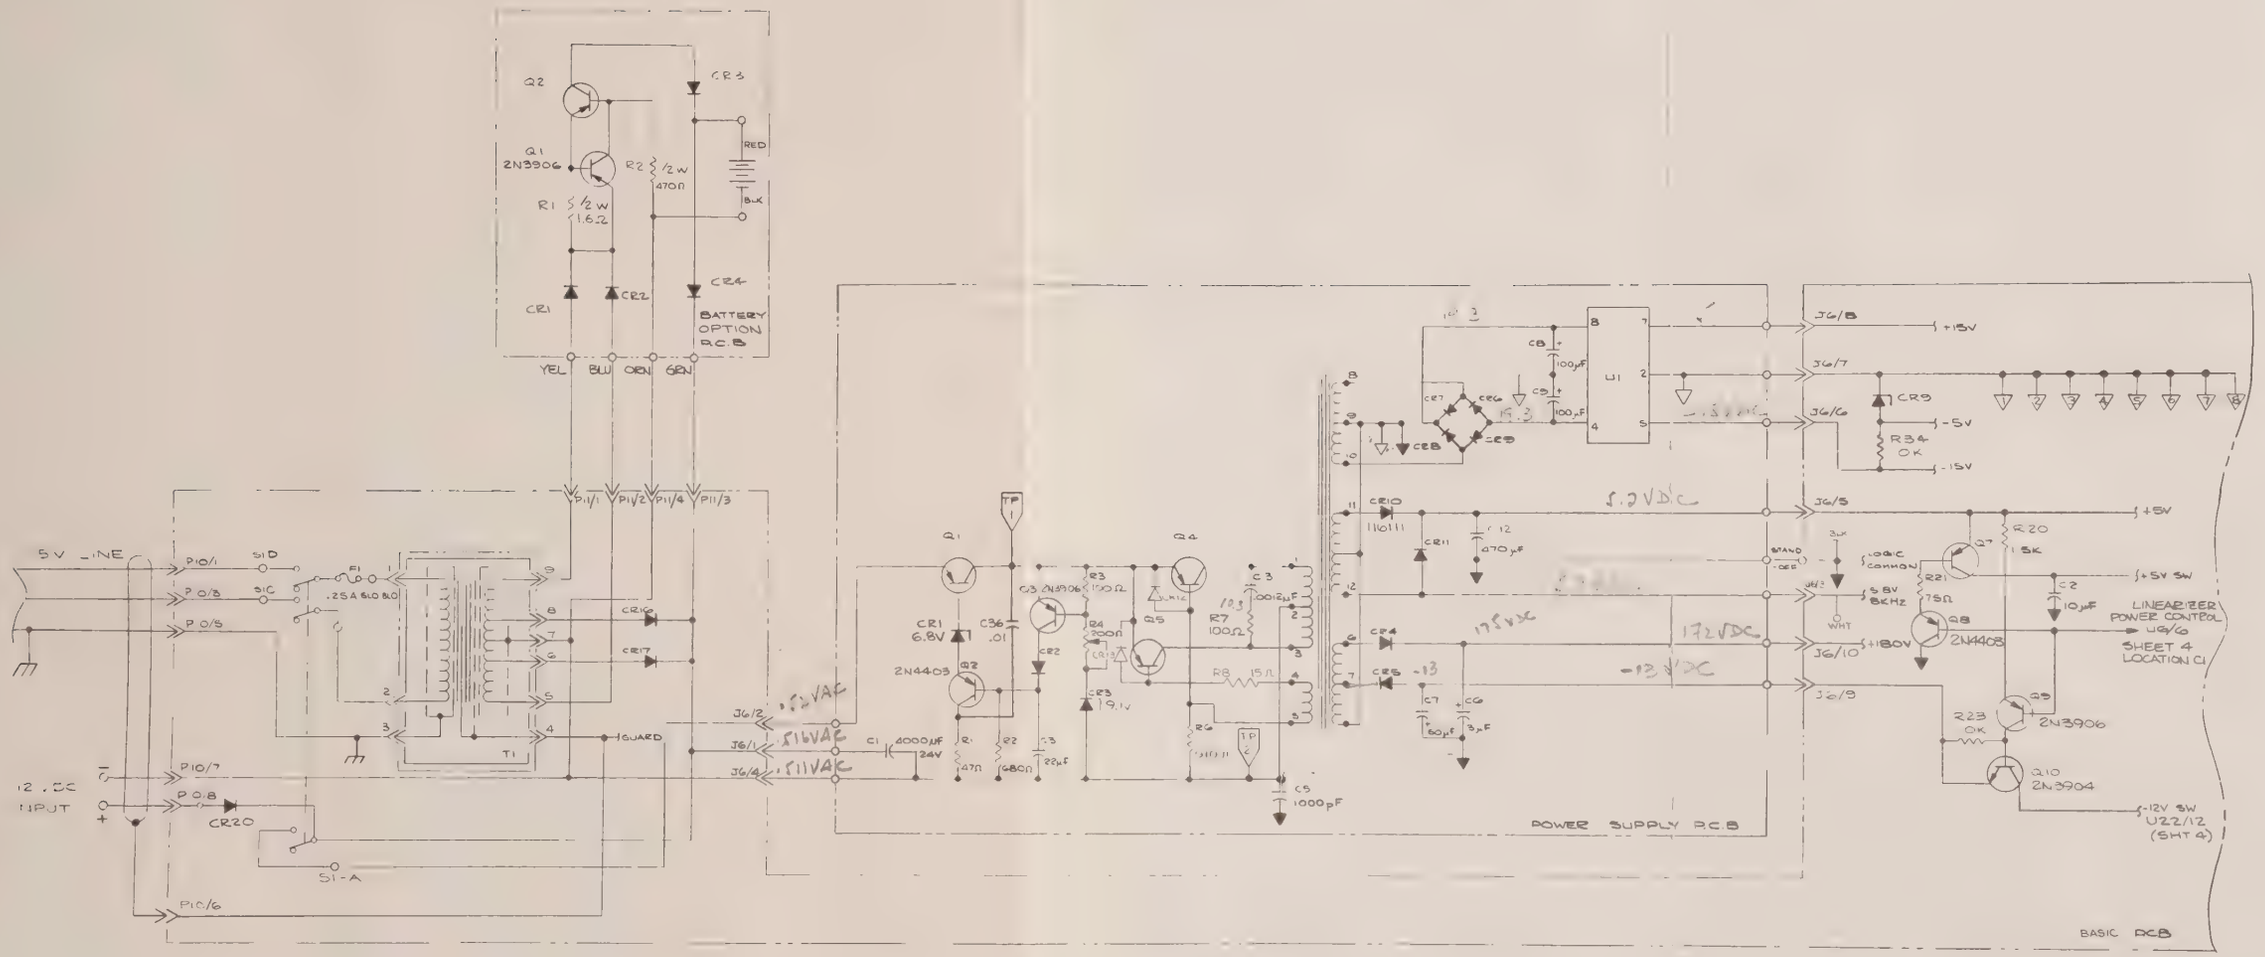

FIGURE 8-1. (3 of 5) BASIC INSTRUMENT SCHEMATIC

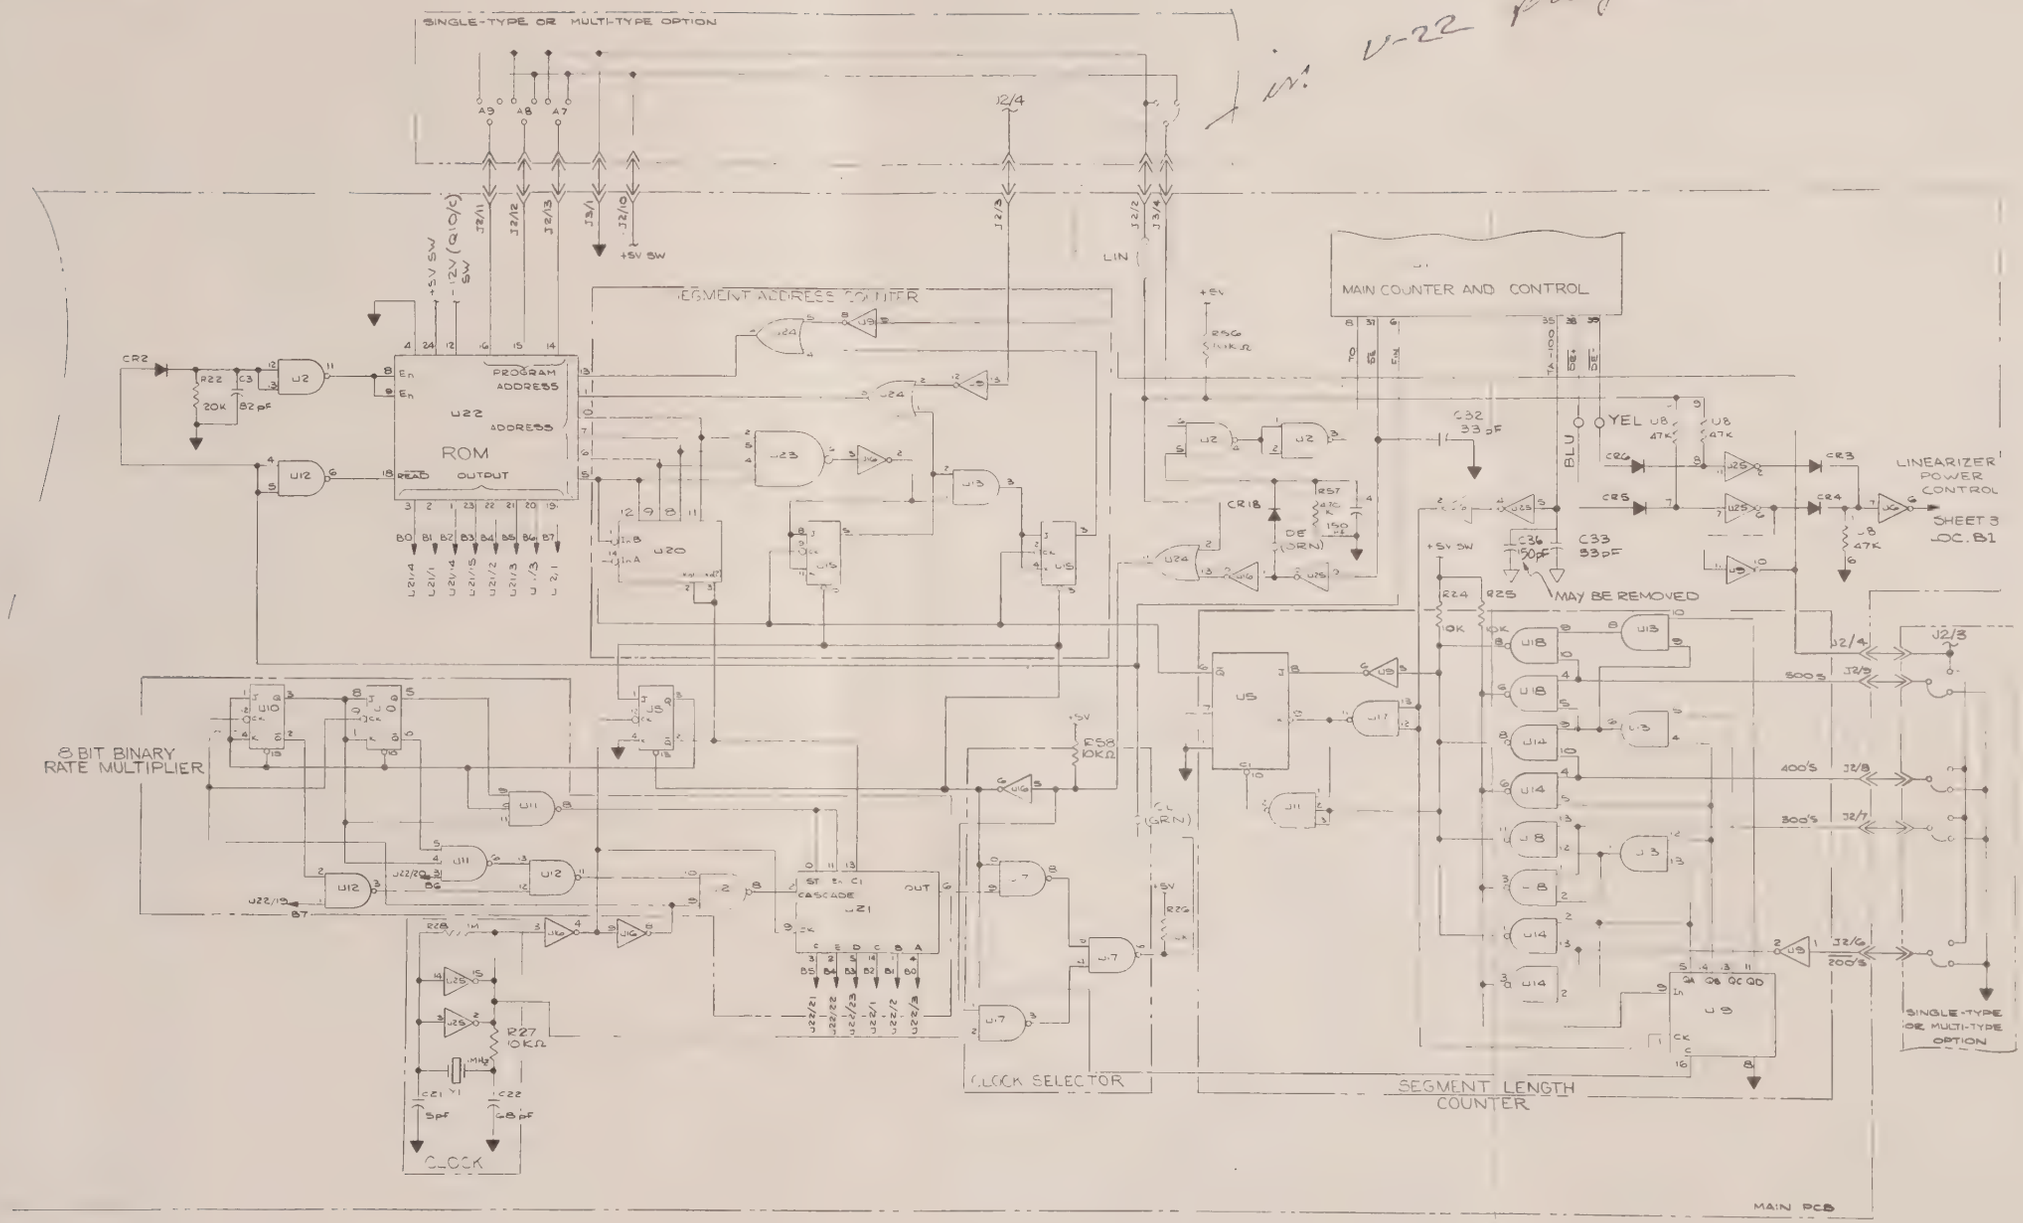

FIGURE 8-1. (4 of 5) BASIC INSTRUMENT SCHEMATIC

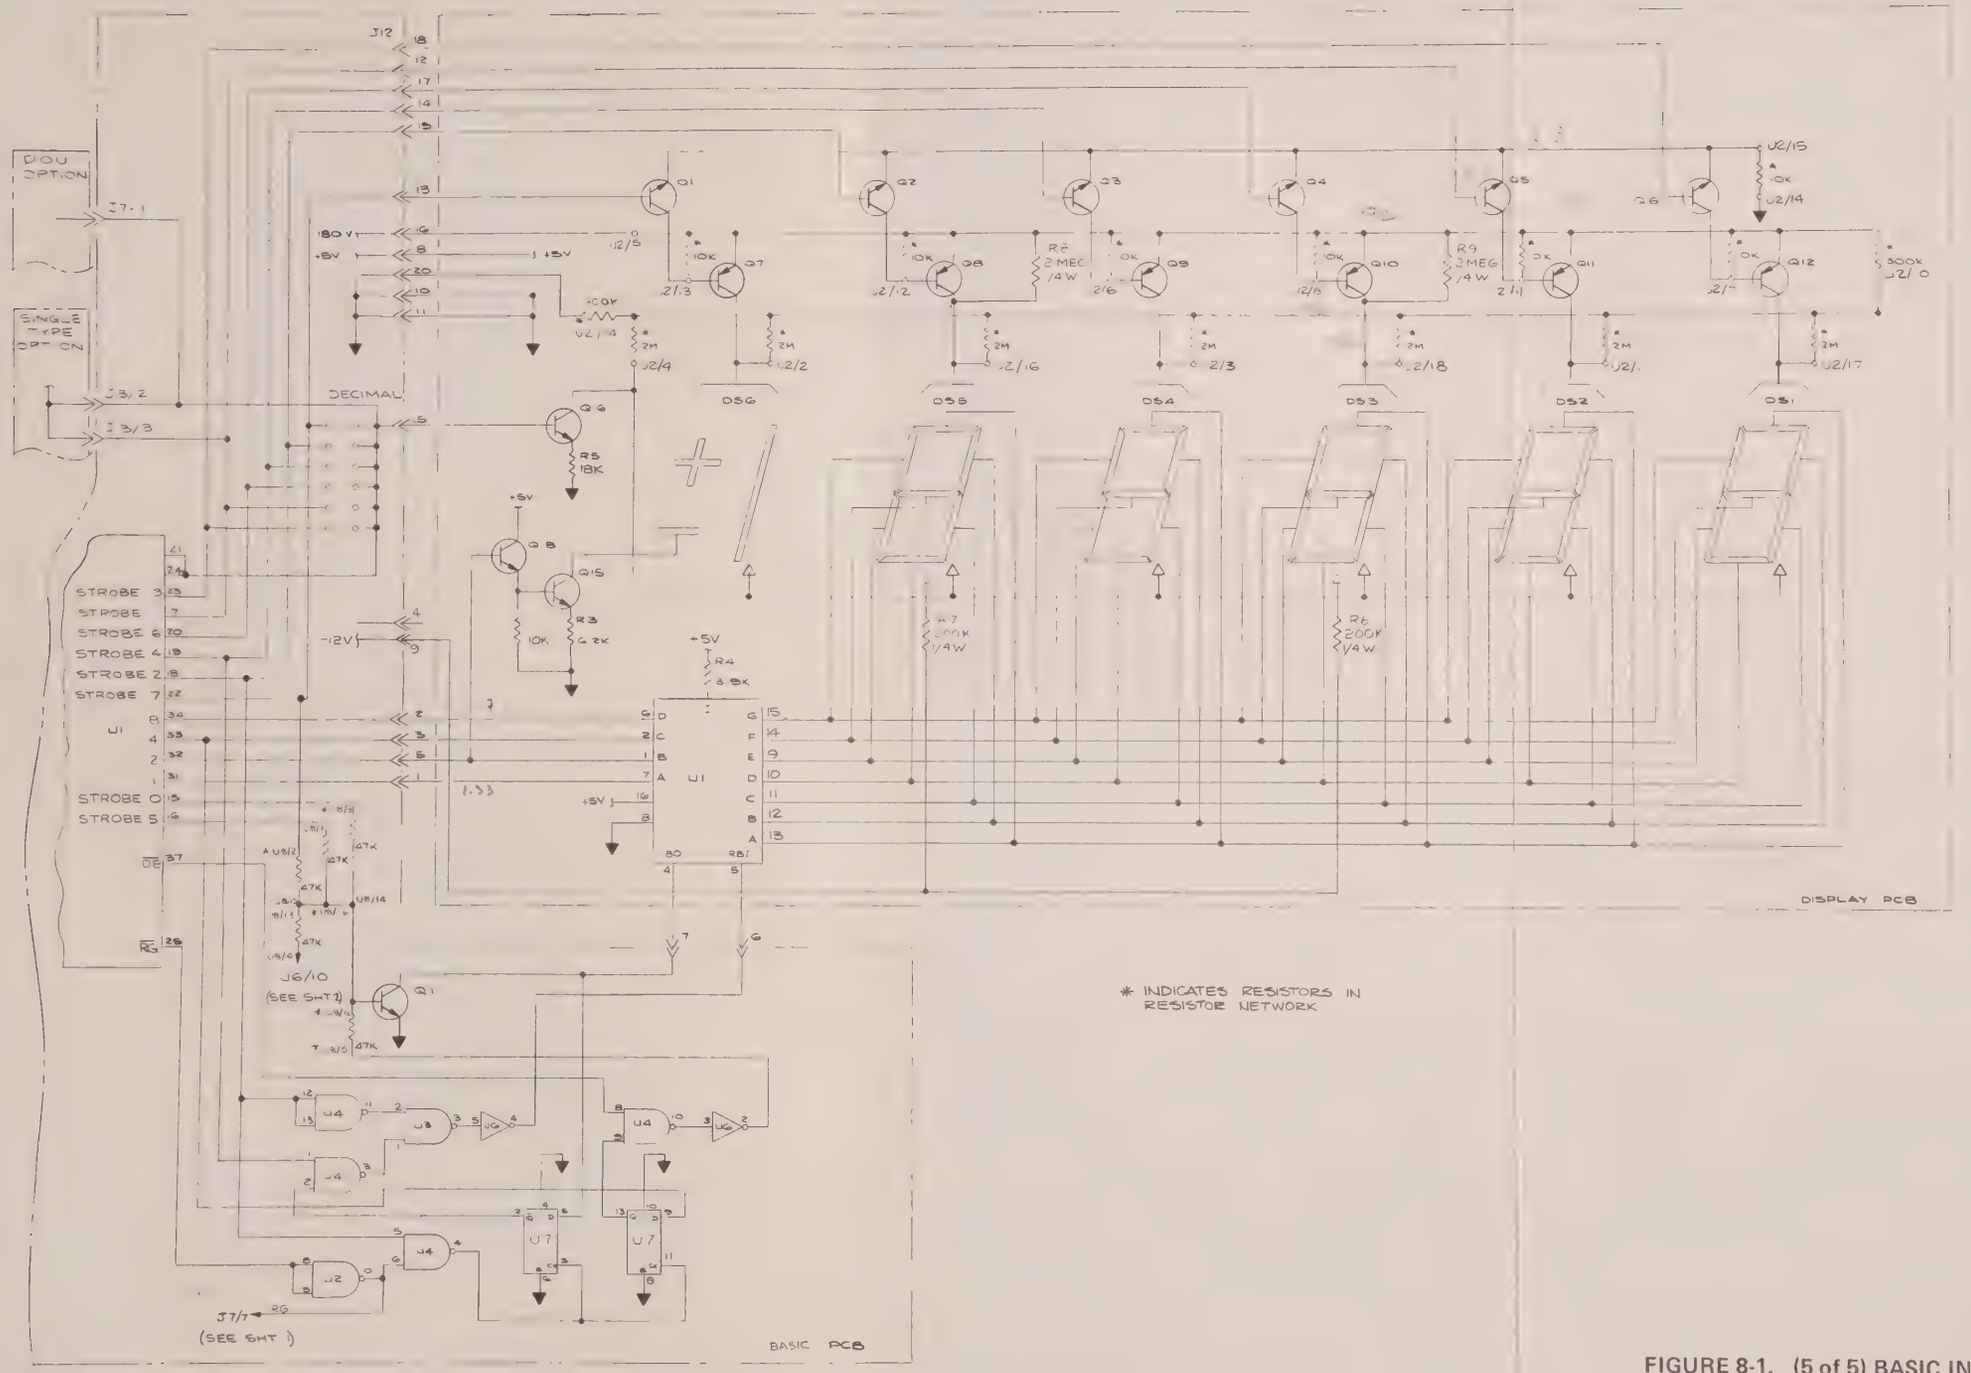

FIGURE 8-1. (5 of 5) BASIC INSTRUMENT SCHEMATIC

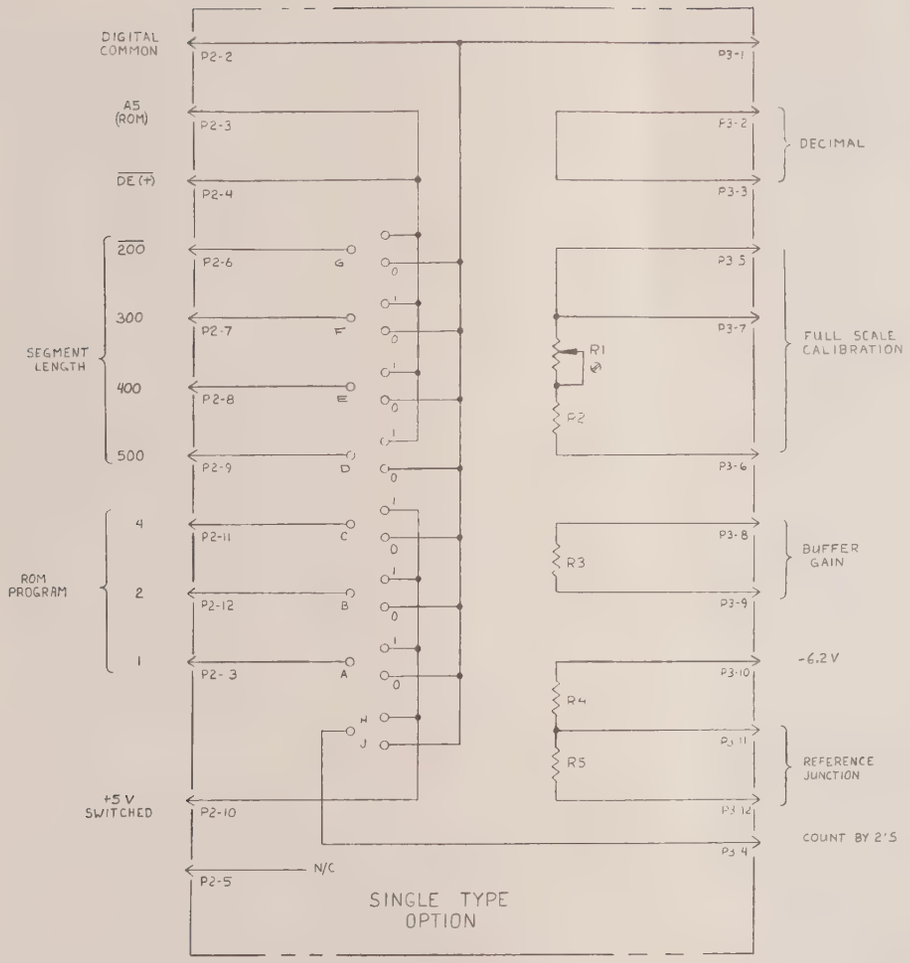

DWG. NO	THERMO-COUPLE TYPE	JUMPER POSITION								RESISTOR VALUE				
		H	G	C	D	E	F	G	H	J	R1	R2	R3	R4	R5
[illegible]	F		[illegible]								[illegible]	22.1K	14.7K	121K	23.445K
1216	K°F		0	0	1	0	0	1		X	200Ω	32.38K	21K	149.0K	29.931K
1210	T°F	0	1	0	0	0	0	0		X	200Ω	32.38K	21K	137.04K	29.784K
1213	E°F	1	1	0	0	1	0	1		X	200Ω	19.41K	12.4K	95.52K	19.901K
214	R°F	0	0	1	1	0	0	1	X		1K	110.09K	71.5K	788.6K	204.5K
1215	S°F	1	0	1	1	0	0	1	X		1K	110.09K	71.5K	799.5K	202.6K
1217	J°C	0	0	0	0	0	0	0		X	100Ω	11.97K	8.06K	44.53K	23.445K
1218	K°C	1	0	0	0	1	0	1		X	100Ω	17.55K	11.5K	55.947K	29.931K
[illegible]	T°C	0	1	0	0	0	0	0		X	100Ω	8.7K	11.5K	55.08K	29.784K
1219	E°C	1	1	0	0	0	0	0		X	100Ω	11.35K	7.68K	37.01K	19.901K
[illegible]	R°C	0	0	1	0	0	1	1		X	1K	110.09K	71.5K	368.9K	204.5K
1221	S°C	1	0	1	0	0	1	1		X	1K	110.09K	71.5K	366.7K	202.6K

NOTES:

1. LETTERS "A" THRU "G" IDENTIFY DUAL POSITION JUMPERS. NUMBERS "0" AND "1" IDENTIFY JUMPER POSITIONS.
2. LETTERS "H" AND "J" IDENTIFY JUMPER POSITIONS.

FIGURE 8-2. SINGLE TYPE PCB SCHEMATIC

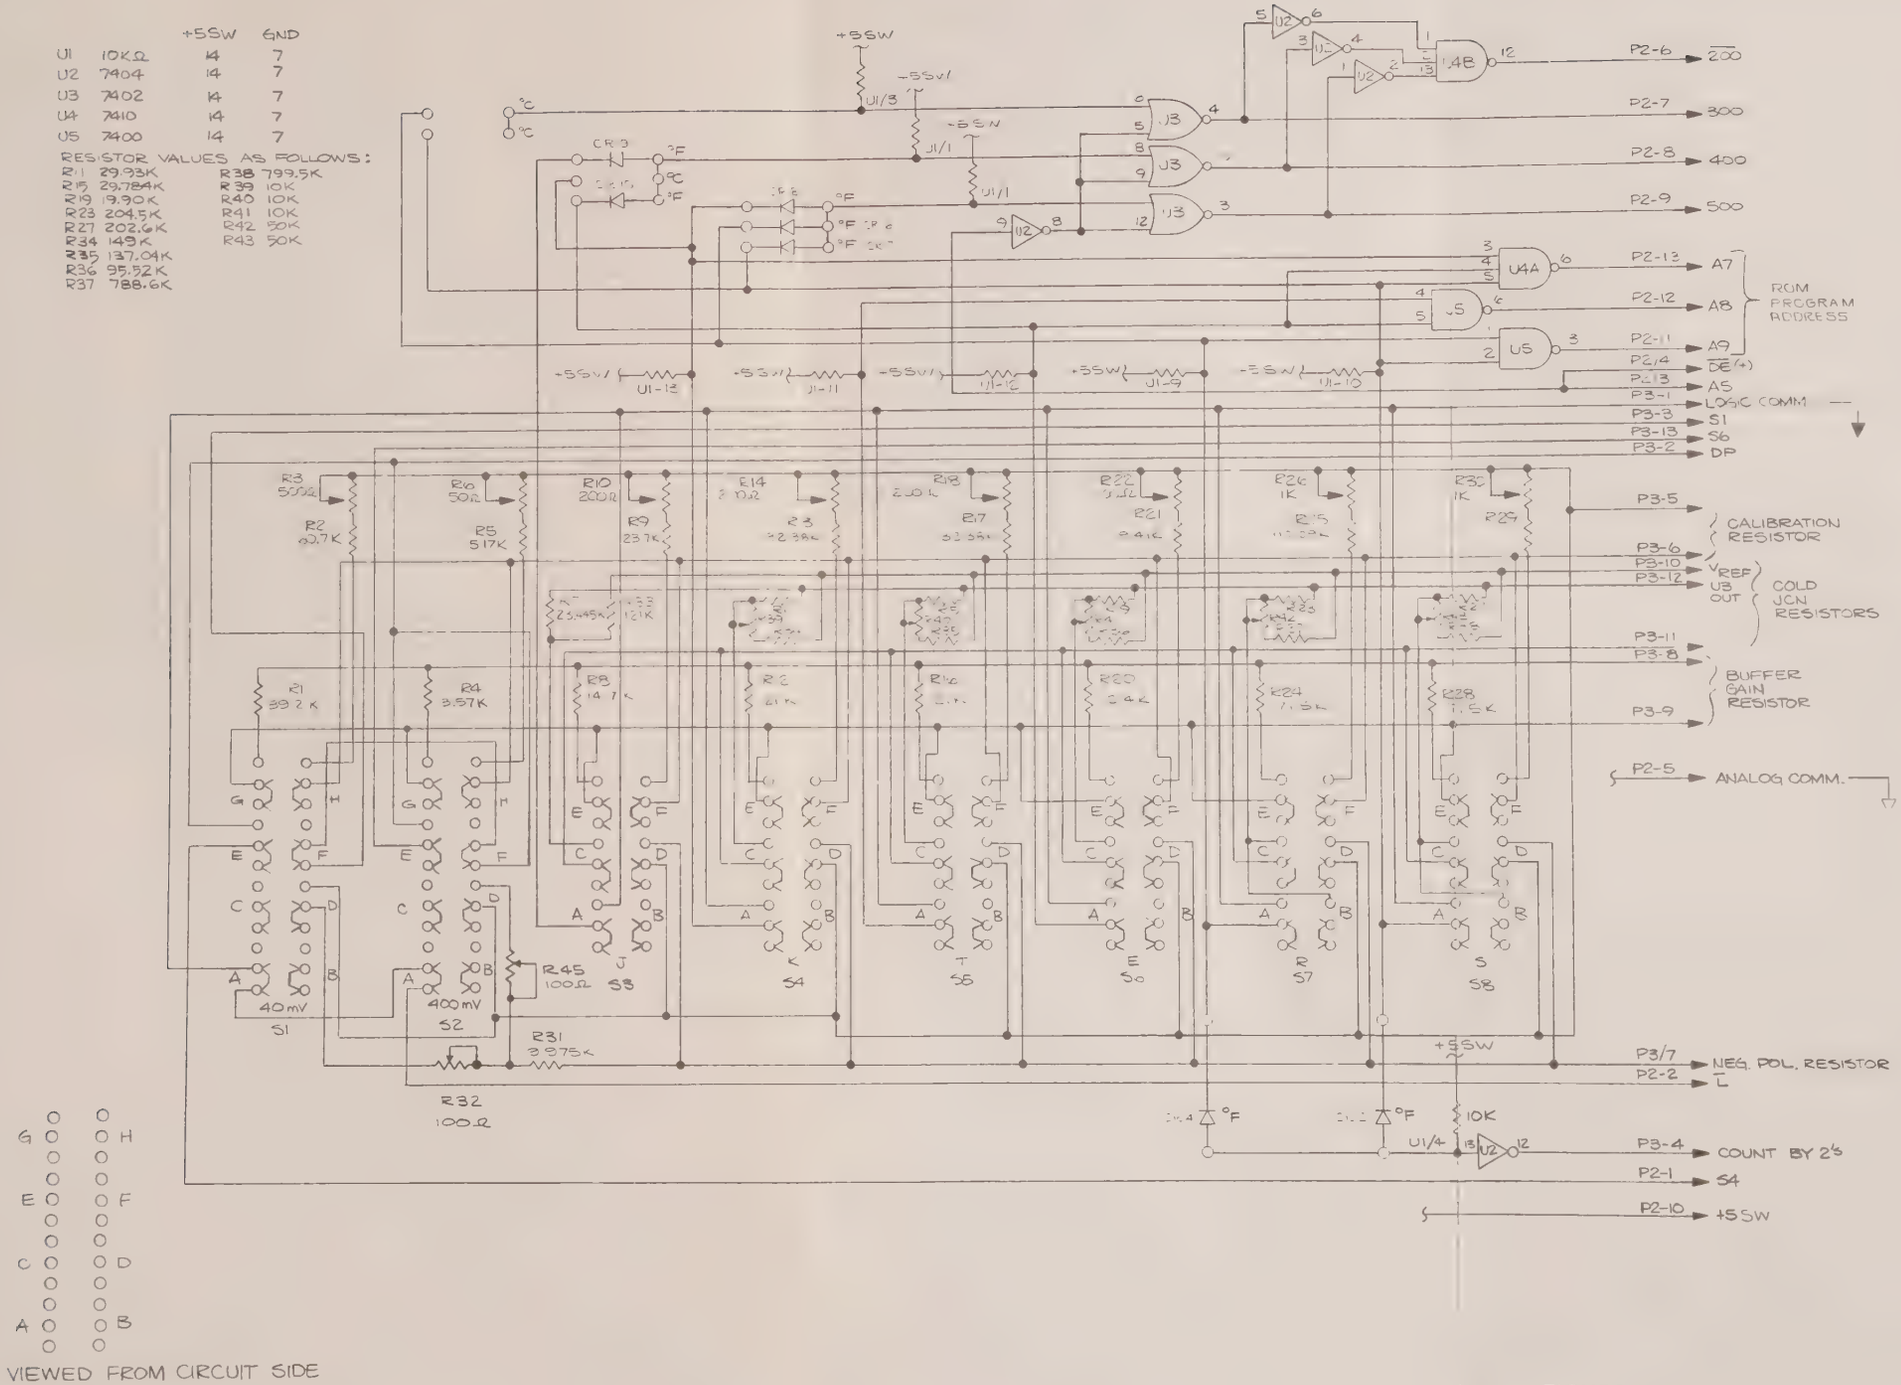

FIGURE 8-3. MULTI-TYPE PCB, °F SCHEMATIC

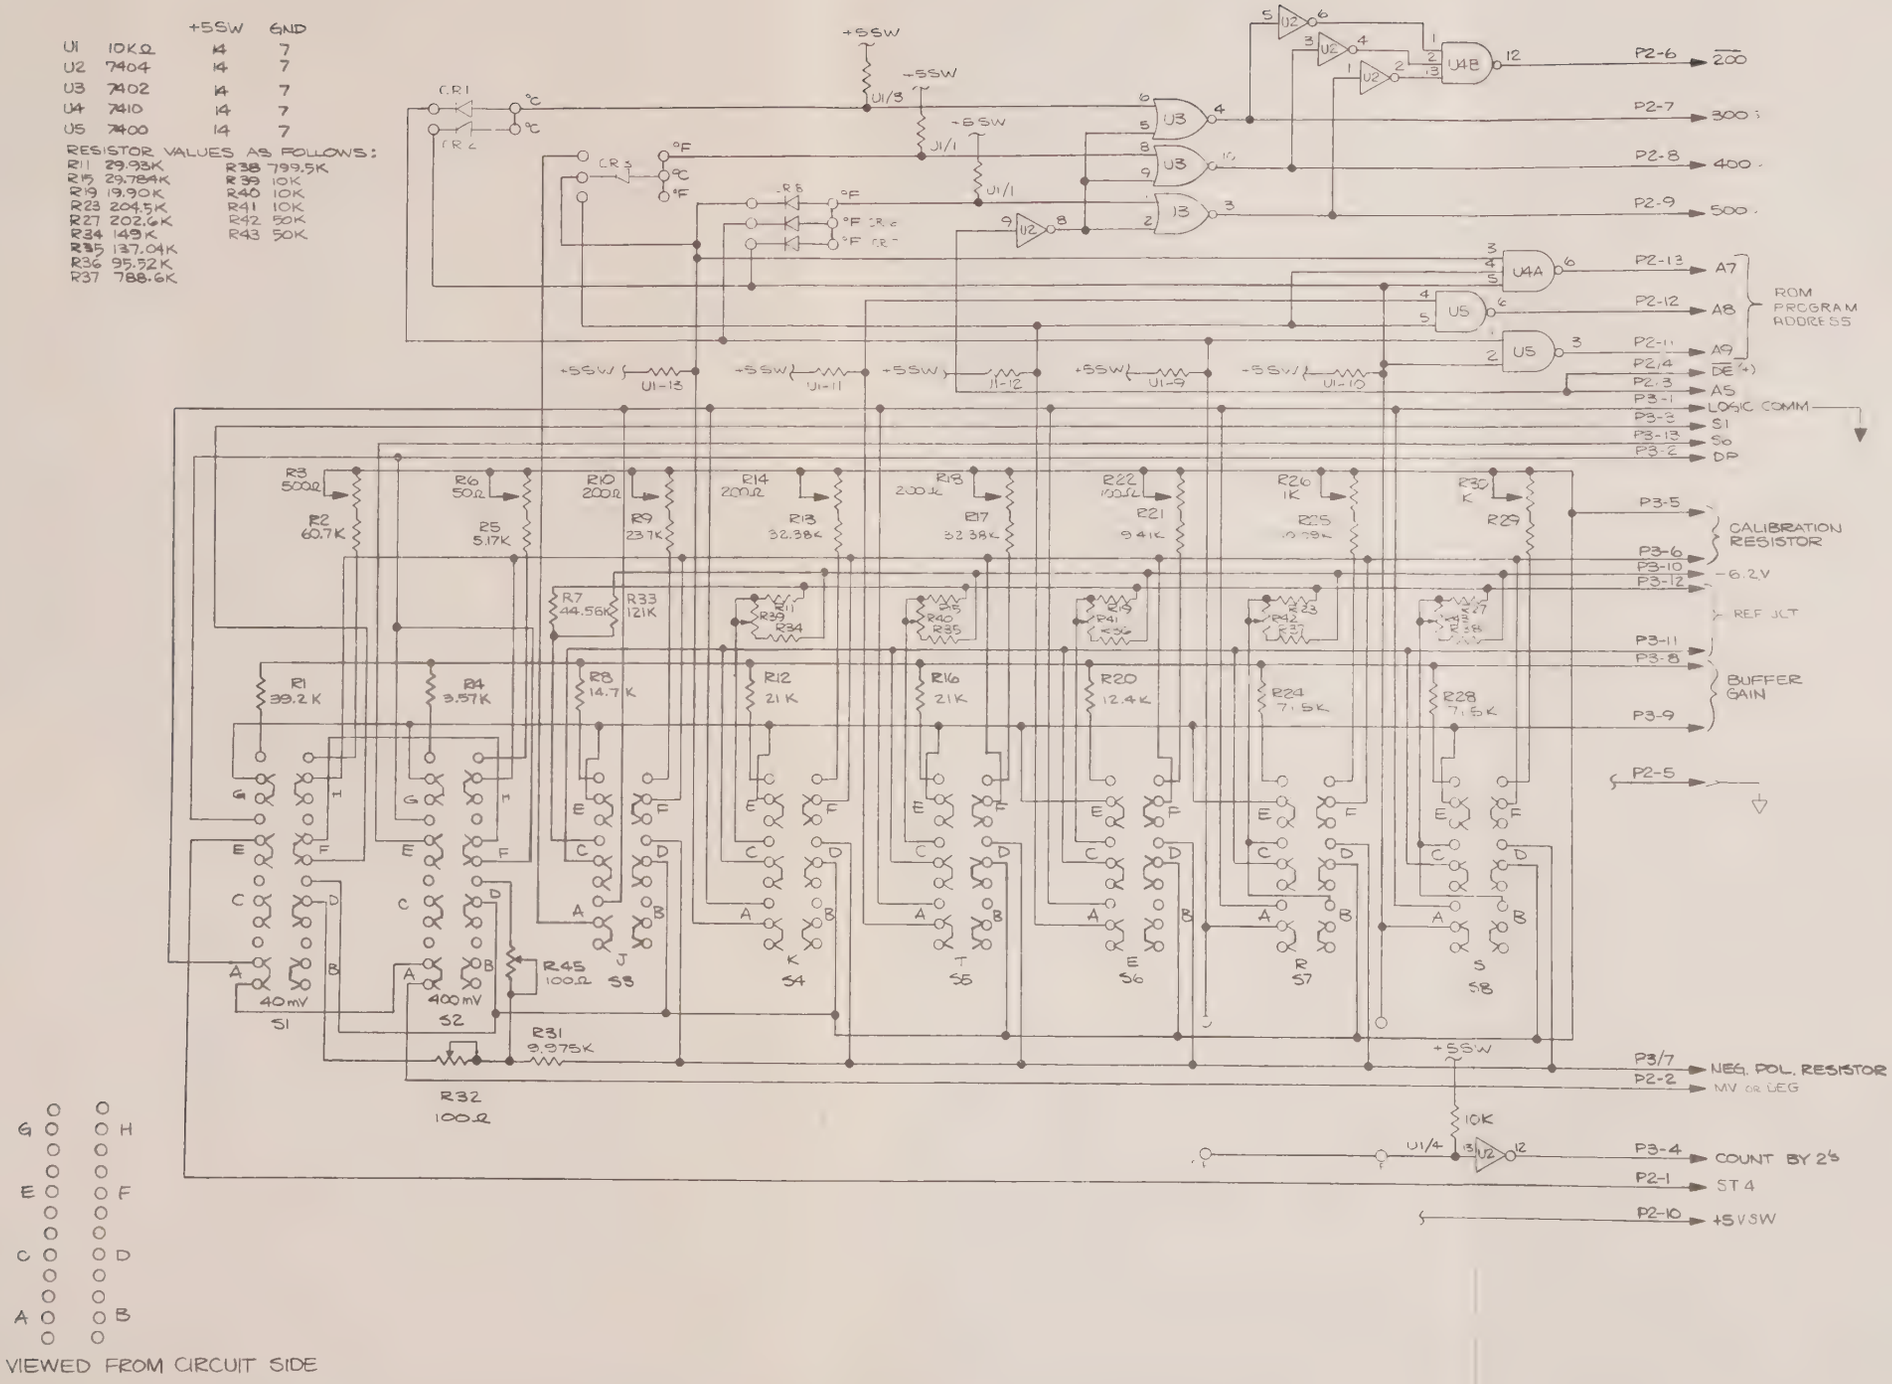

FIGURE 8-4. MULTI-TYPE PCB, °C SCHEMATIC

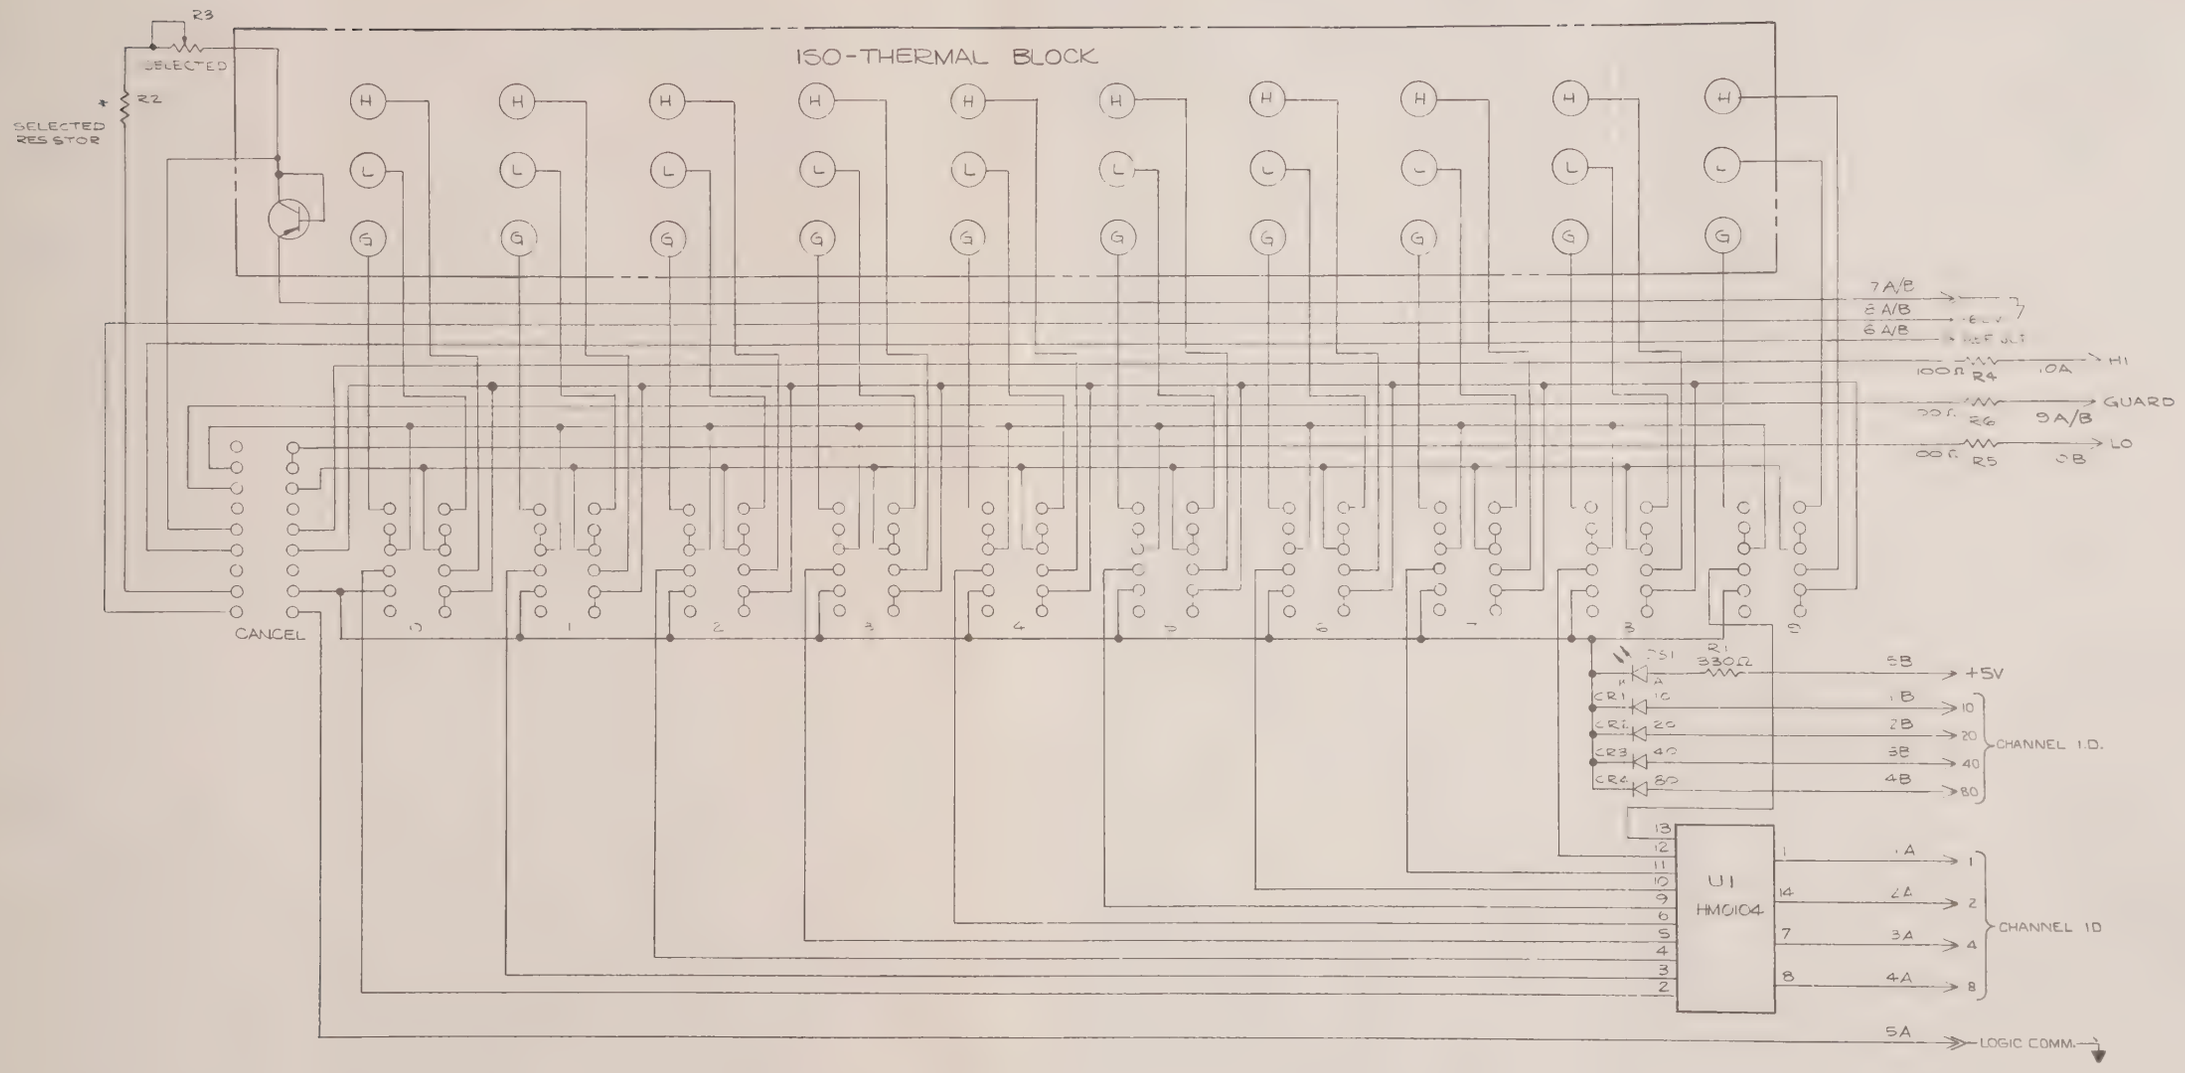

FIGURE 8-5. MULTI-POINT PCB SCHEMATIC

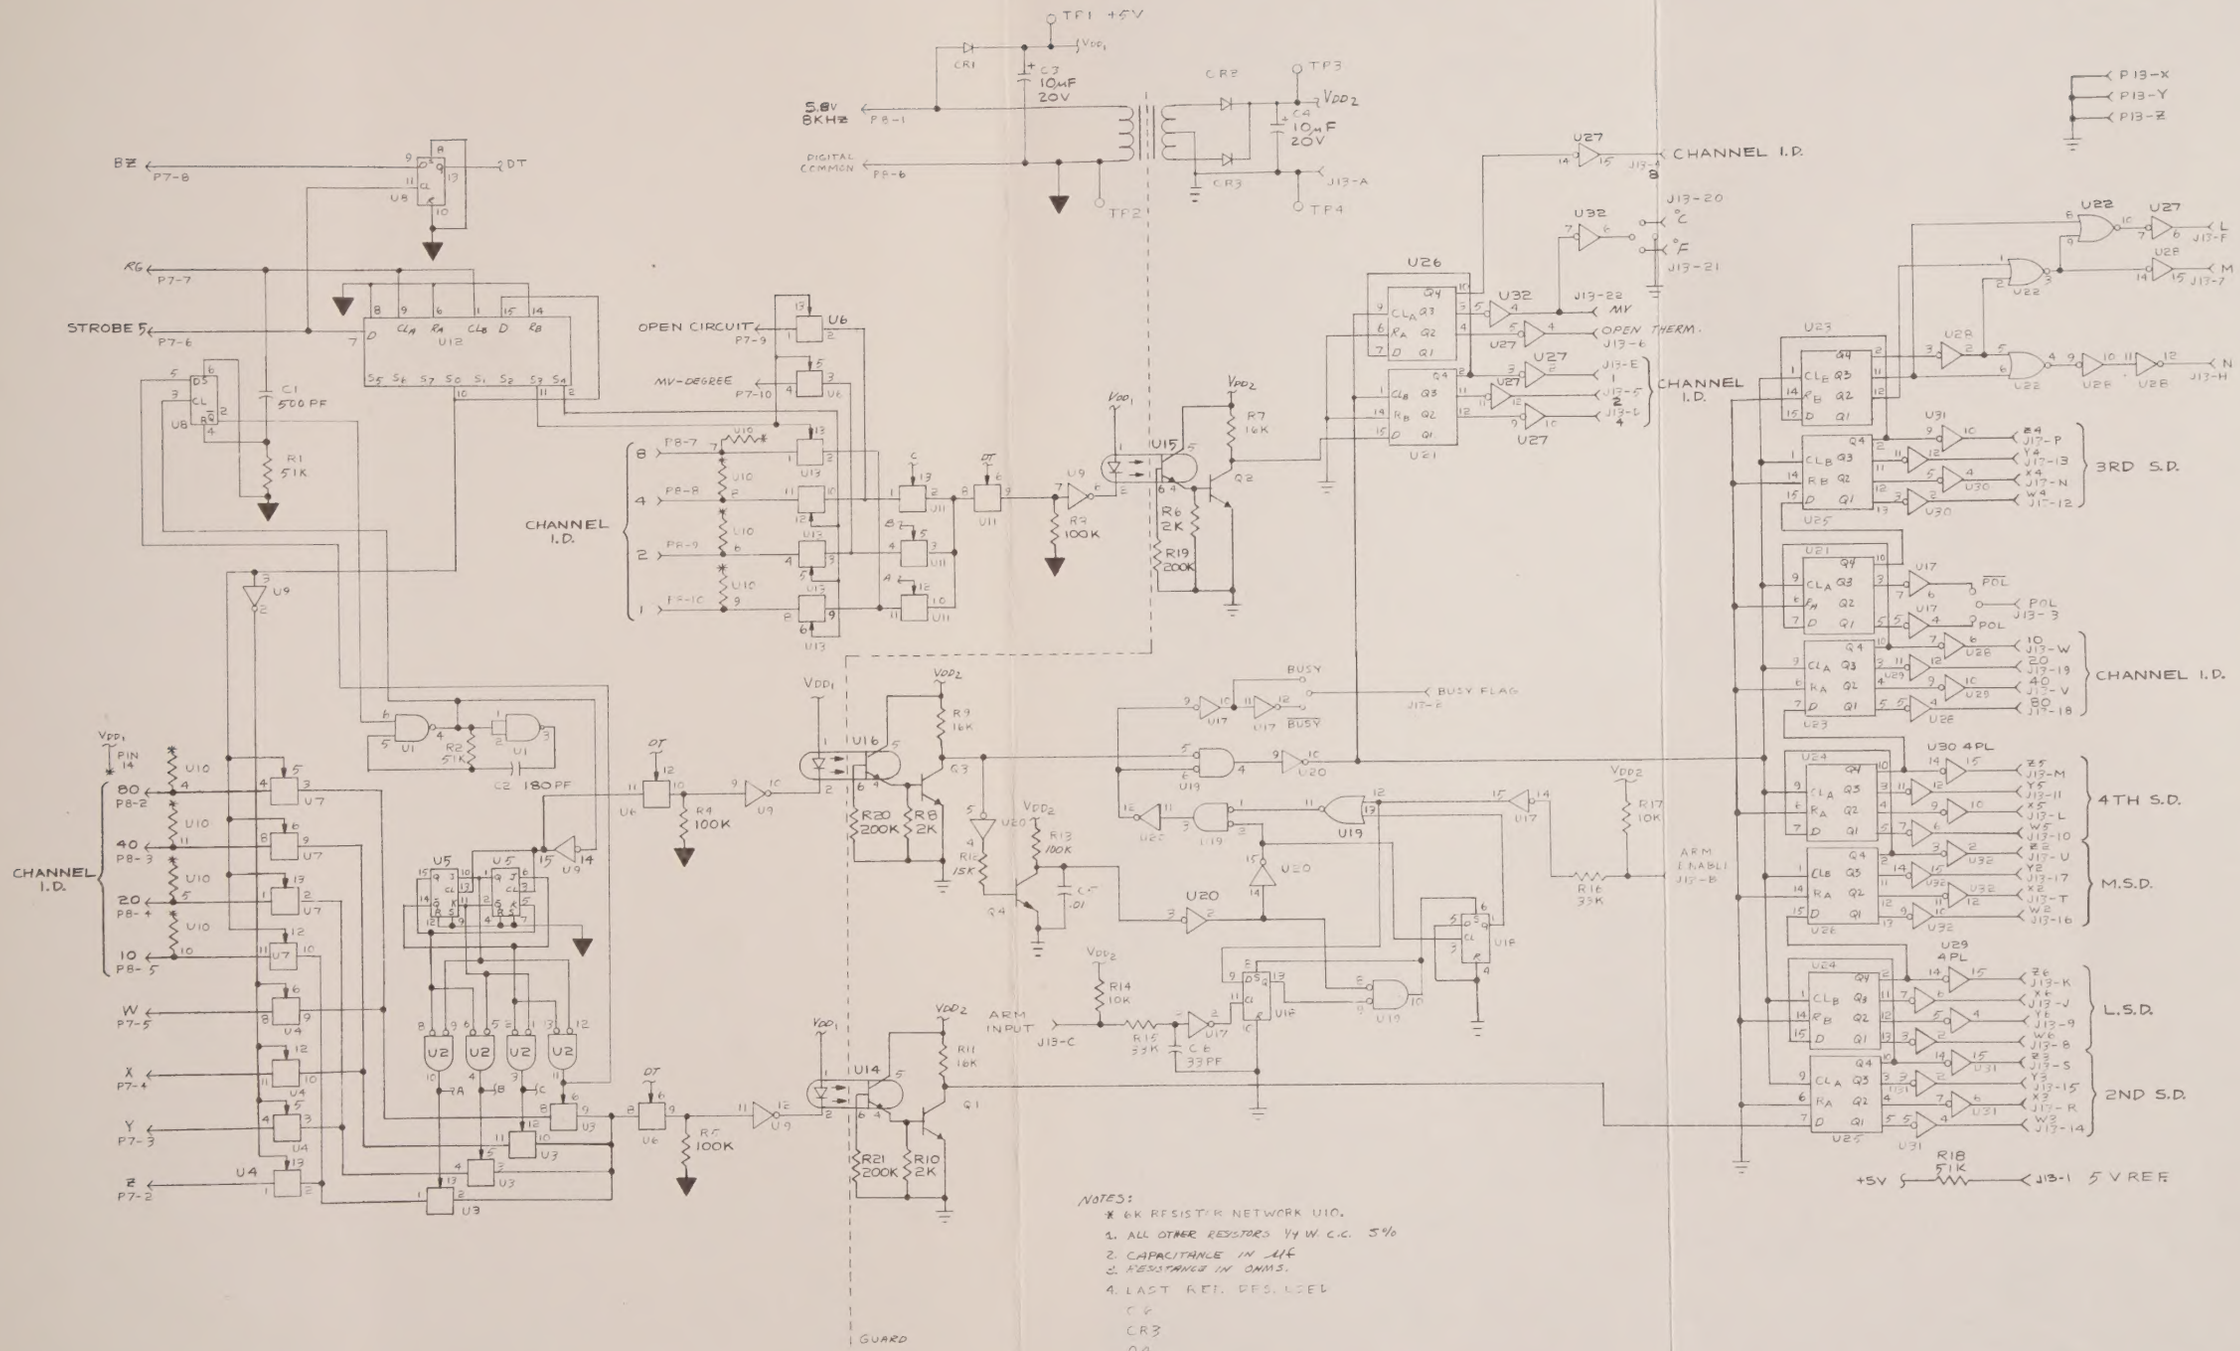

NOTES:

* 6K RESISTOR NETWORK U10.

1. ALL OTHER RESISTORS ¼ W. C.C. 5%
2. CAPACITANCE IN μF
3. RESISTANCE IN OHMS.
4. LAST REF. DES. USED
   C6
   CR3
   Q4
   R17
   U3

FIGURE 8-6. DATA OUTPUT UNIT SCHEMATIC

www.manualsplus.com
1029265